


ASSEMBLY INSTRUCTIONS  
INSTRUCTIONS D'ASSEMBLAGE



81030.Z.07

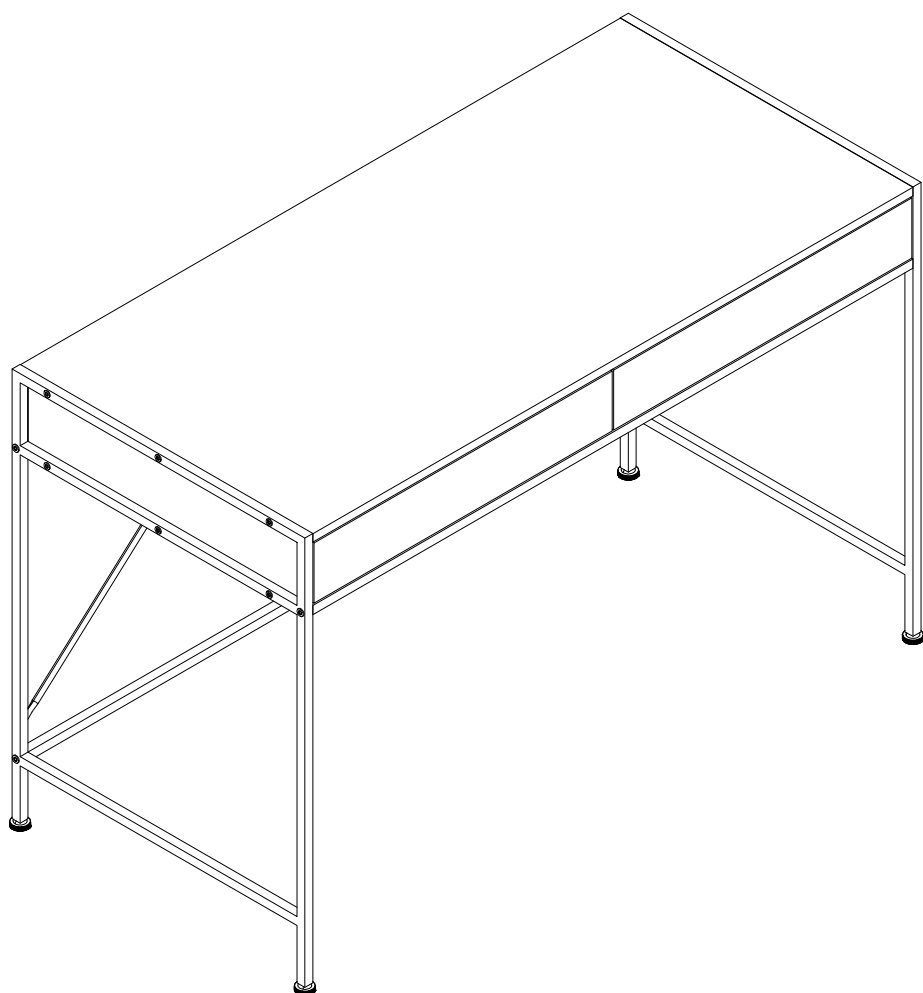

COMPUTER DESK 49L BROWN RECLAIMED WOOD 2 DRAWERS BLACK METAL

BUREAU 49L BOIS BRUN RÉCUPÉRÉ 2 TIRROIRS MÉTAL NOIR

SAFDIE & CO.  
[www.safdieco.com](http://www.safdieco.com)

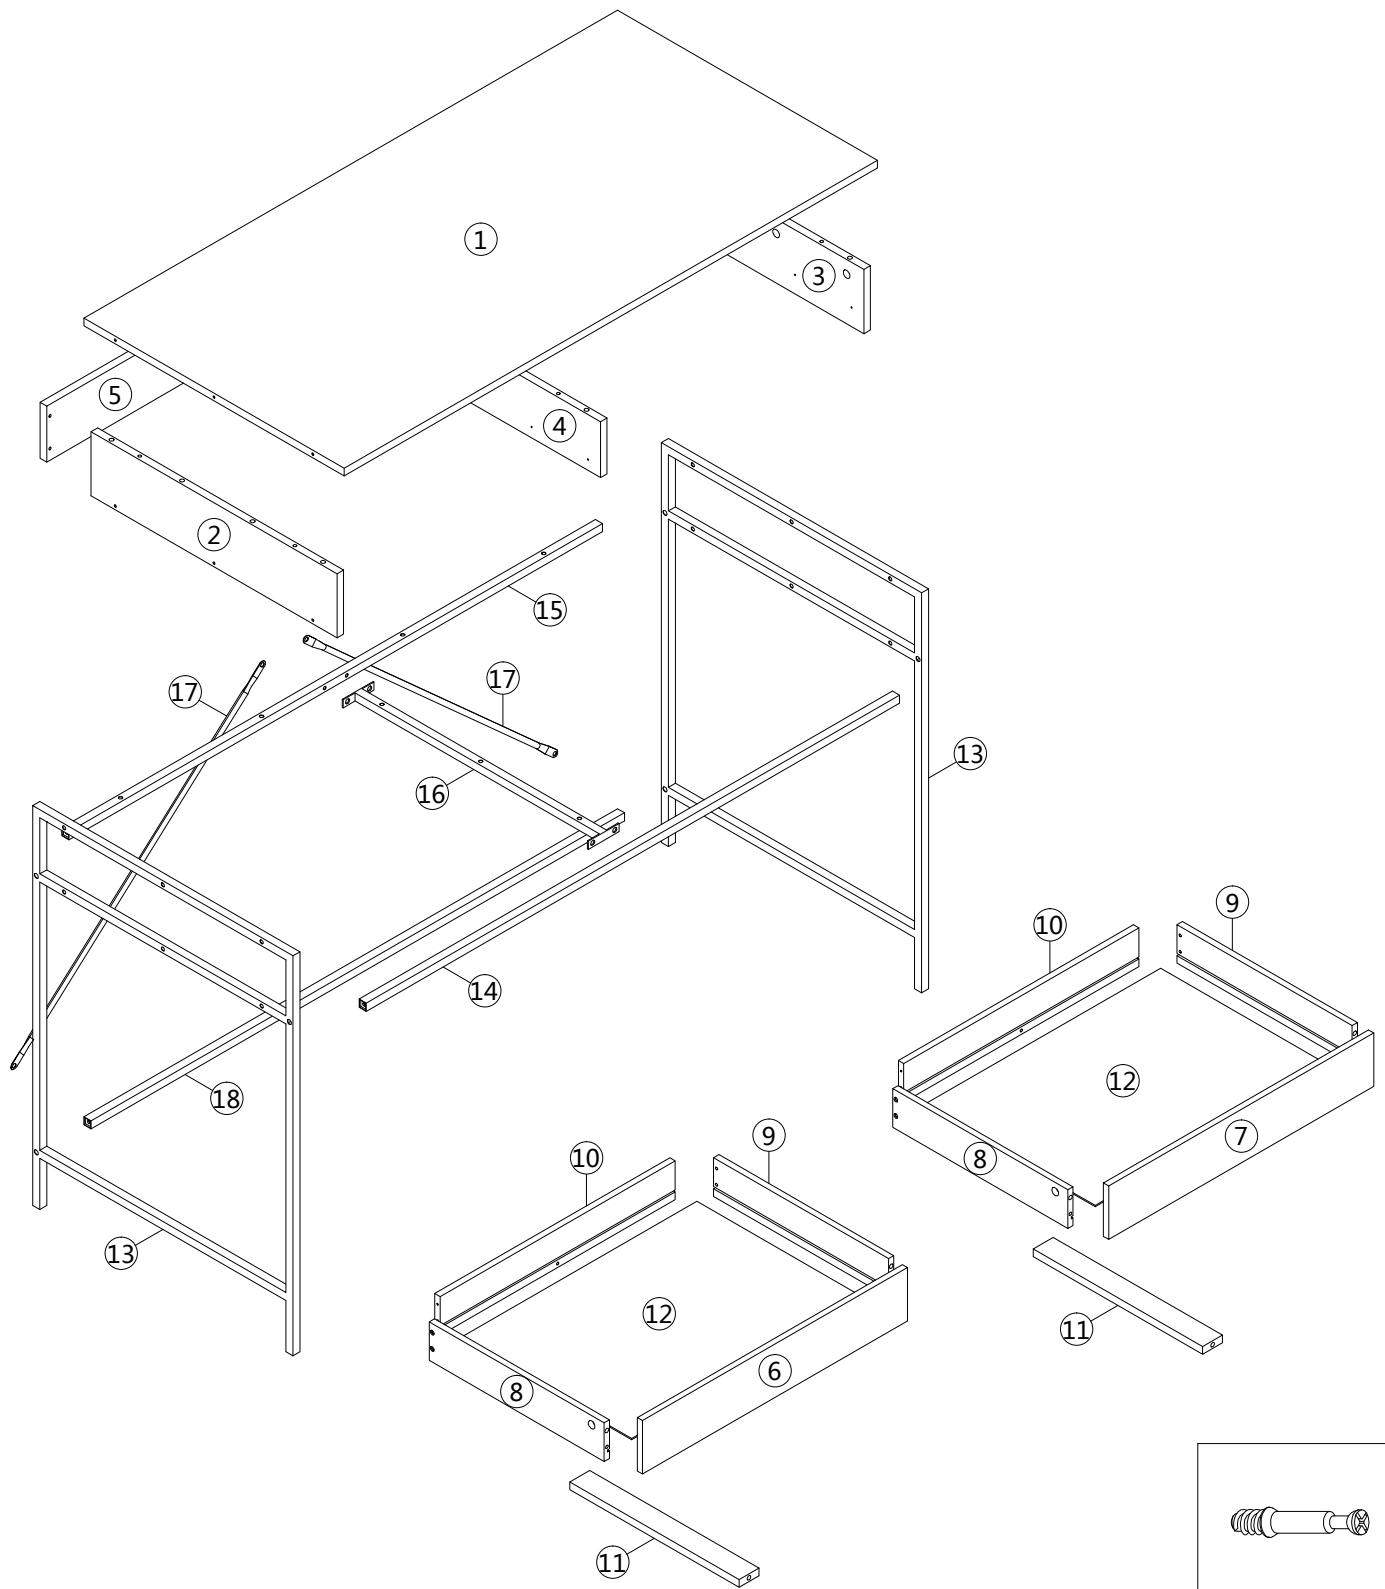

A 20PCS



ø15x9mm

B 20PCS



4x40mm

C 16PCS




6x30mm

D 12PCS




3x12mm


E 28PCS



F 2PCS




G 2PCS




5x30mm

H 6PCS




5x40mm


I 13PCS



J 2PCS




K 2PCS



6x35mm

L 6PCS




M 1PC






6x12mm

N 8PCS




O 4PCS


step 1

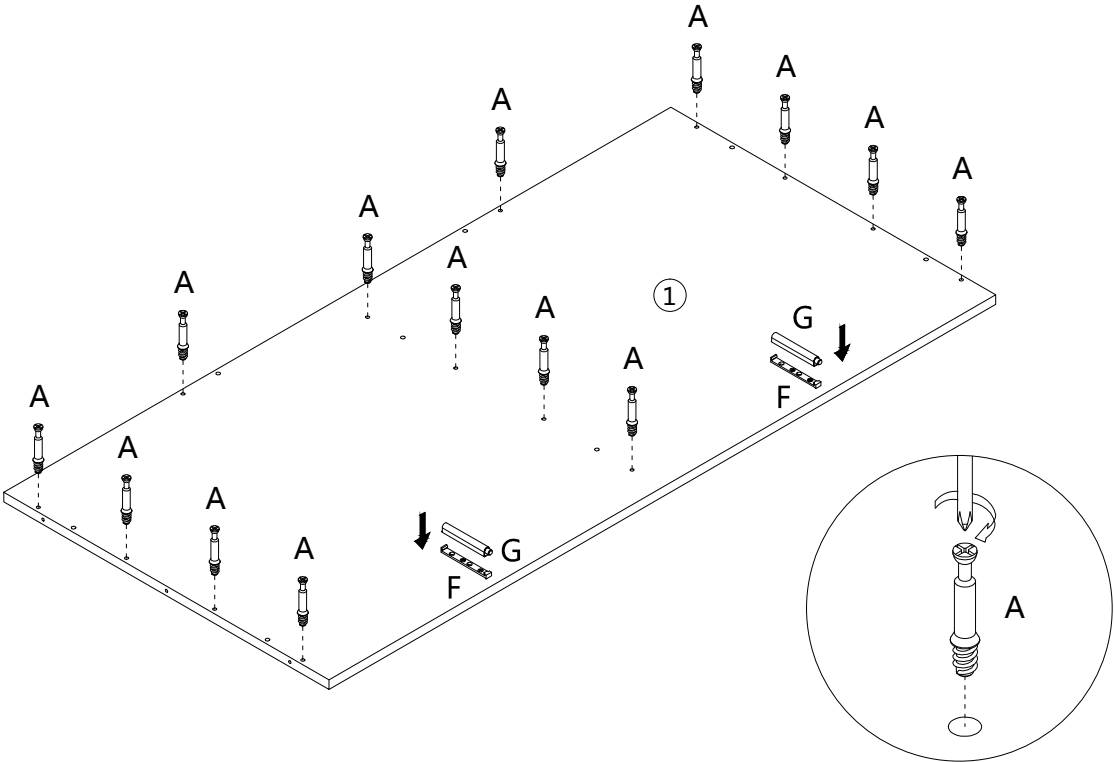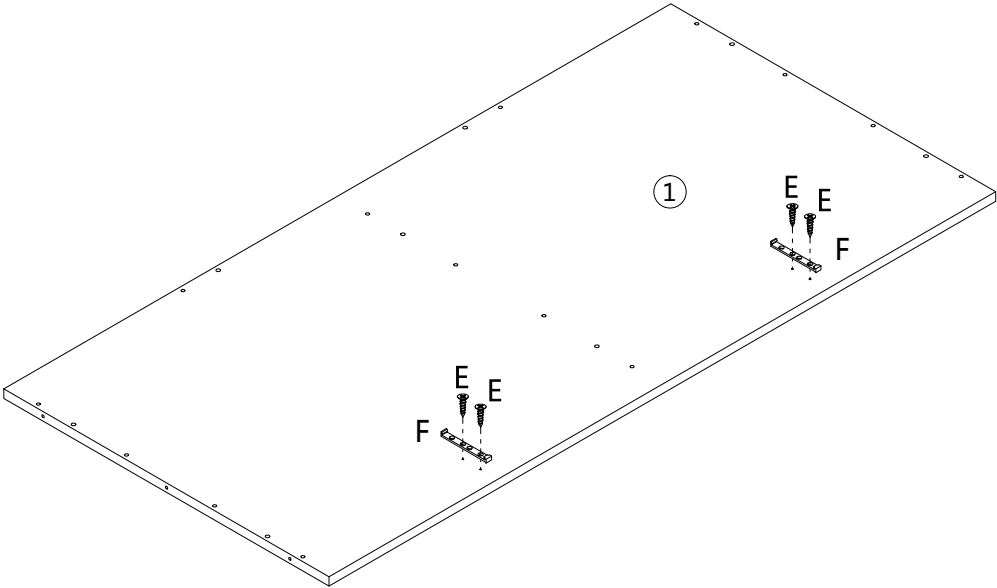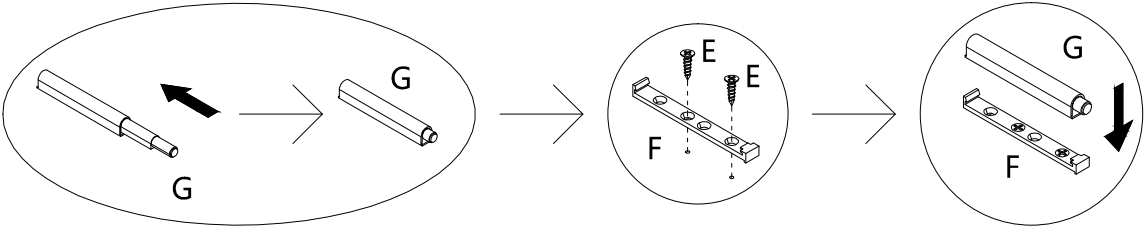


step 2

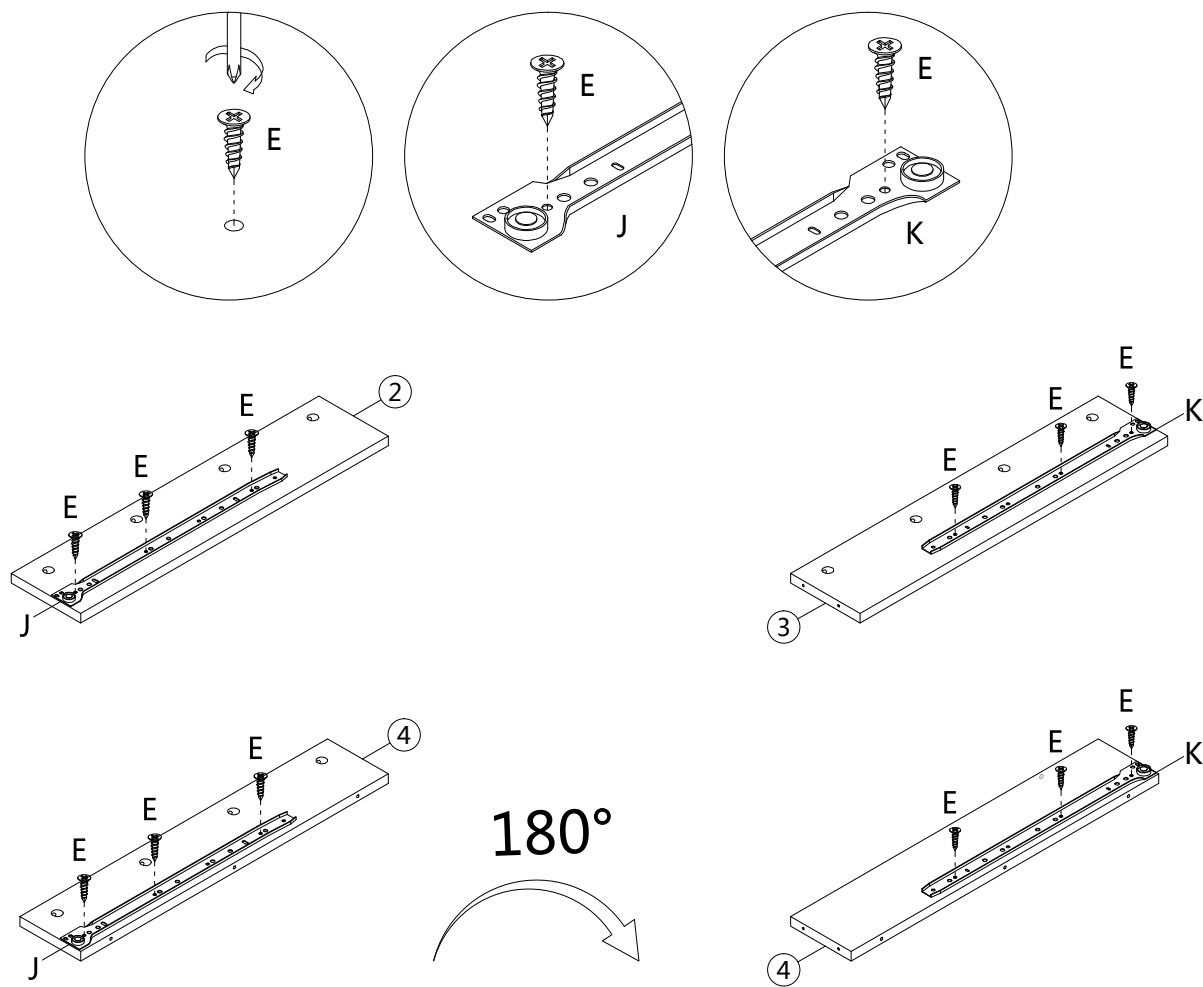




step 3

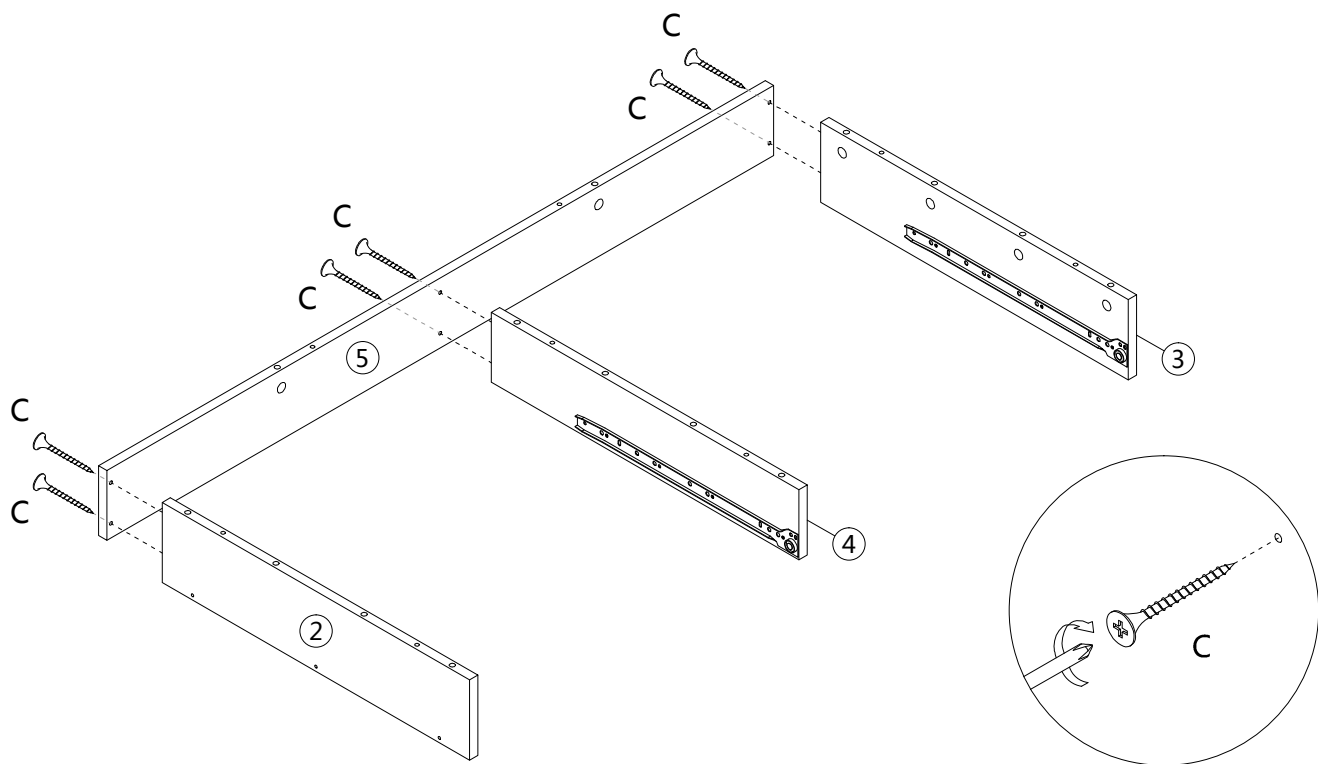


step 4

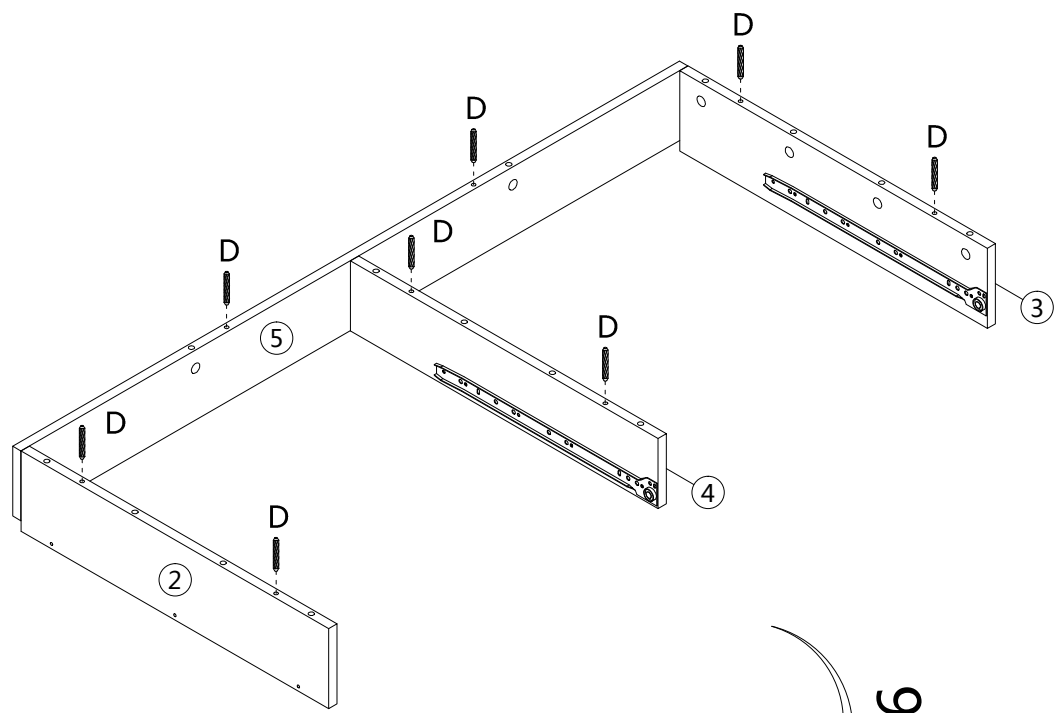


step 5

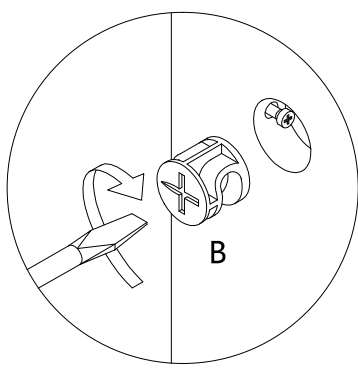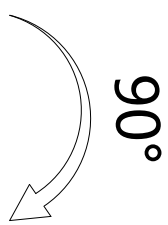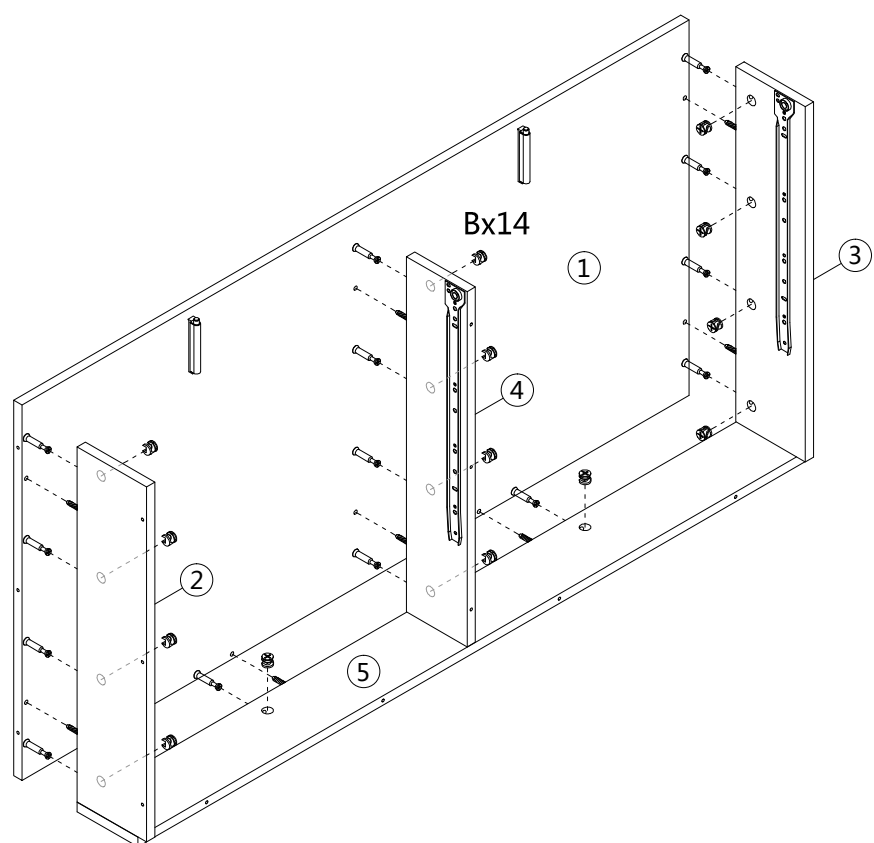


step 6

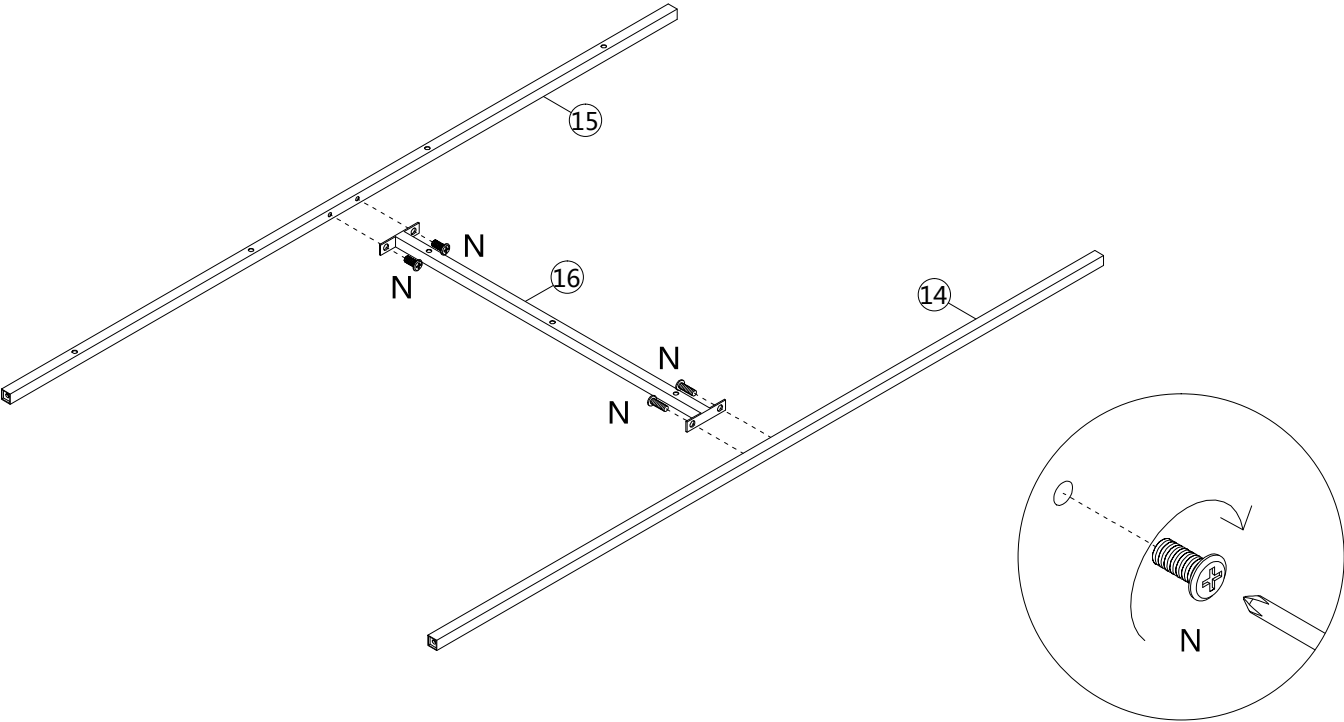


step 7

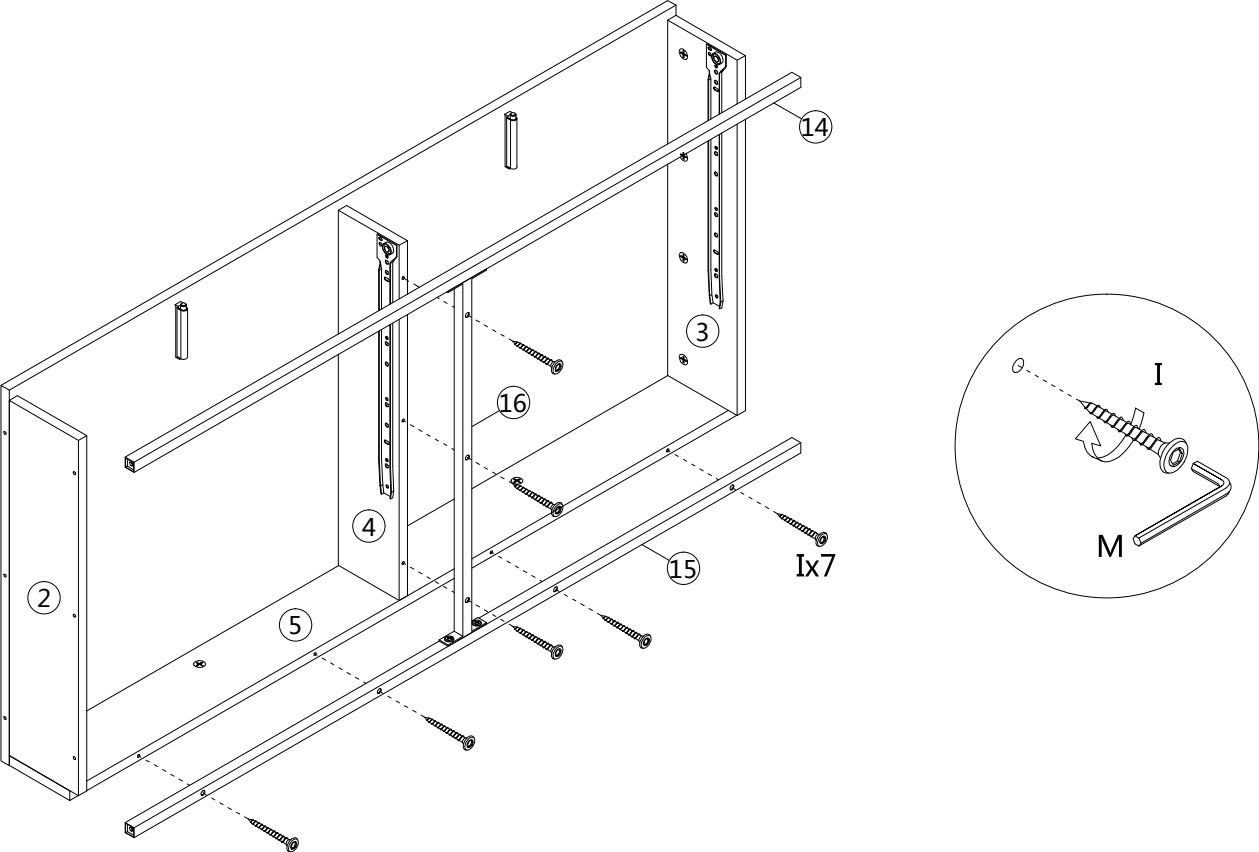


step 8

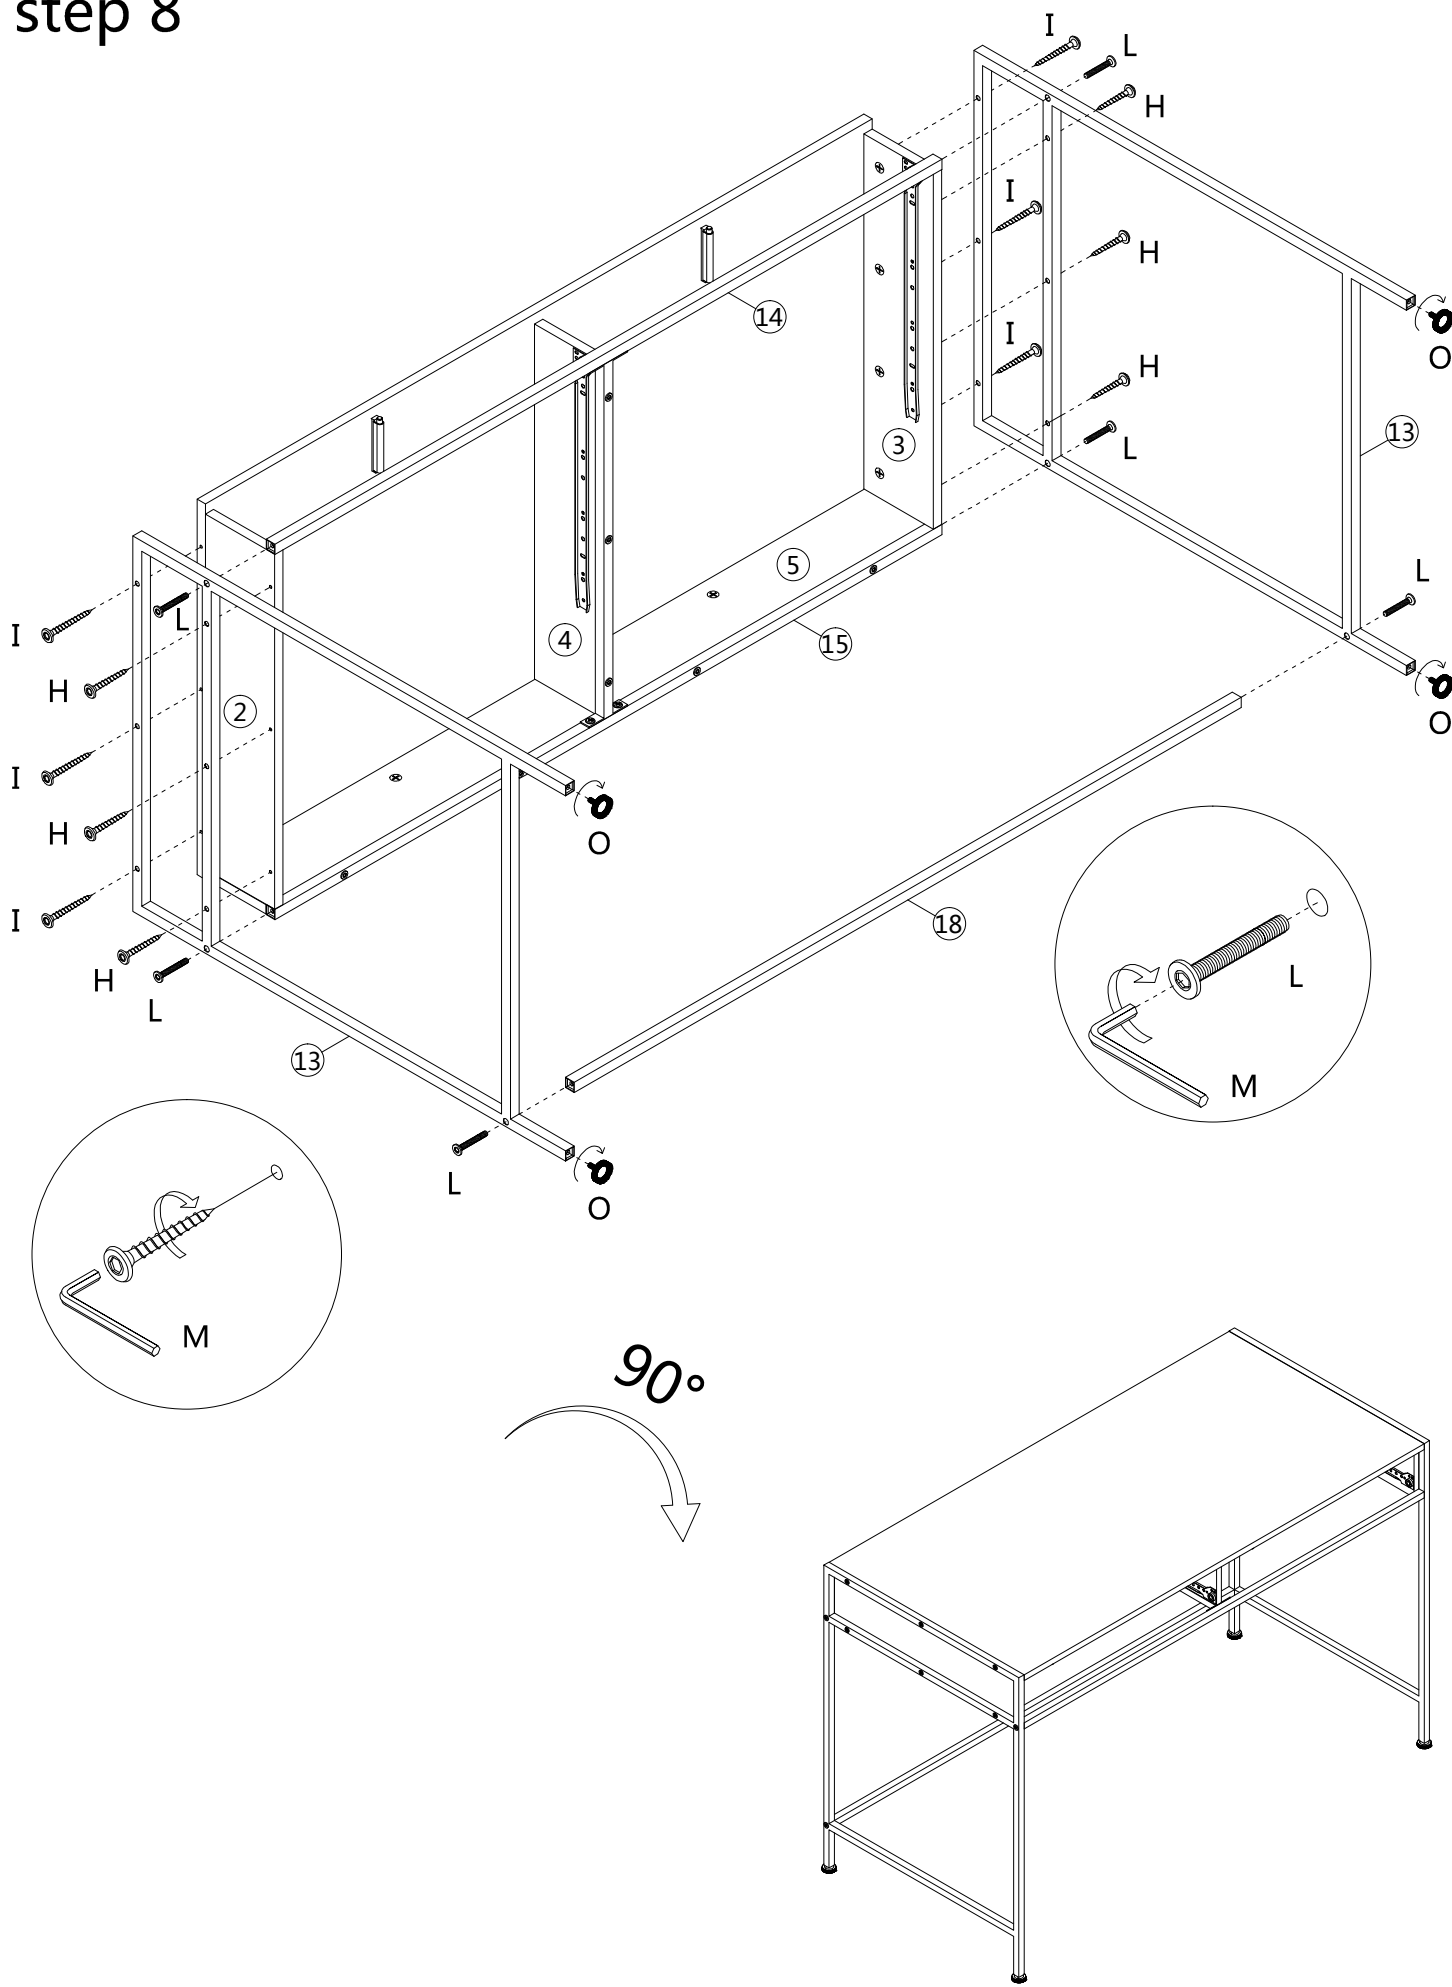


step 9

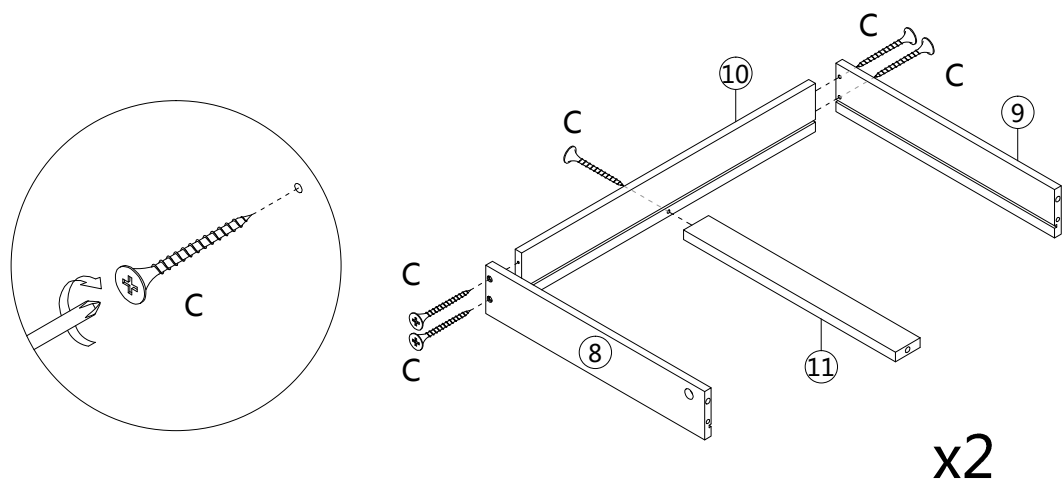


step 10

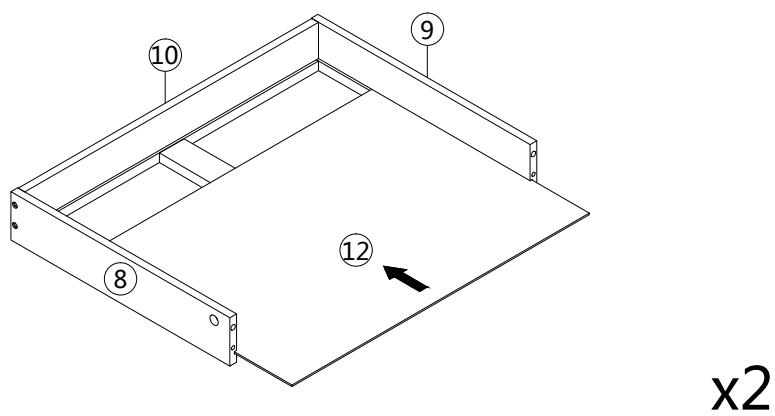


step 11

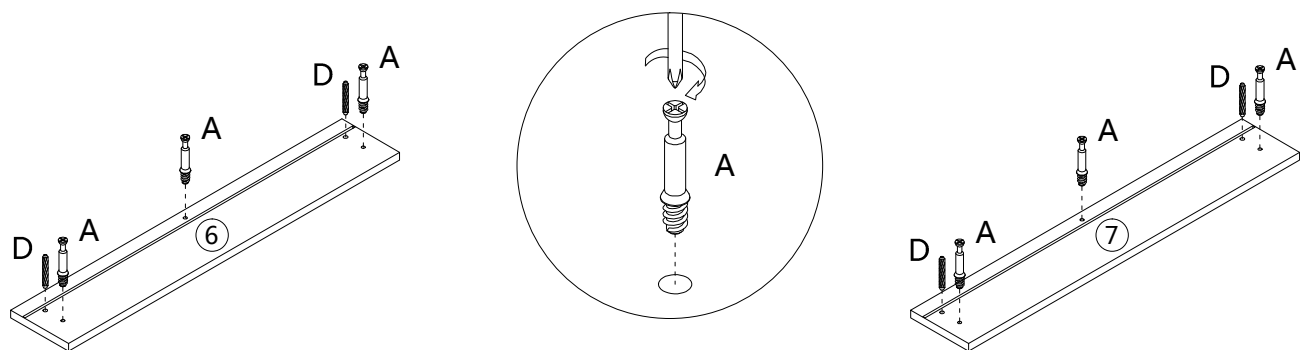


step 12

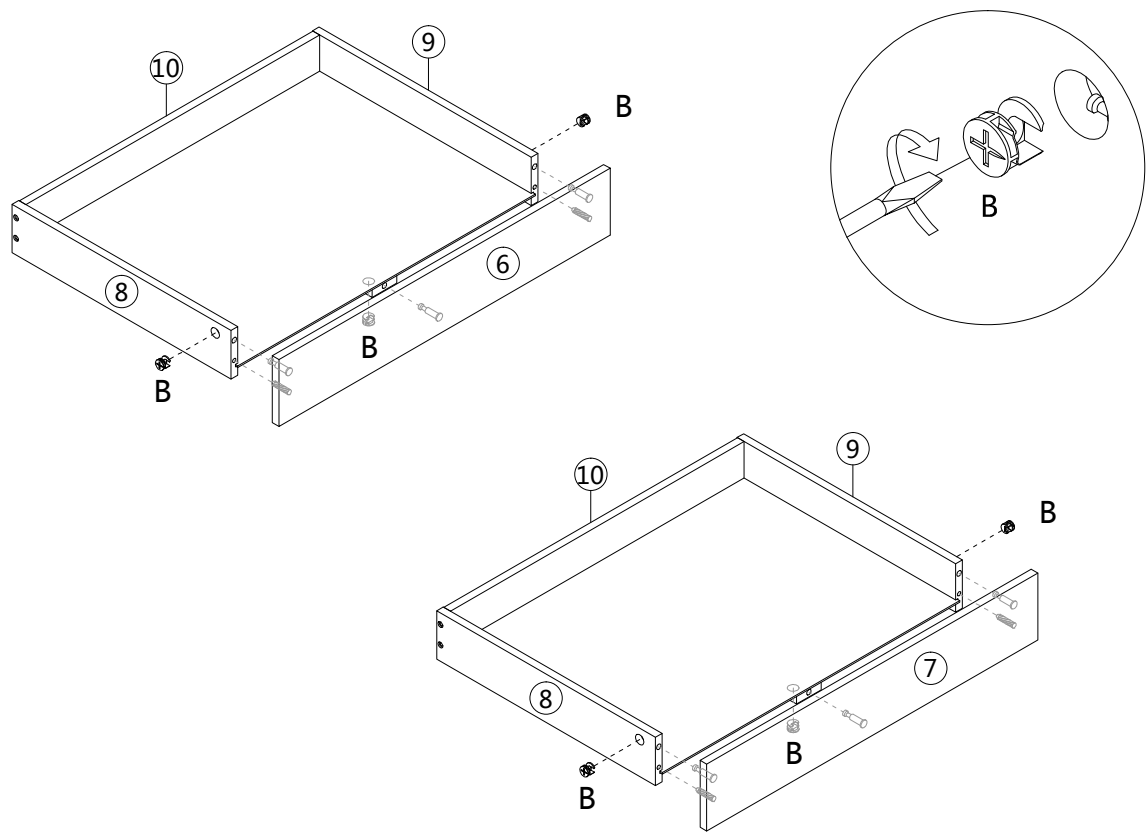

step 13

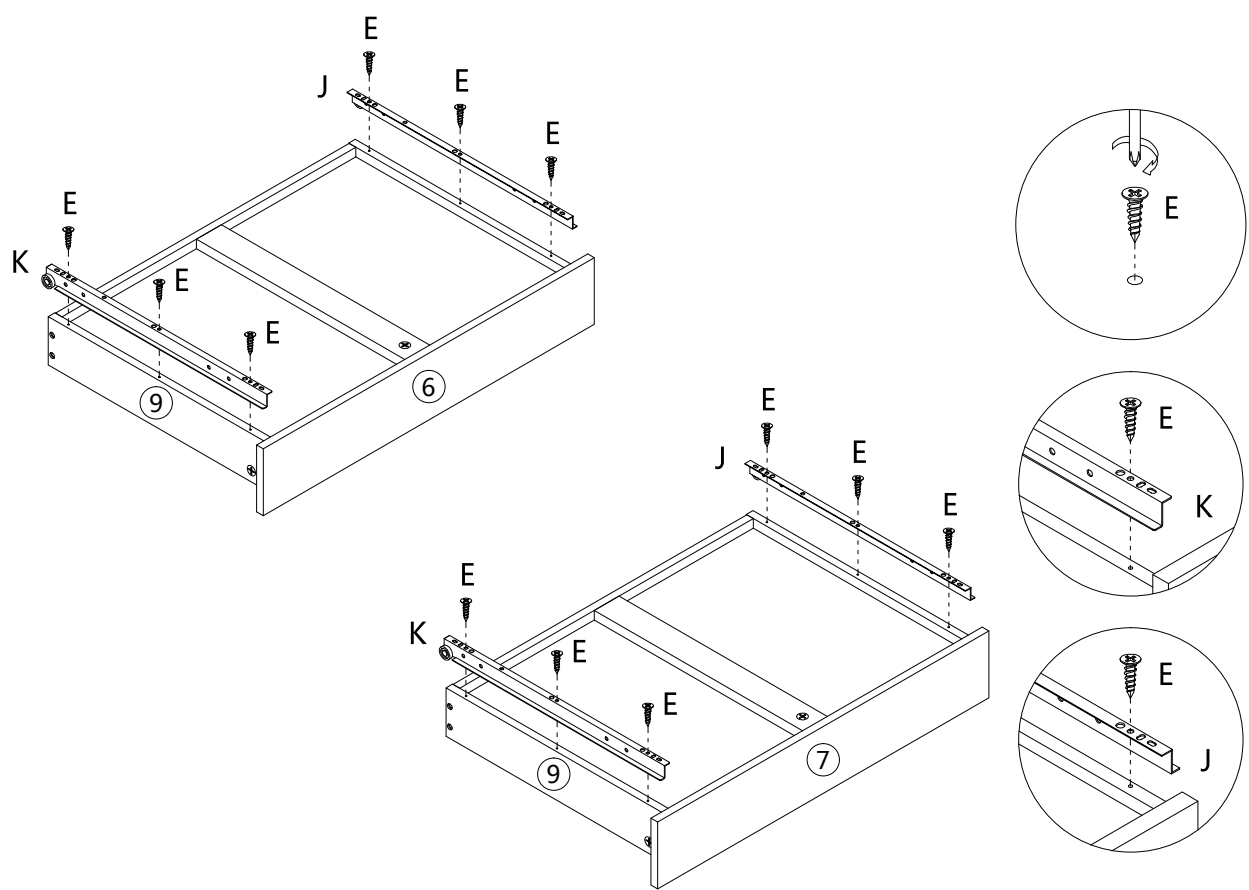

step 14

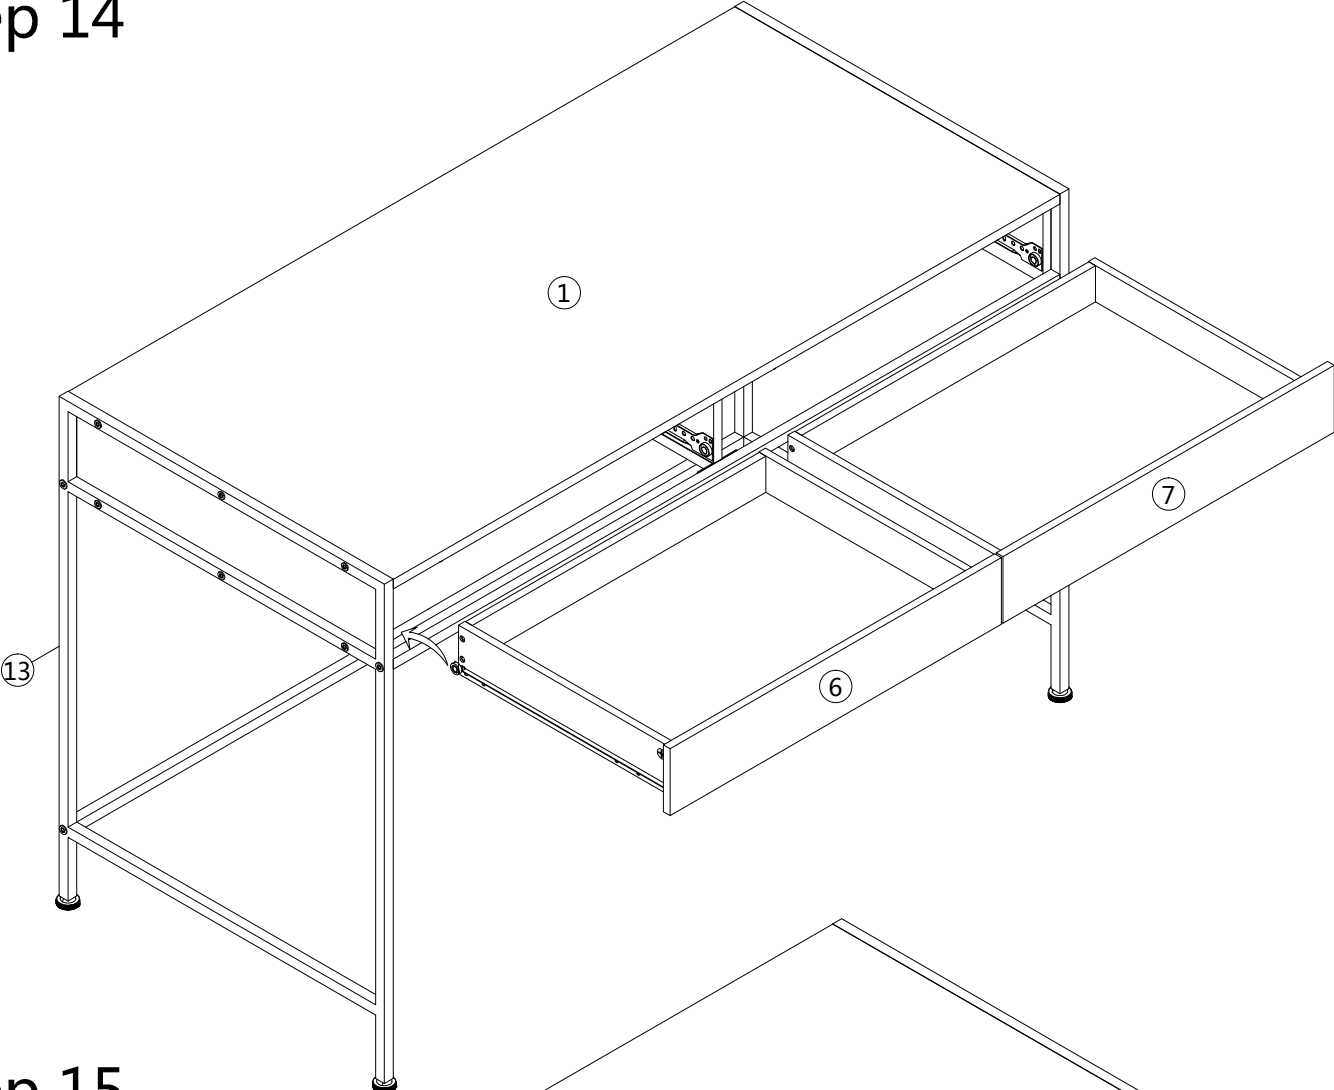

step 15

