


ASSEMBLY INSTRUCTIONS
INSTRUCTIONS D'ASSEMBLAGE



81030.Z.74

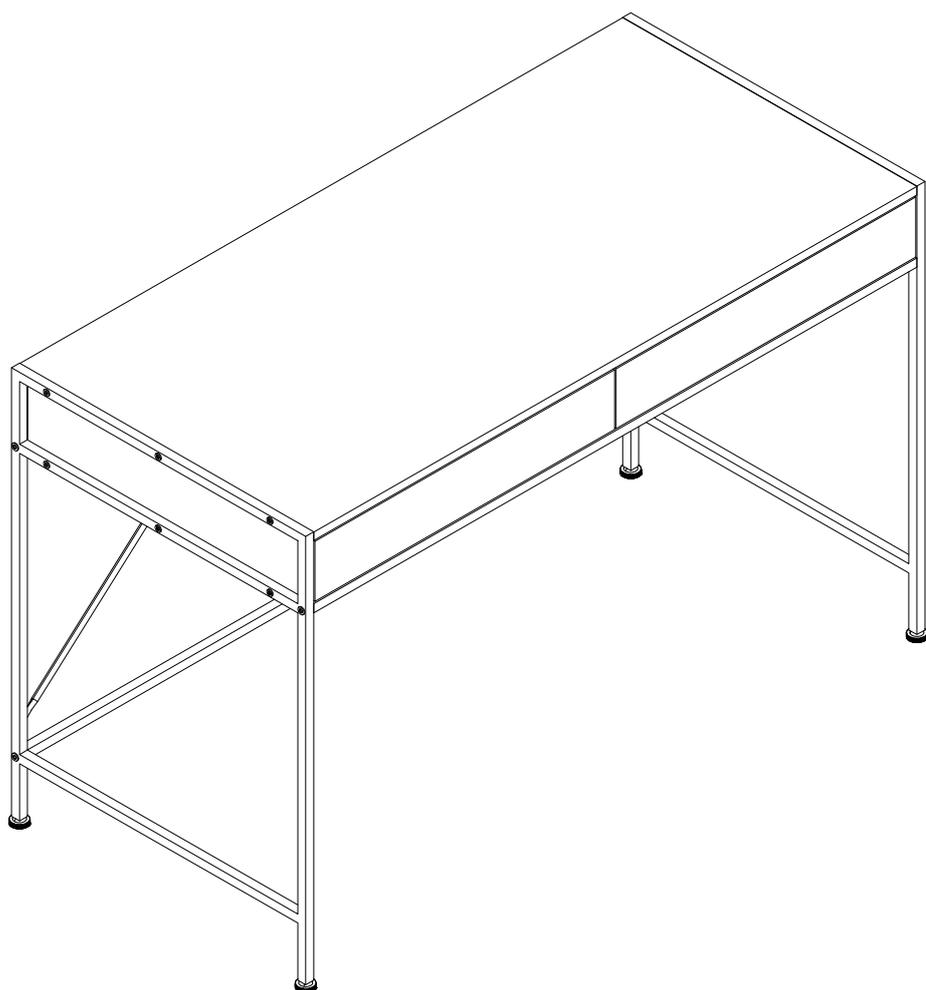






COMPUTER DESK 49L GREY WOOD 2 DRAWERS BLACK METAL

BUREAU 49L BOIS GRIS 2 TIRROIRS MÉTAL NOIR




SAFDIE & CO.
www.safdieco.com

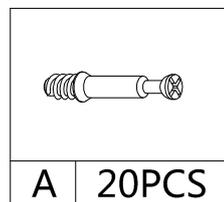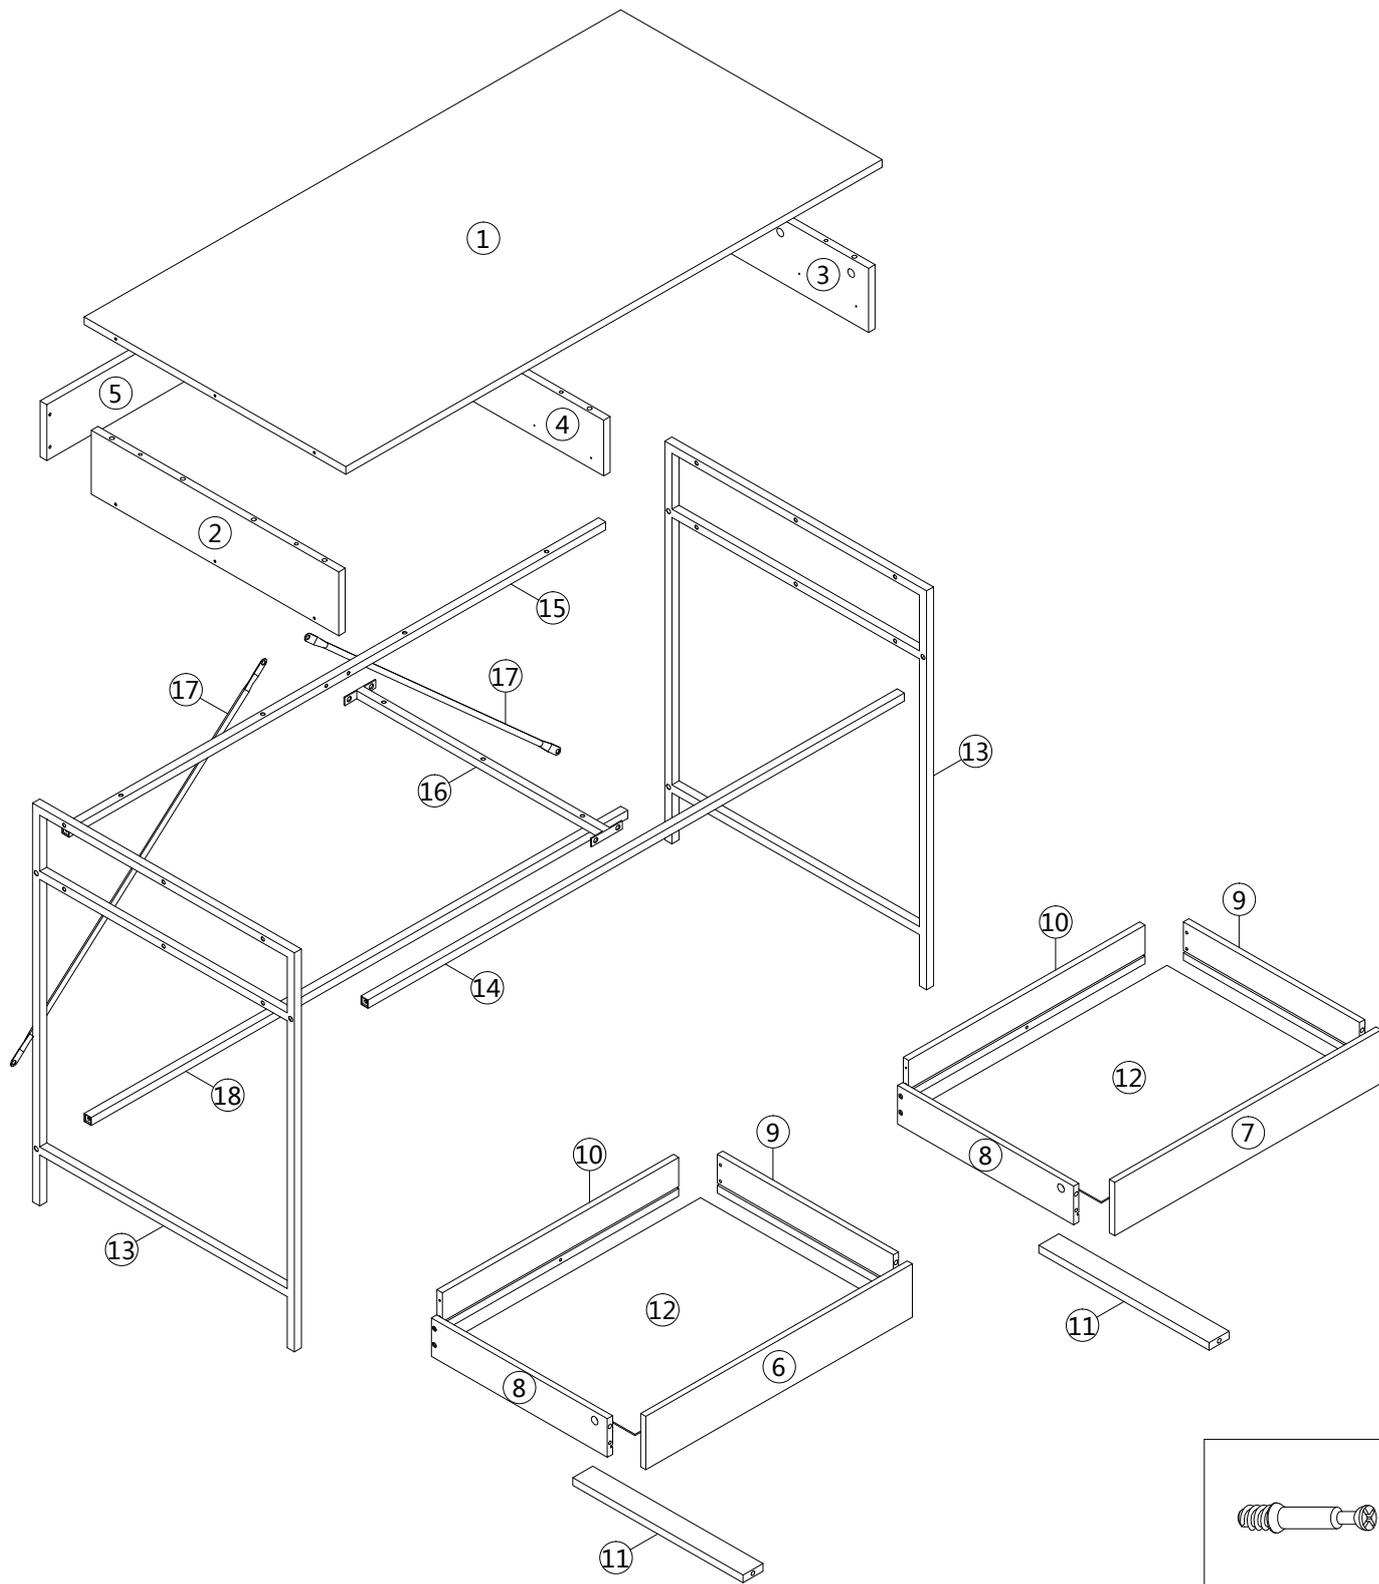







A | 20PCS

 ø15x9mm B 20PCS	 4x40mm C 16PCS	 6x30mm D 12PCS	 3x12mm E 28PCS	 F 2PCS	 G 2PCS	 5x30mm H 6PCS
 5x40mm I 13PCS	 J 2PCS	 K 2PCS	 6x35mm L 6PCS	 M 1PC	 6x12mm N 8PCS	 O 4PCS


step 1

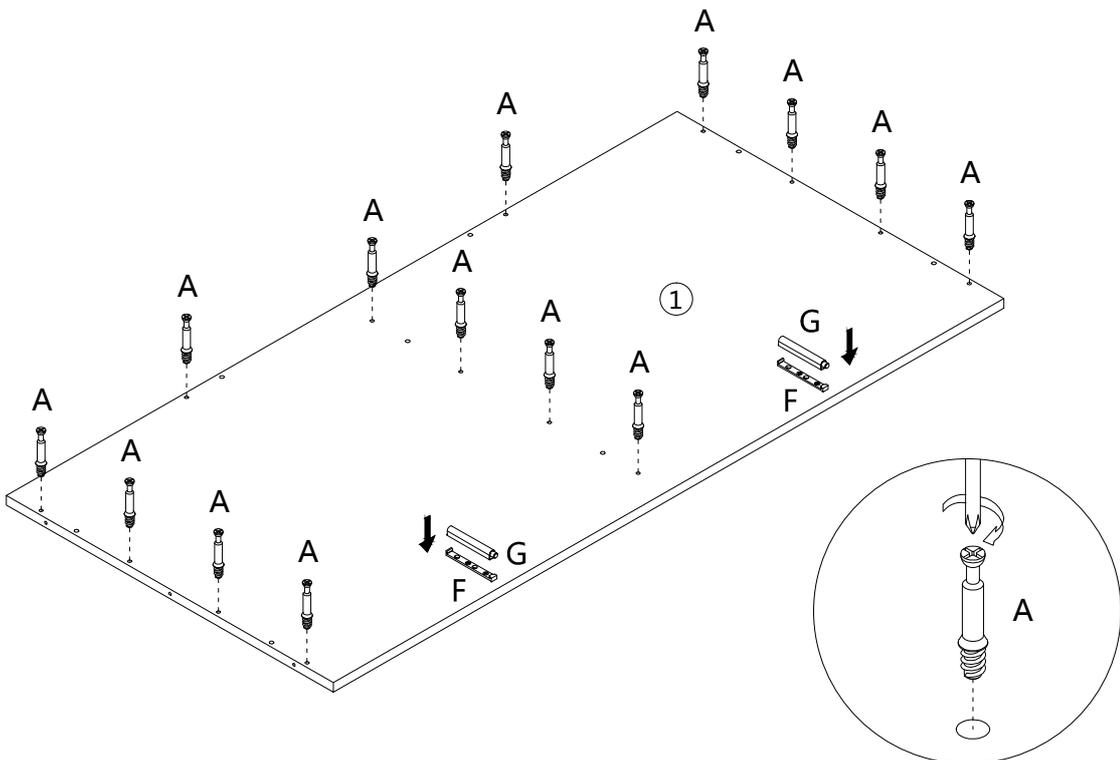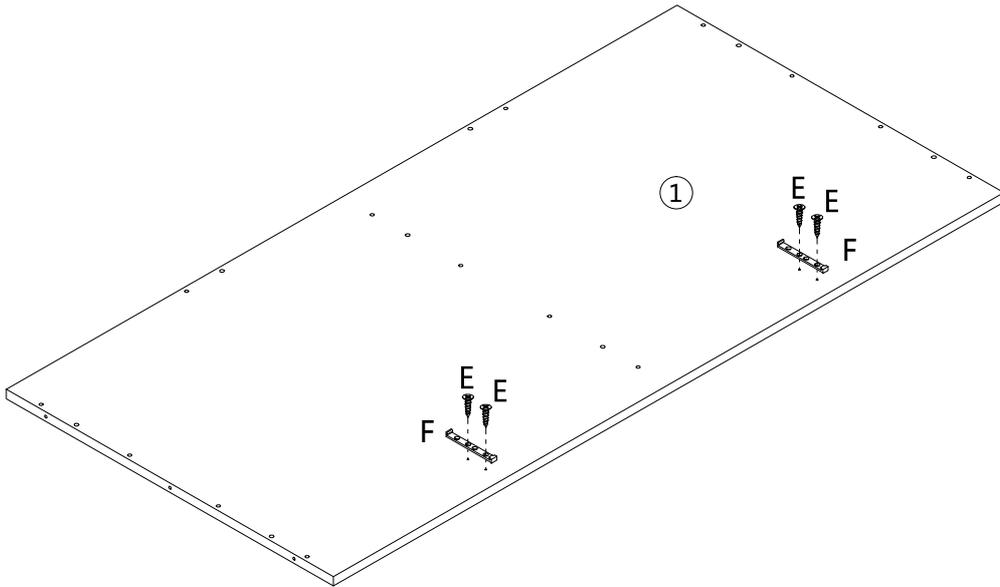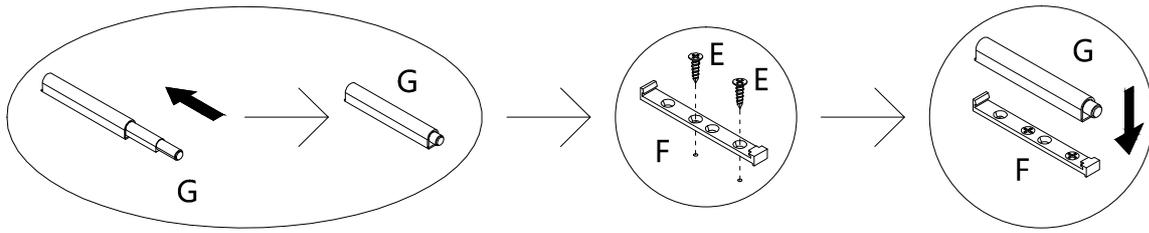



step 2

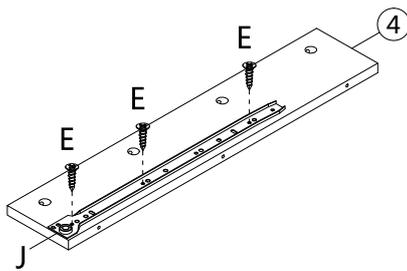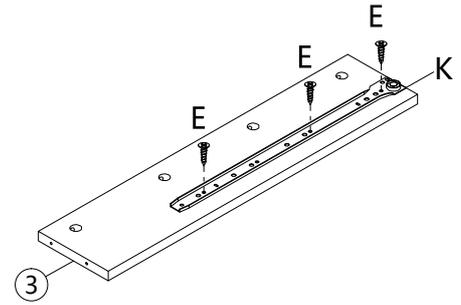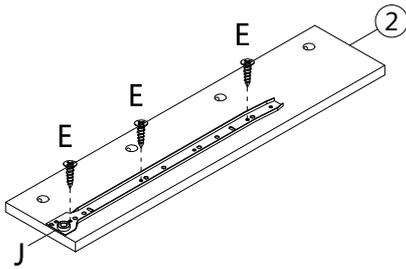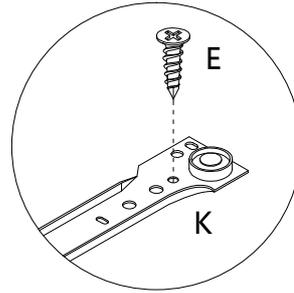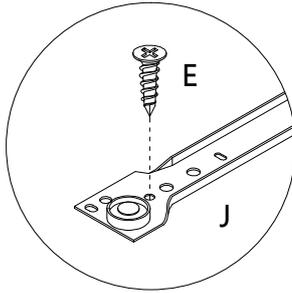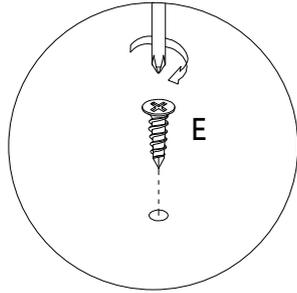


180°

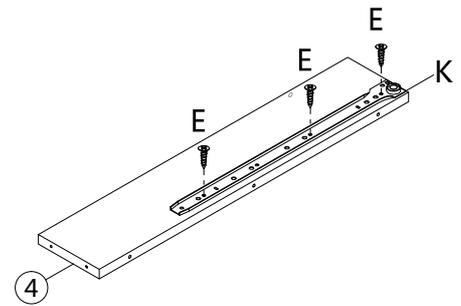




step 3

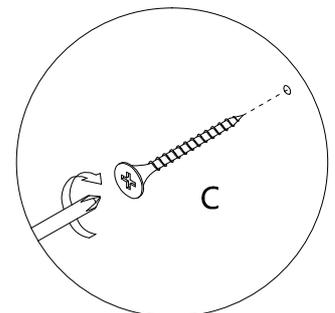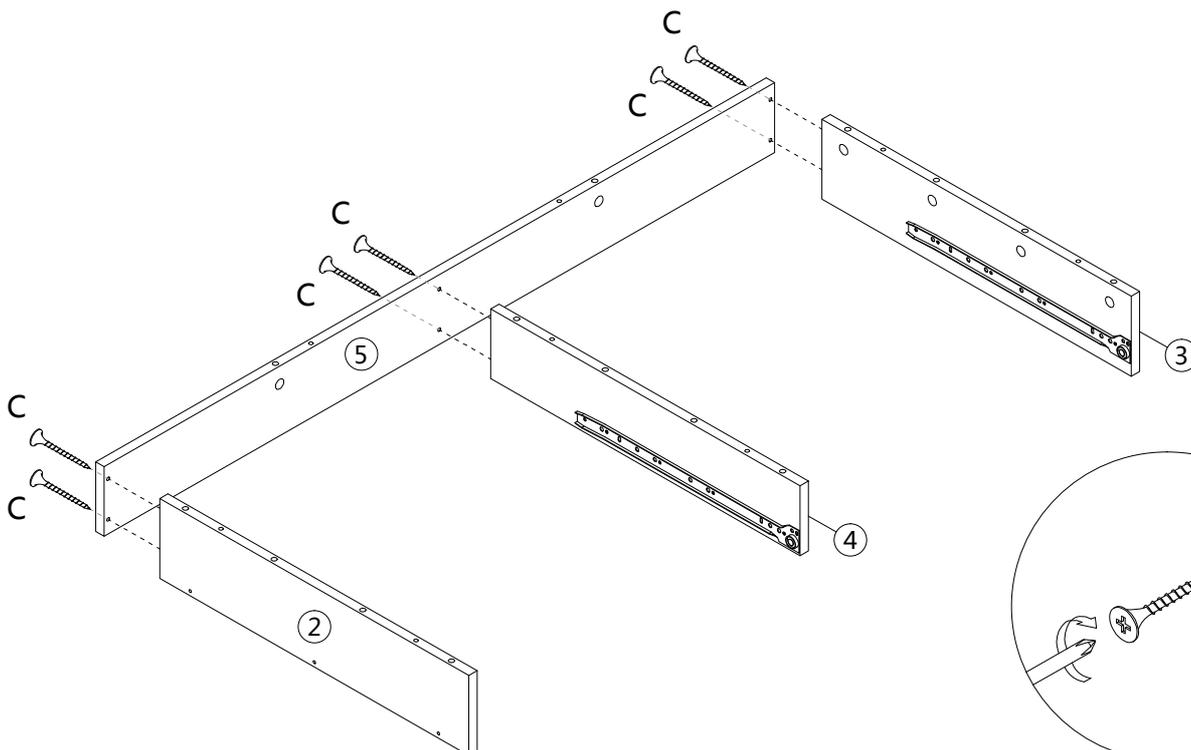


step 4

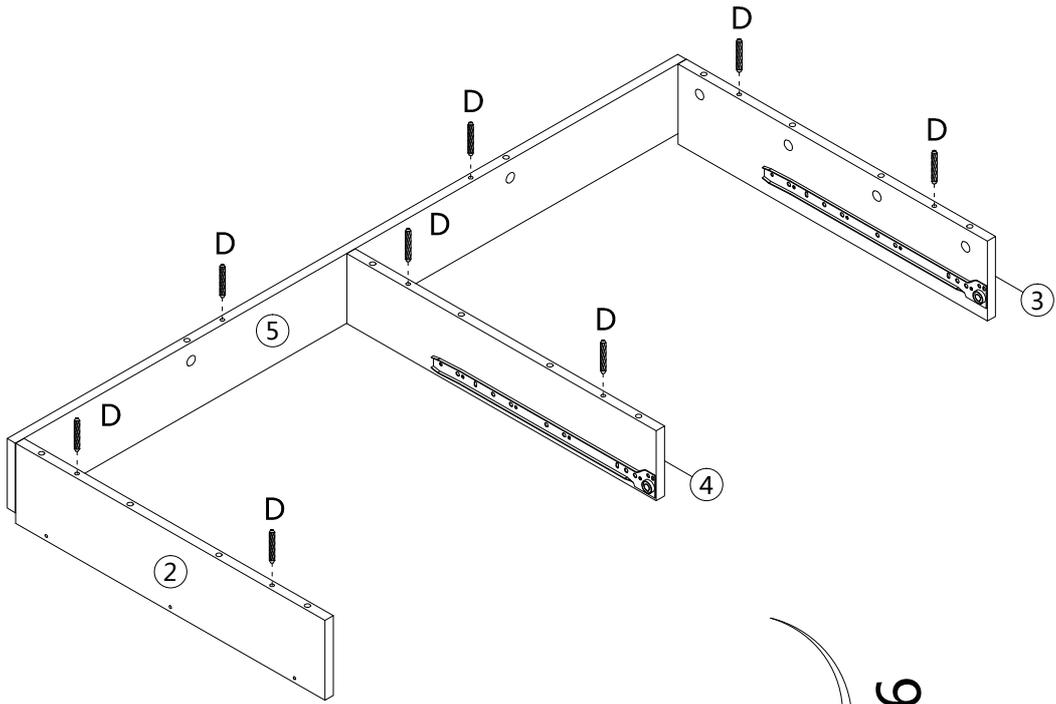


step 5

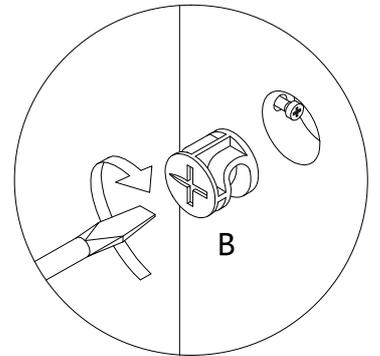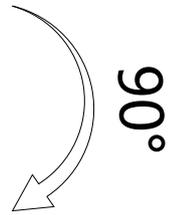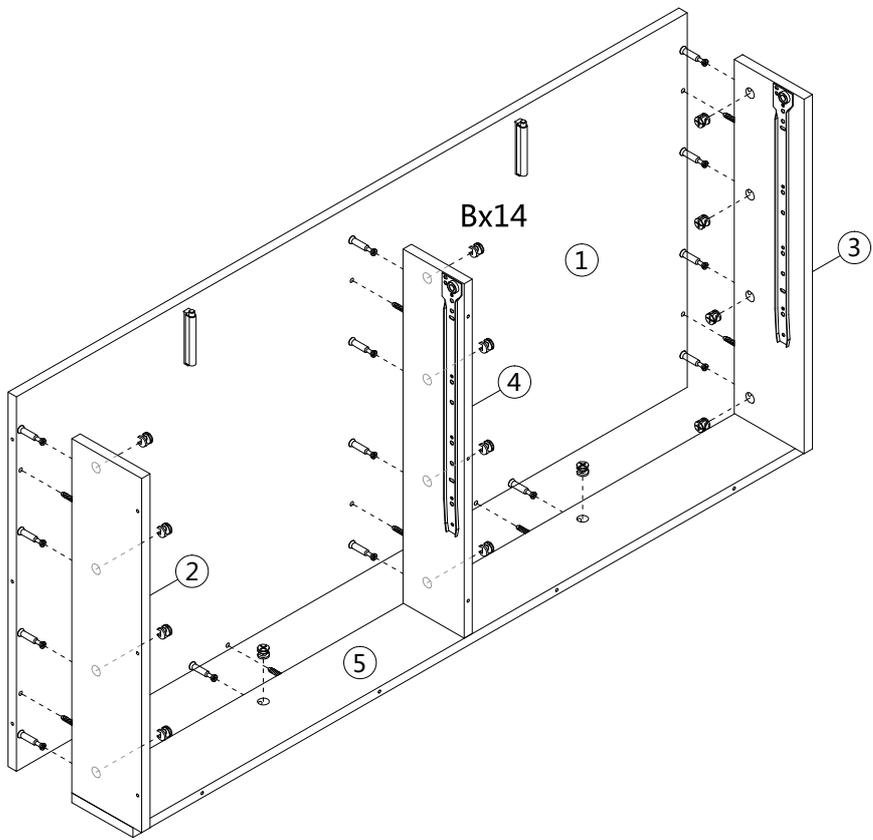



step 6

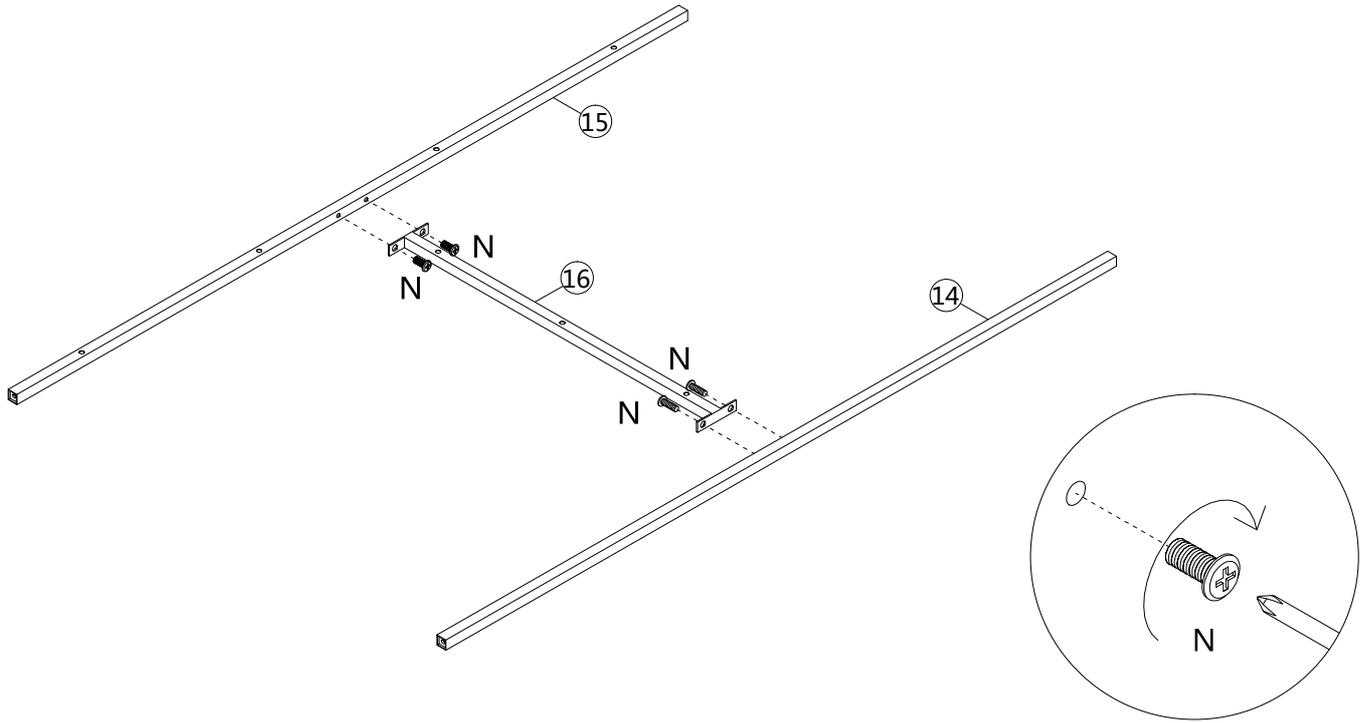



step 7

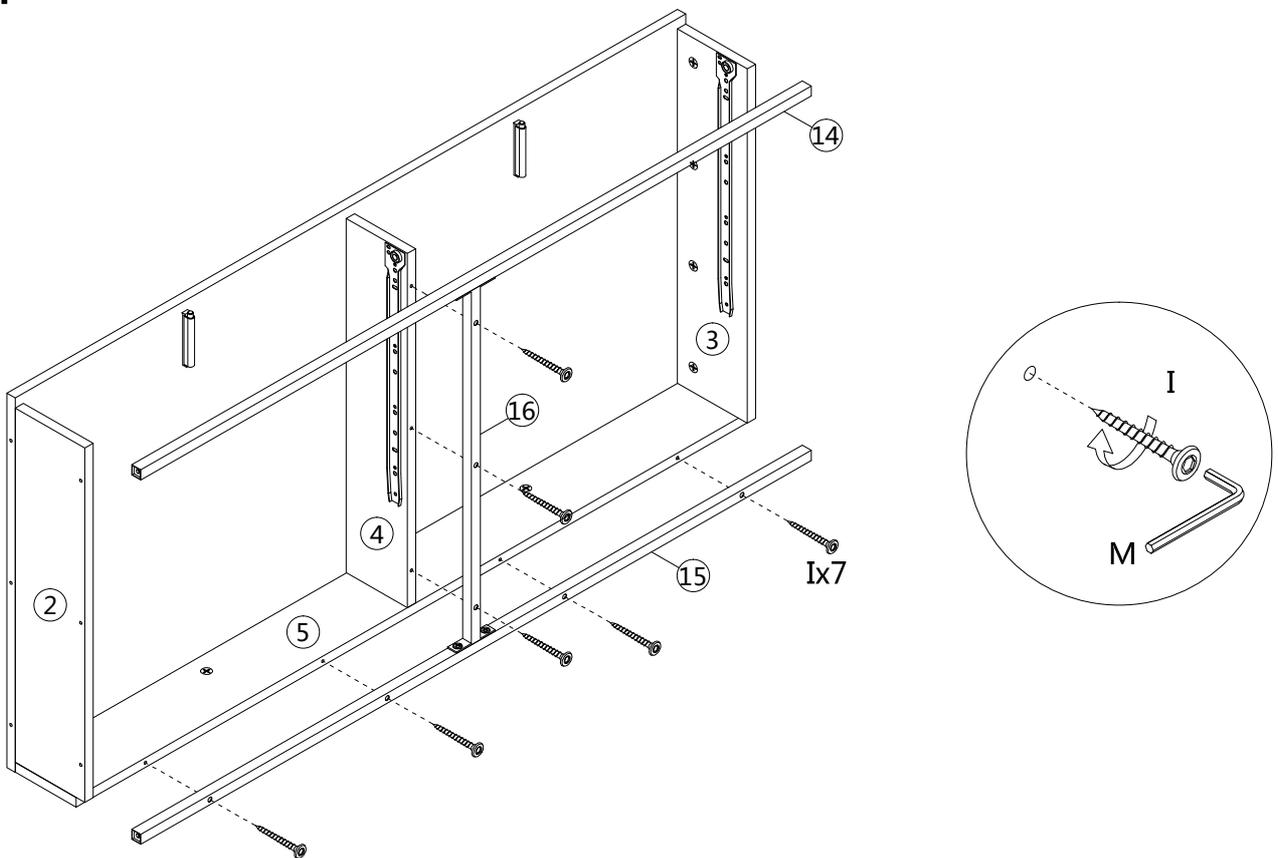

step 8

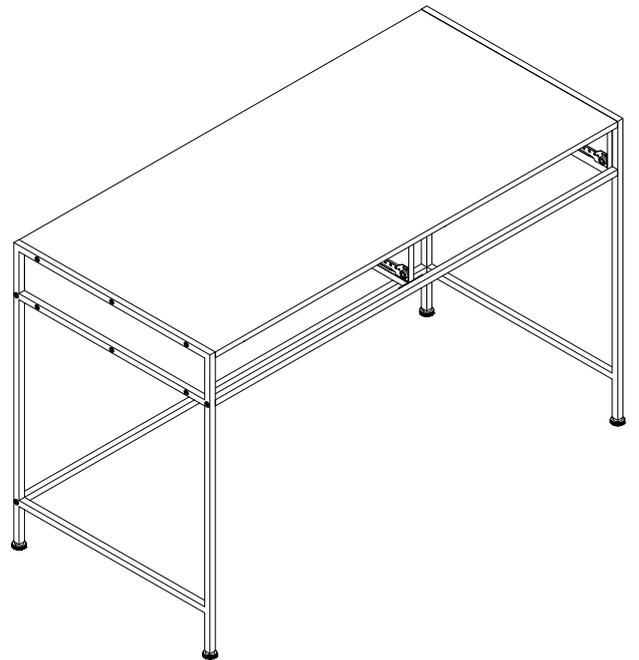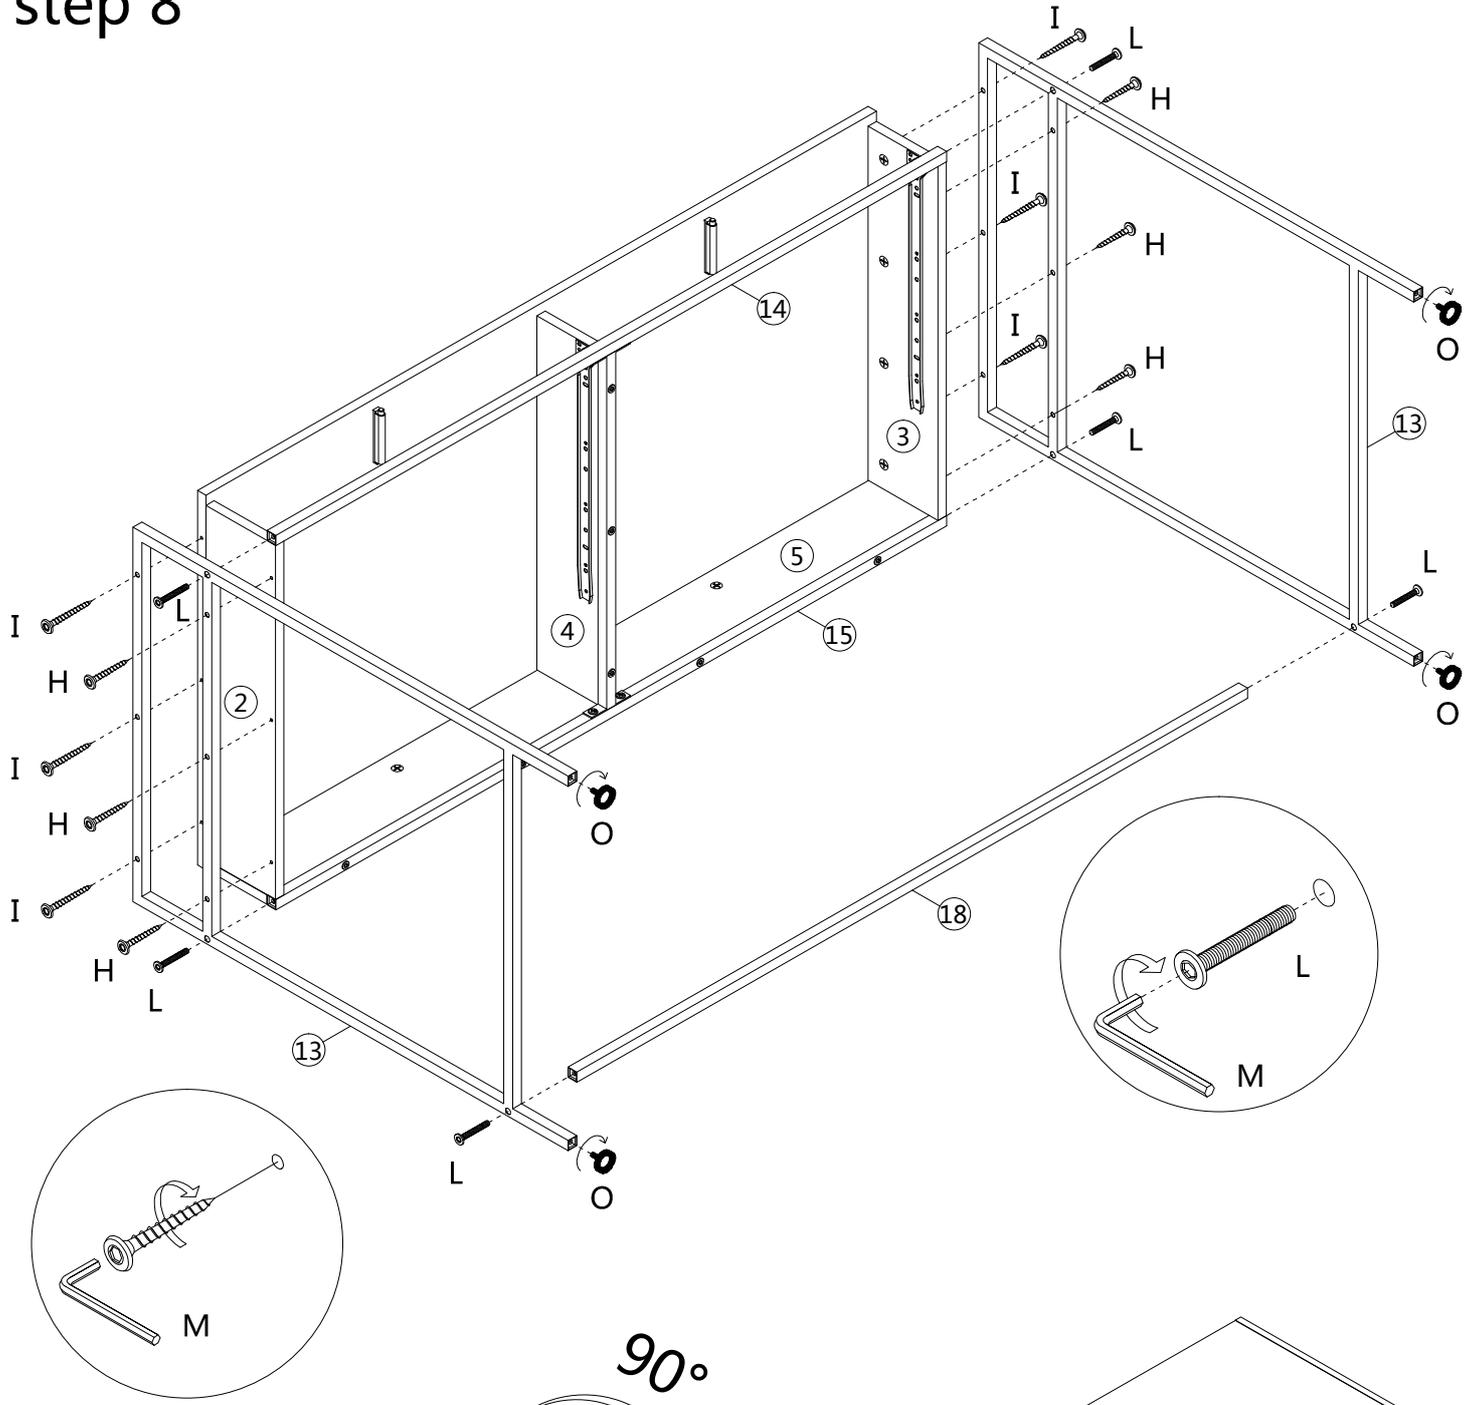


step 9

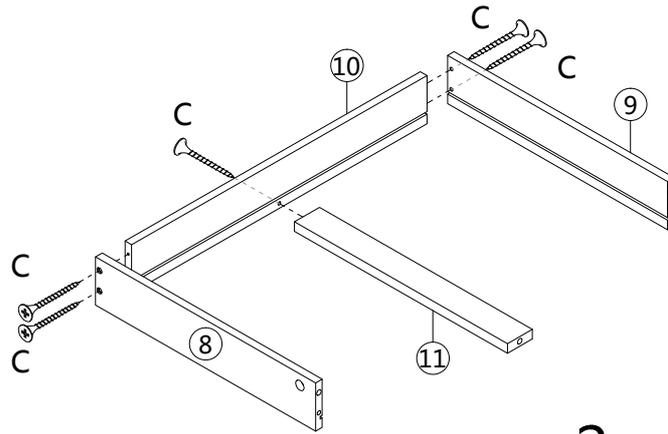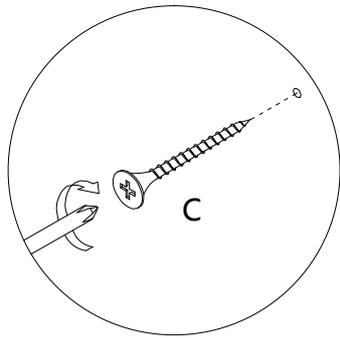




x2

step 10

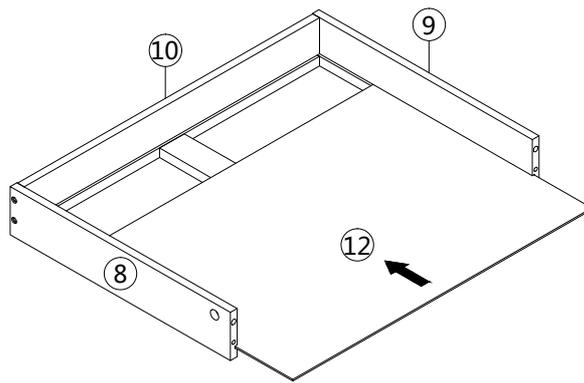


x2


step 11

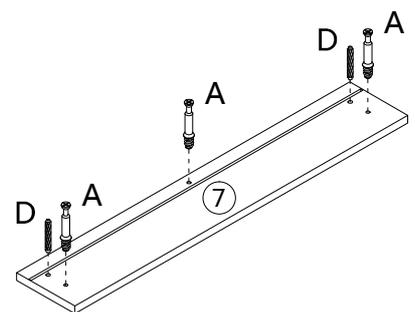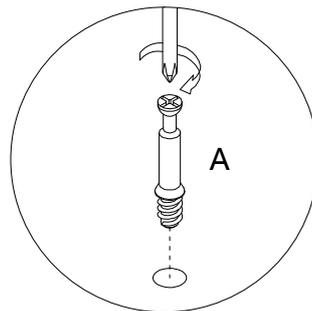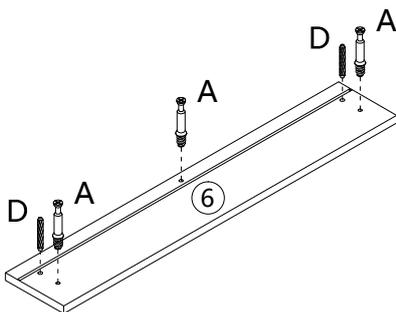


step 12

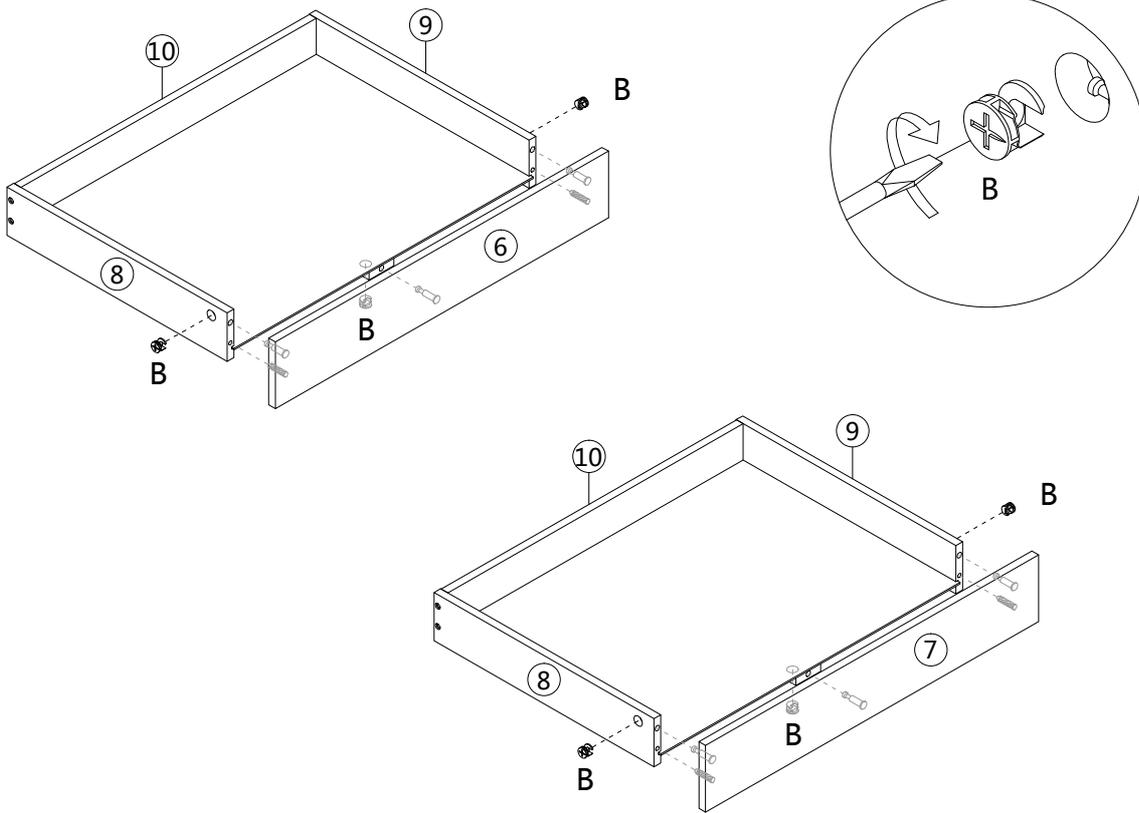

step 13

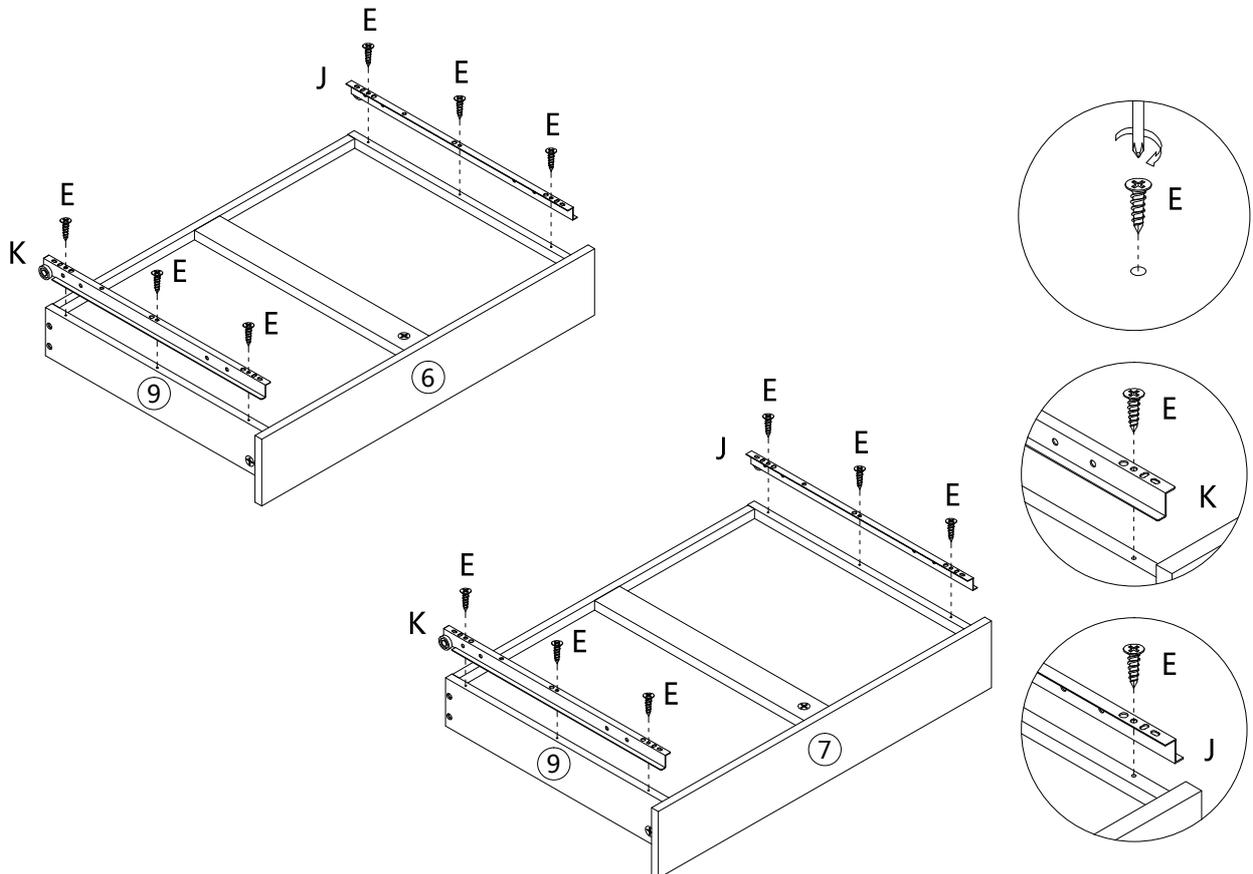

step 14

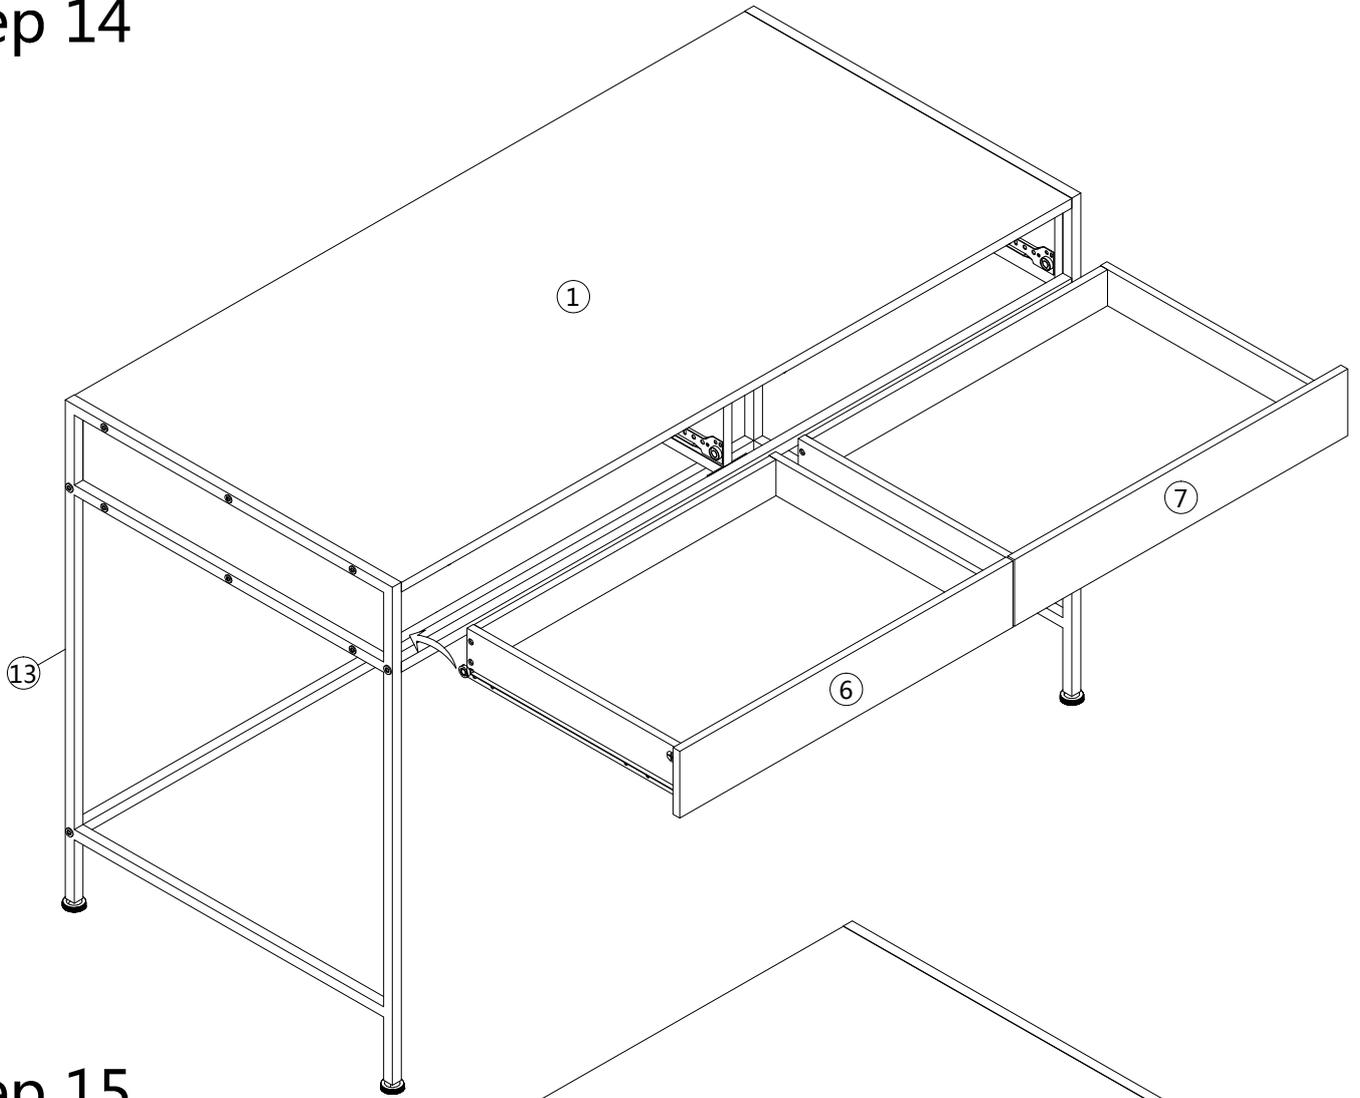

step 15

