


ASSEMBLY INSTRUCTIONS
INSTRUCTIONS D'ASSEMBLAGE


81076.Z.07

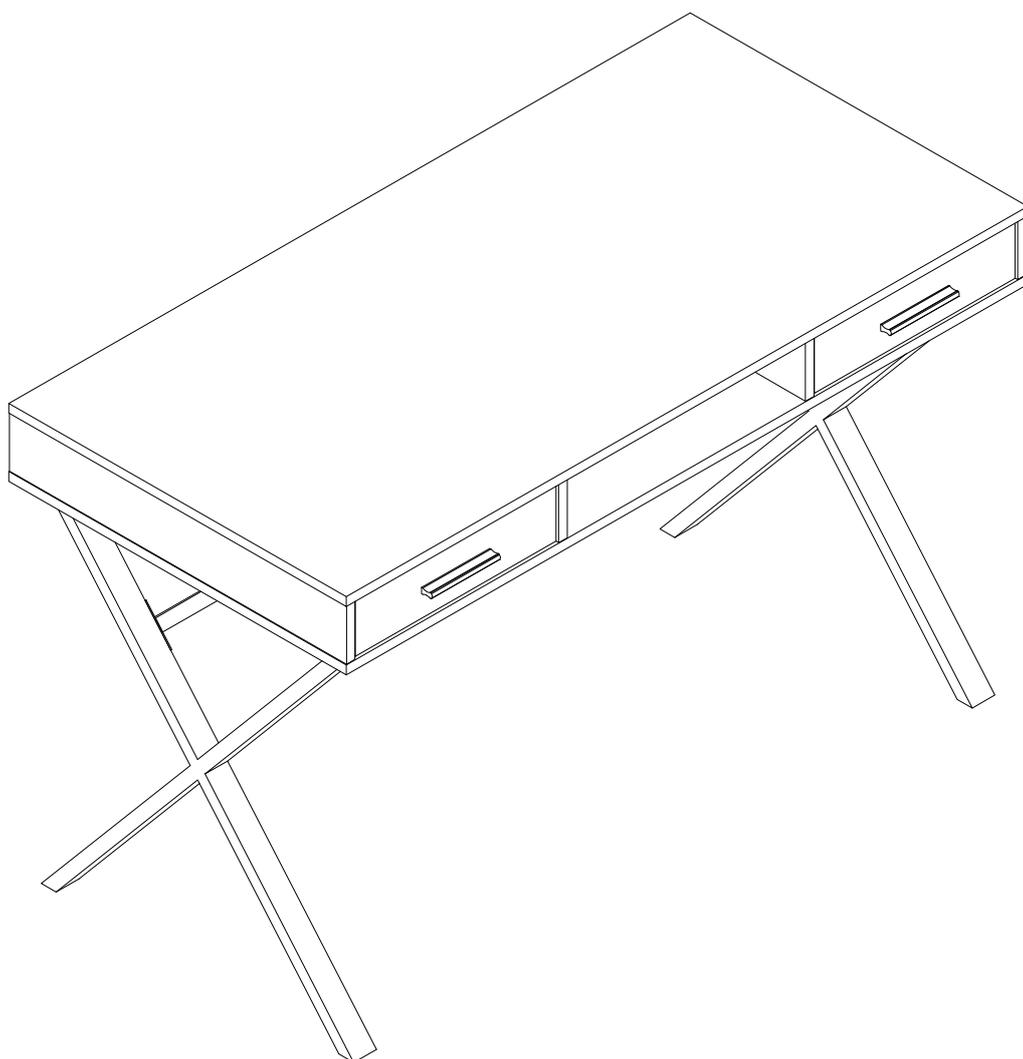




COMPUTER DESK 47L BROWN RECLAIMED WOOD 2 DRAWERS 1 SHELF BLACK METAL


BUREAU 47L BOIS BRUN RÉCUPÉRÉ 2 TIRROIRS 1 ÉTAGÈRE MÉTAL NOIR

SAFDIE & CO.
www.safdieco.com

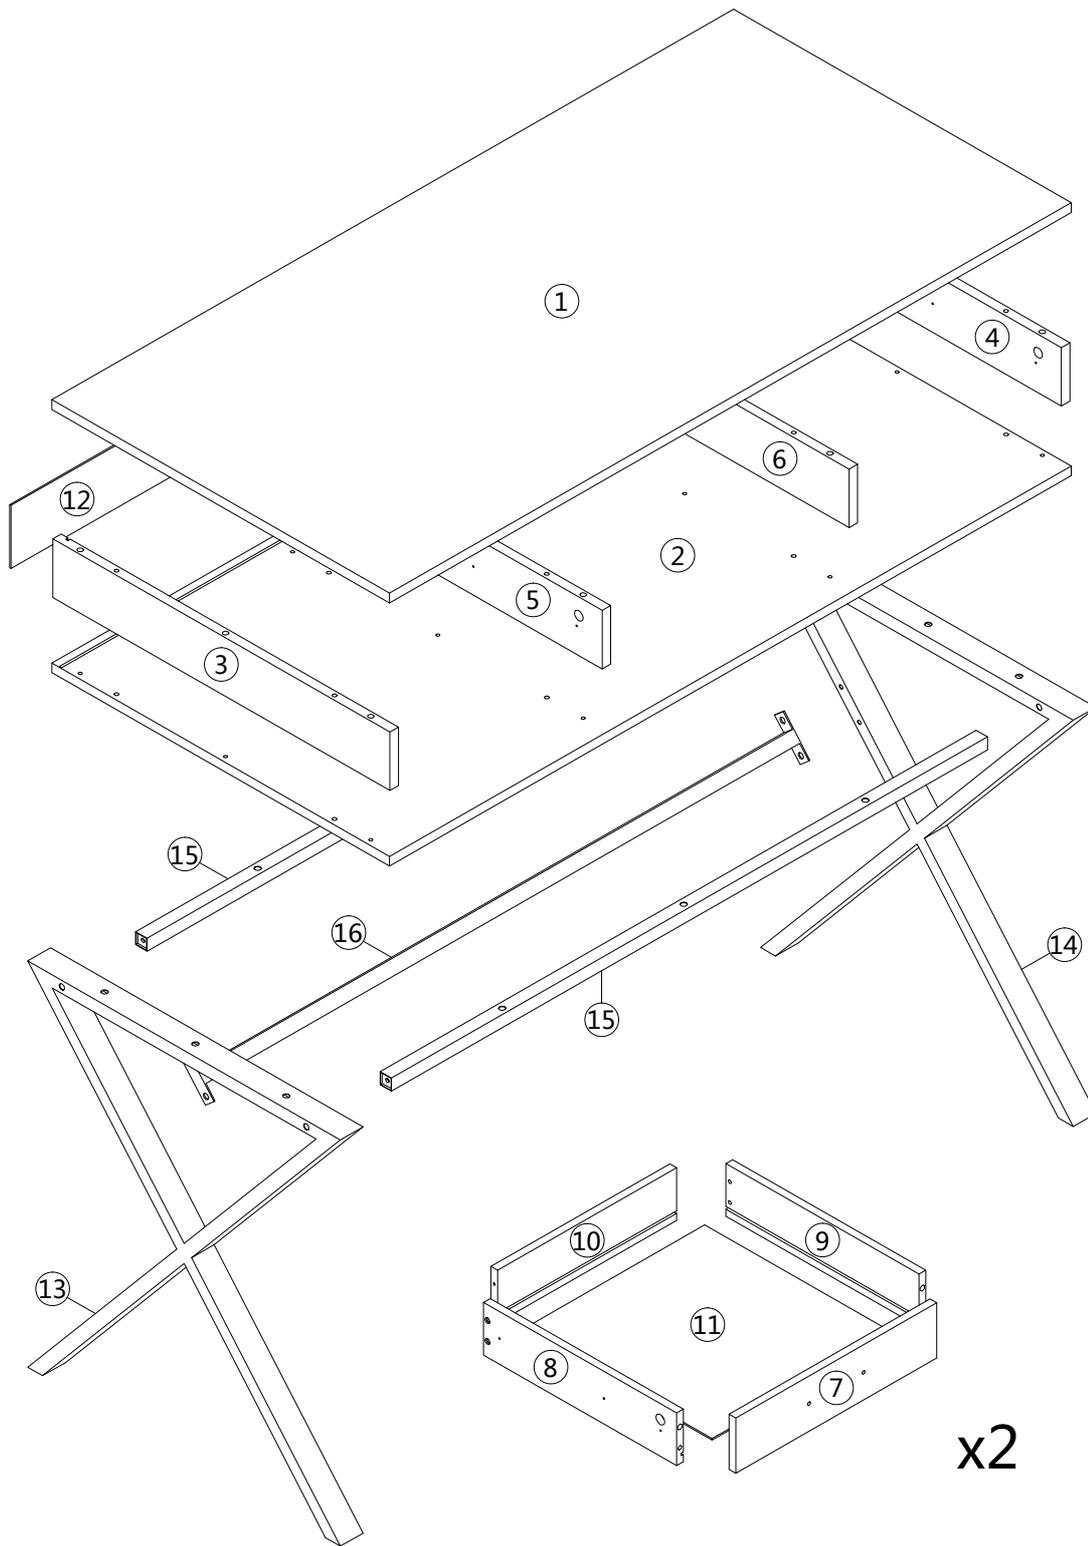


x2


	
A	16PCS
	
G	4PCS
	
I	4PCS
	
J	2PCS
	
K	4PCS
	
L	12PCS
	
M	4PCS
	
N	1PC
	
O	4PCS

											
ø15x9mm		4x40mm		6x30mm		3x12mm		4x16mm			
B	16PCS	C	20PCS	D	20PCS	E	24PCS	F	4PCS	G	4PCS
											
ø10mm				6x12mm		6x30mm		6x60mm			
I	4PCS	J	2PCS	K	4PCS	L	12PCS	M	4PCS	N	1PC
											



step 1

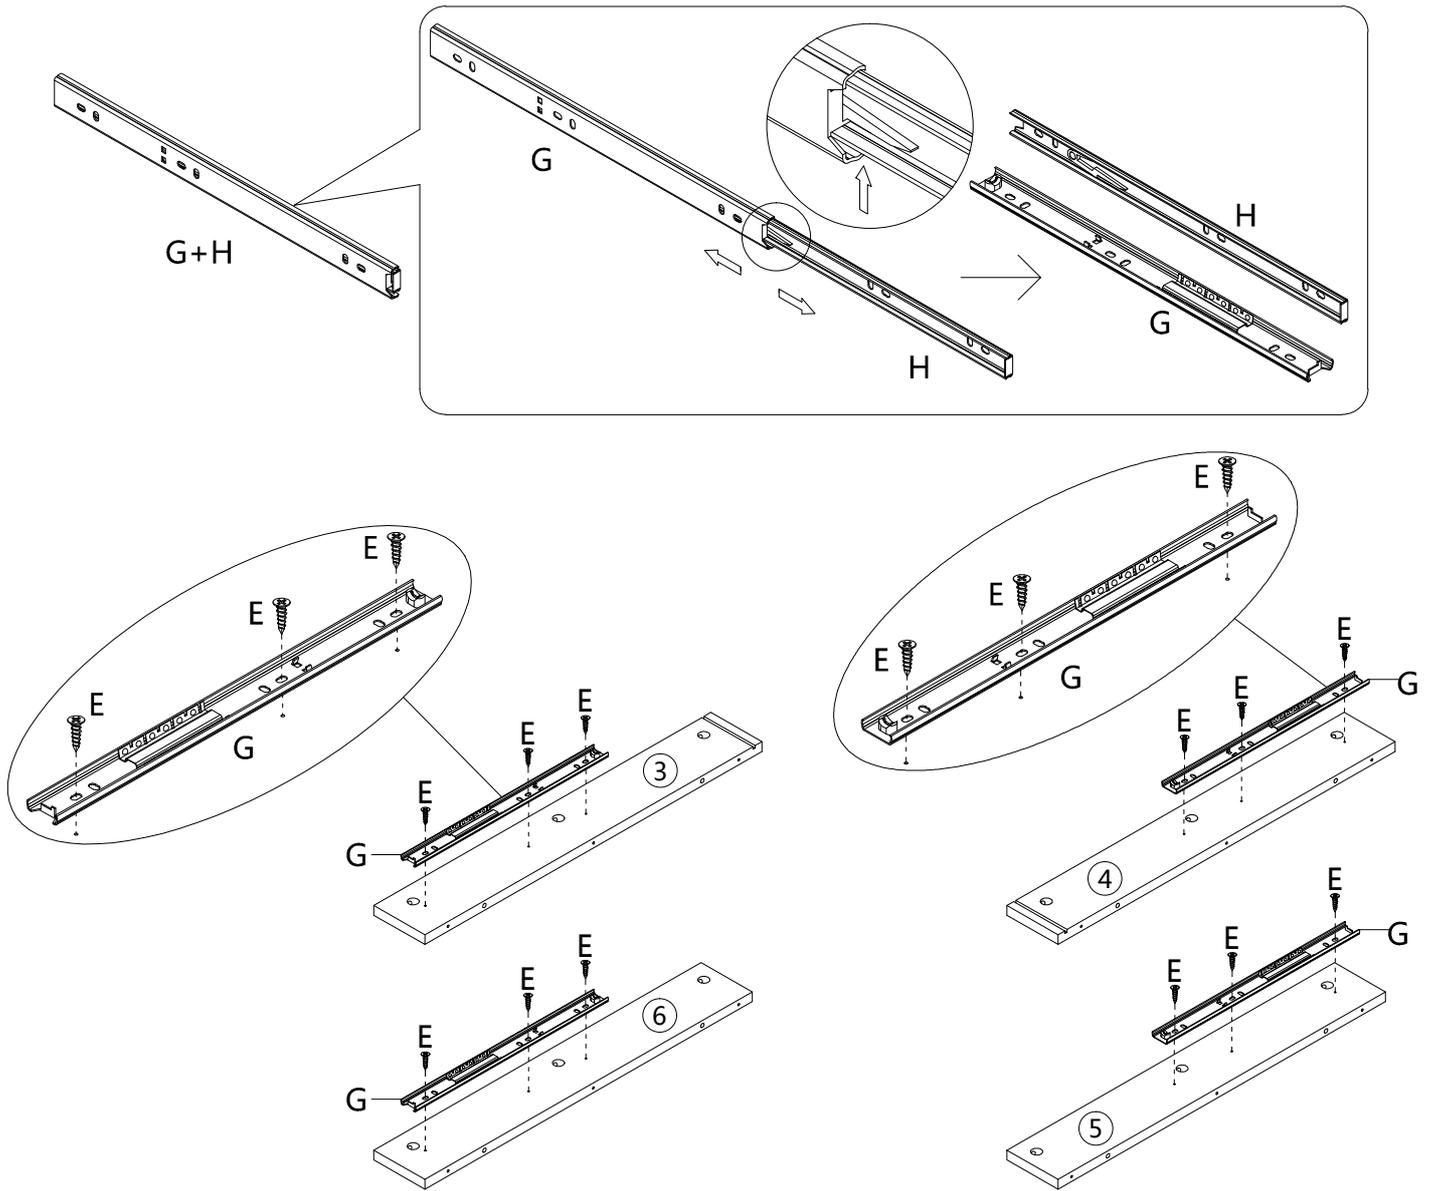


step 2

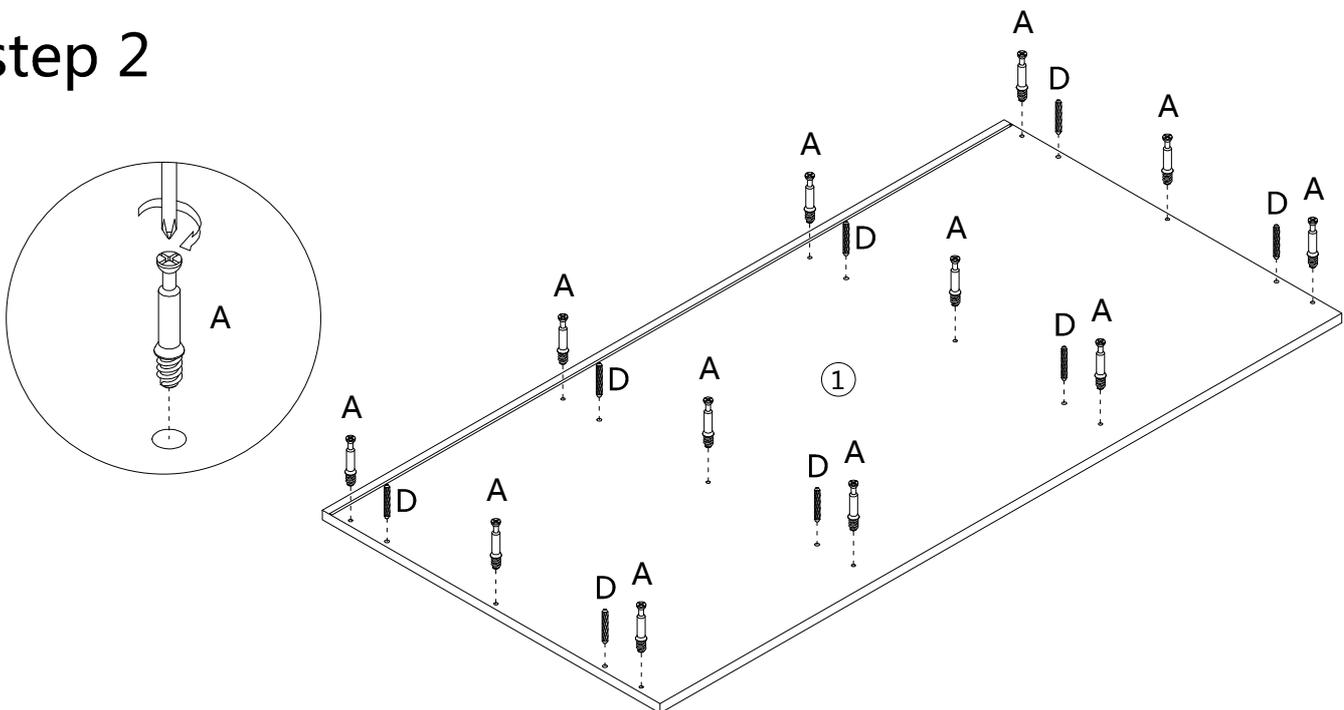


step 3

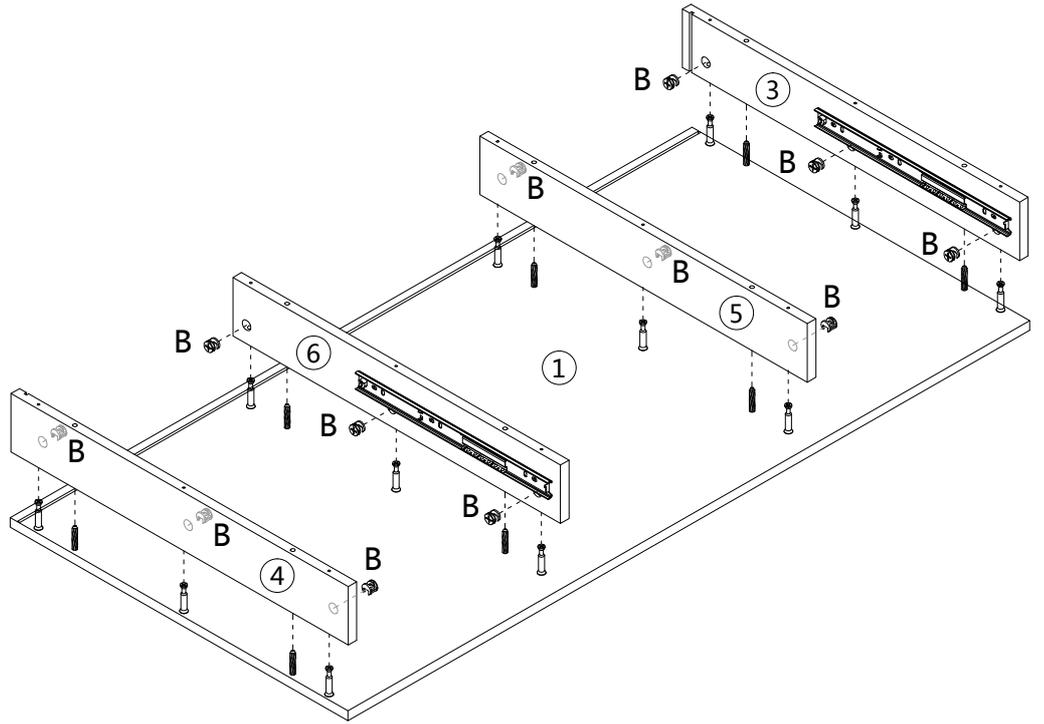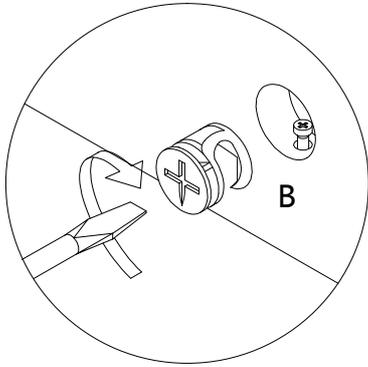


step 4

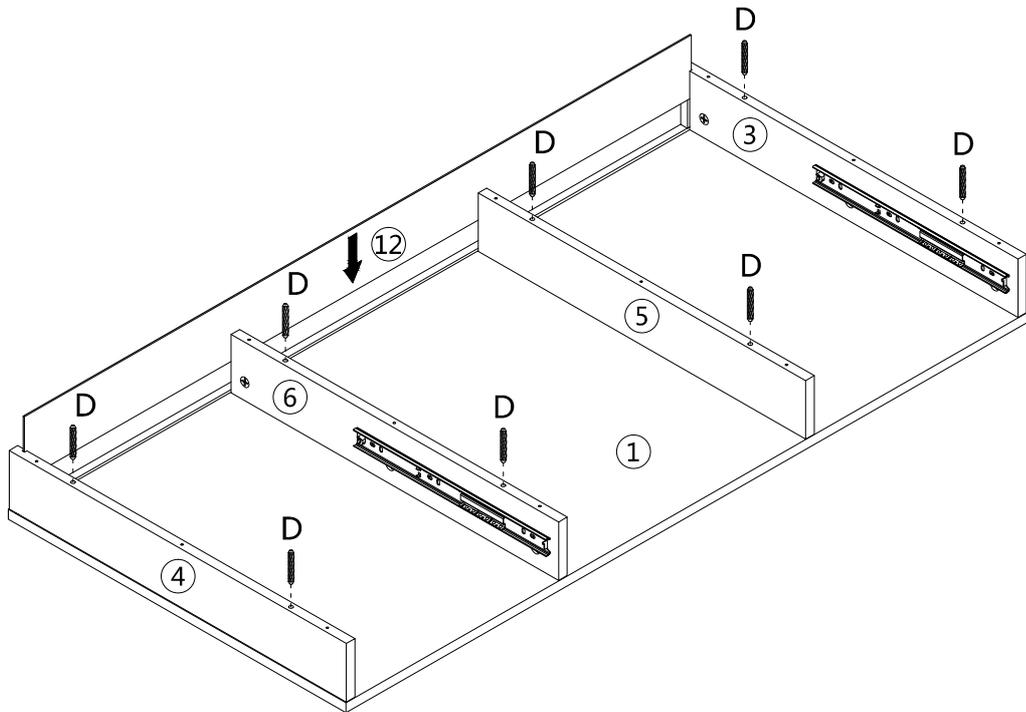


step 5

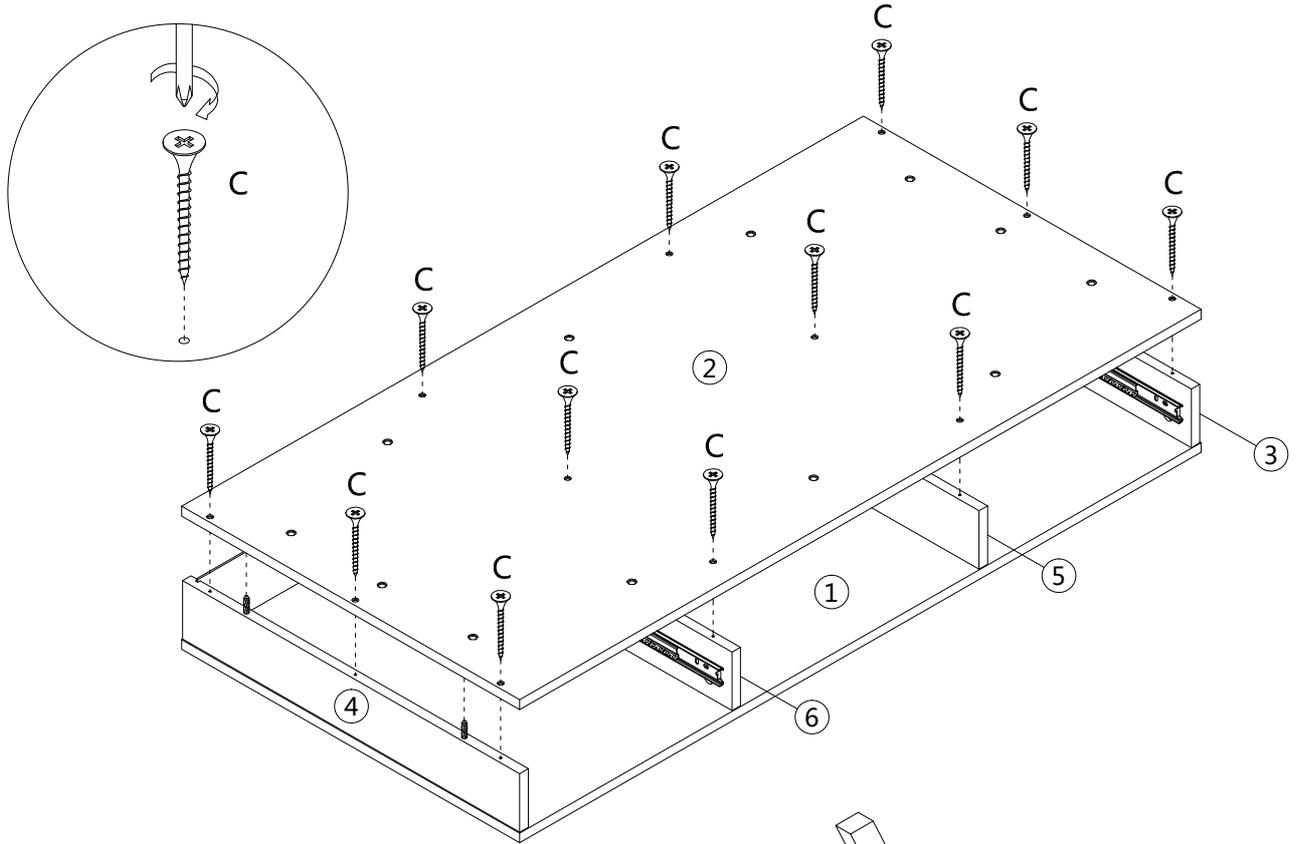


step 6

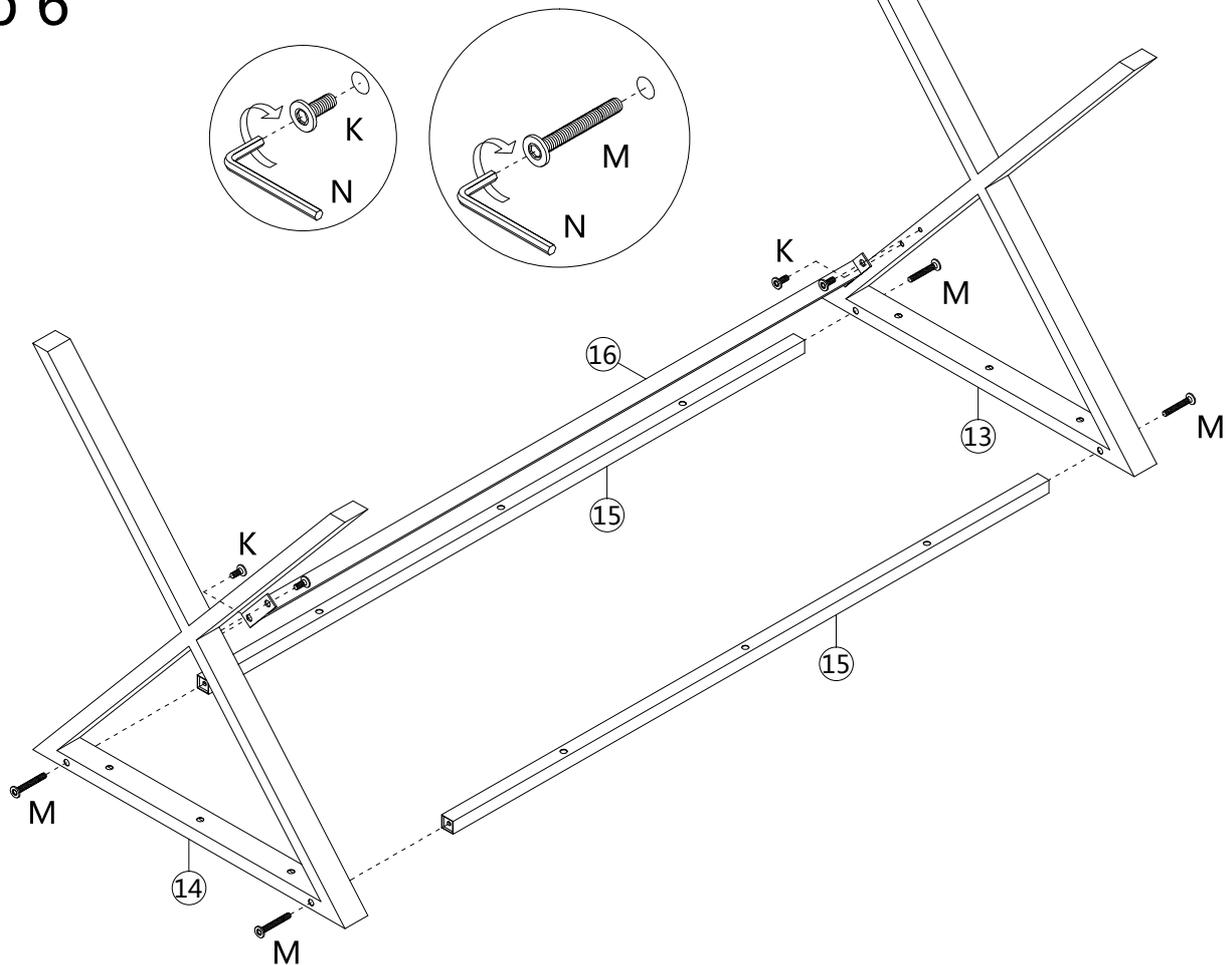


step 7

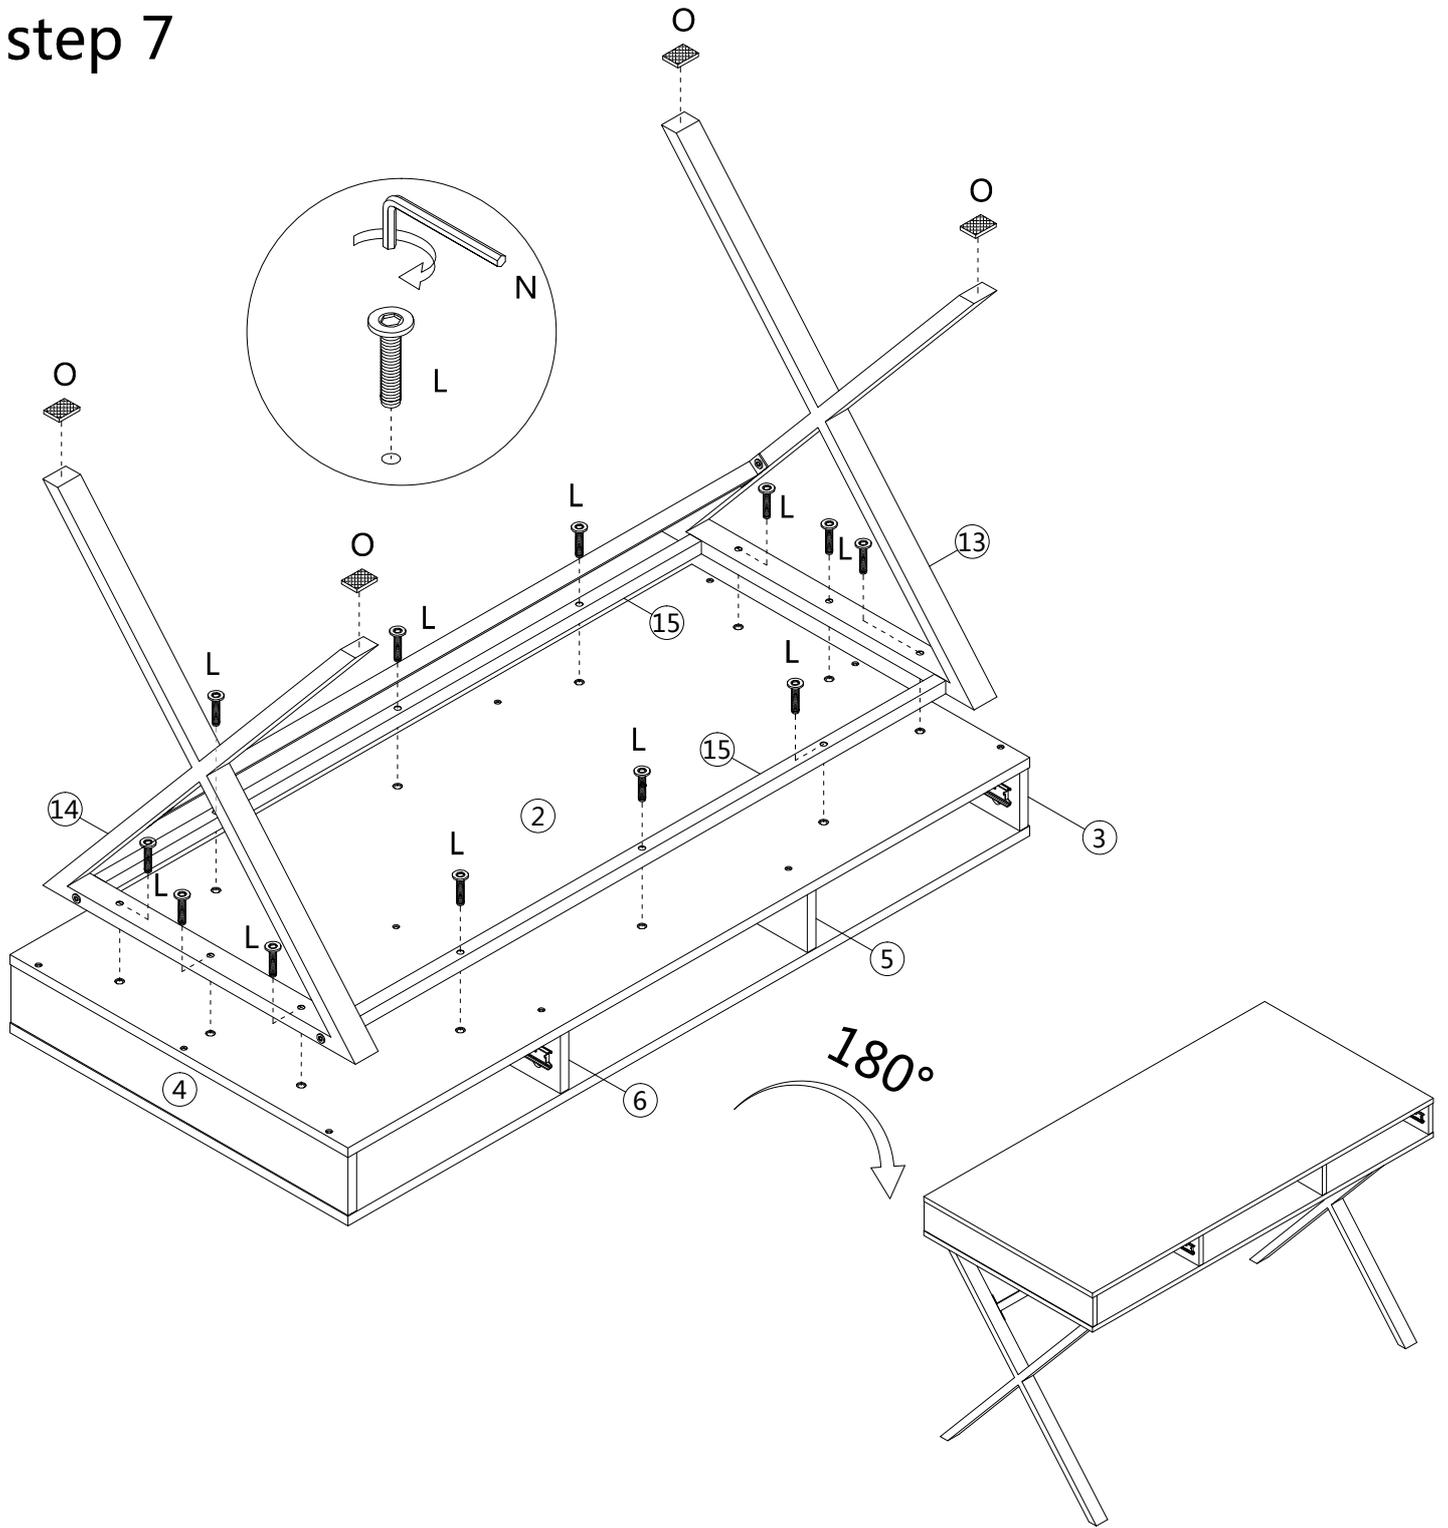


step 8

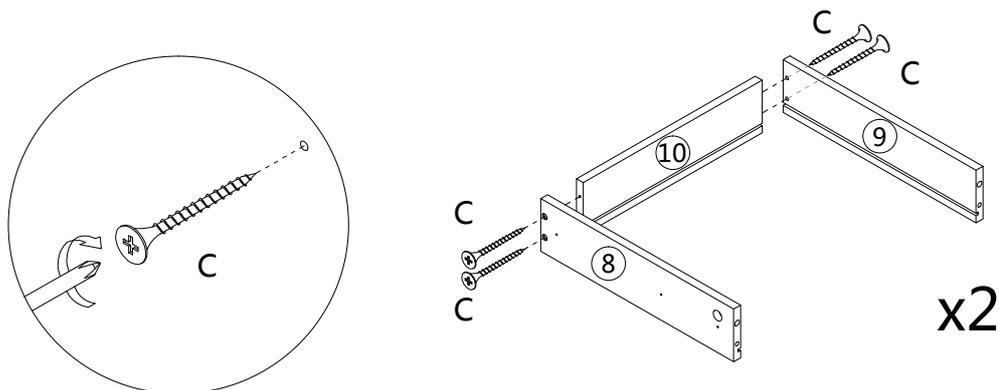



step 9

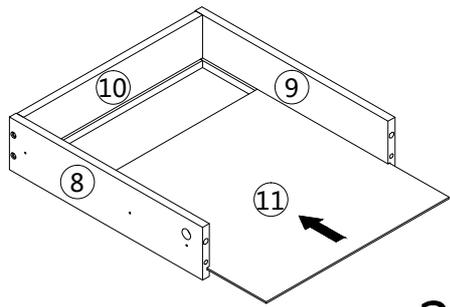



x2

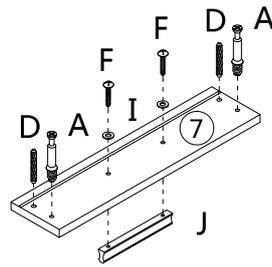

x2

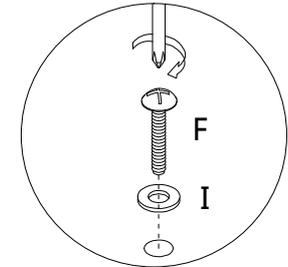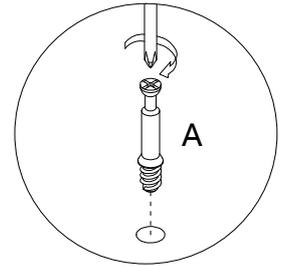


step 10

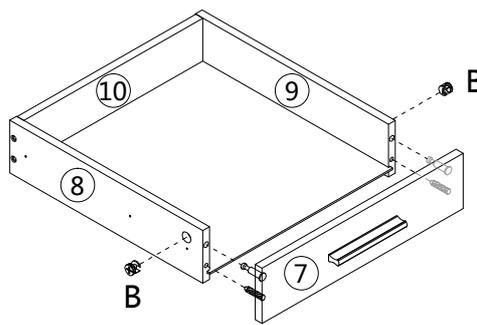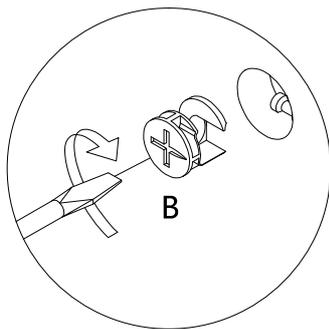

x2

step 11

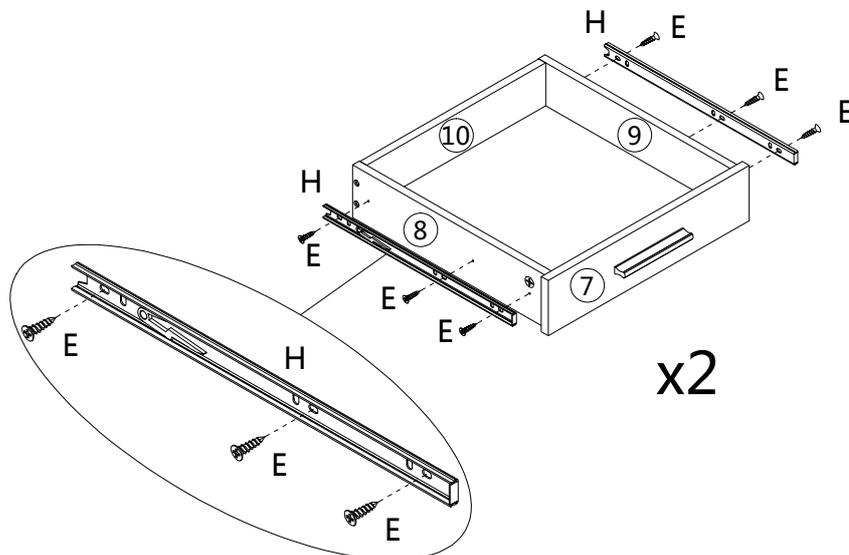

x2

step 12

