



BLŪ
west

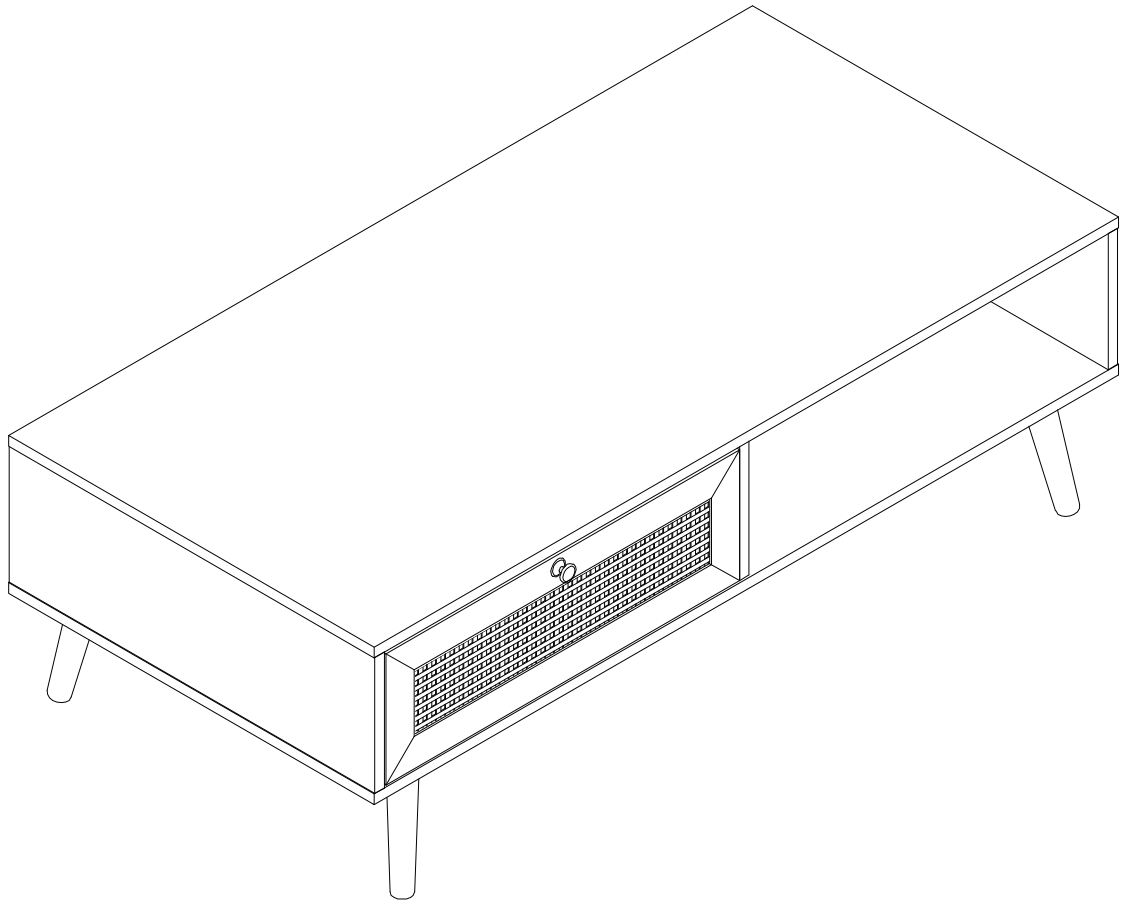









ASSEMBLY INSTRUCTION

81201.Z.02


PARTS LIST

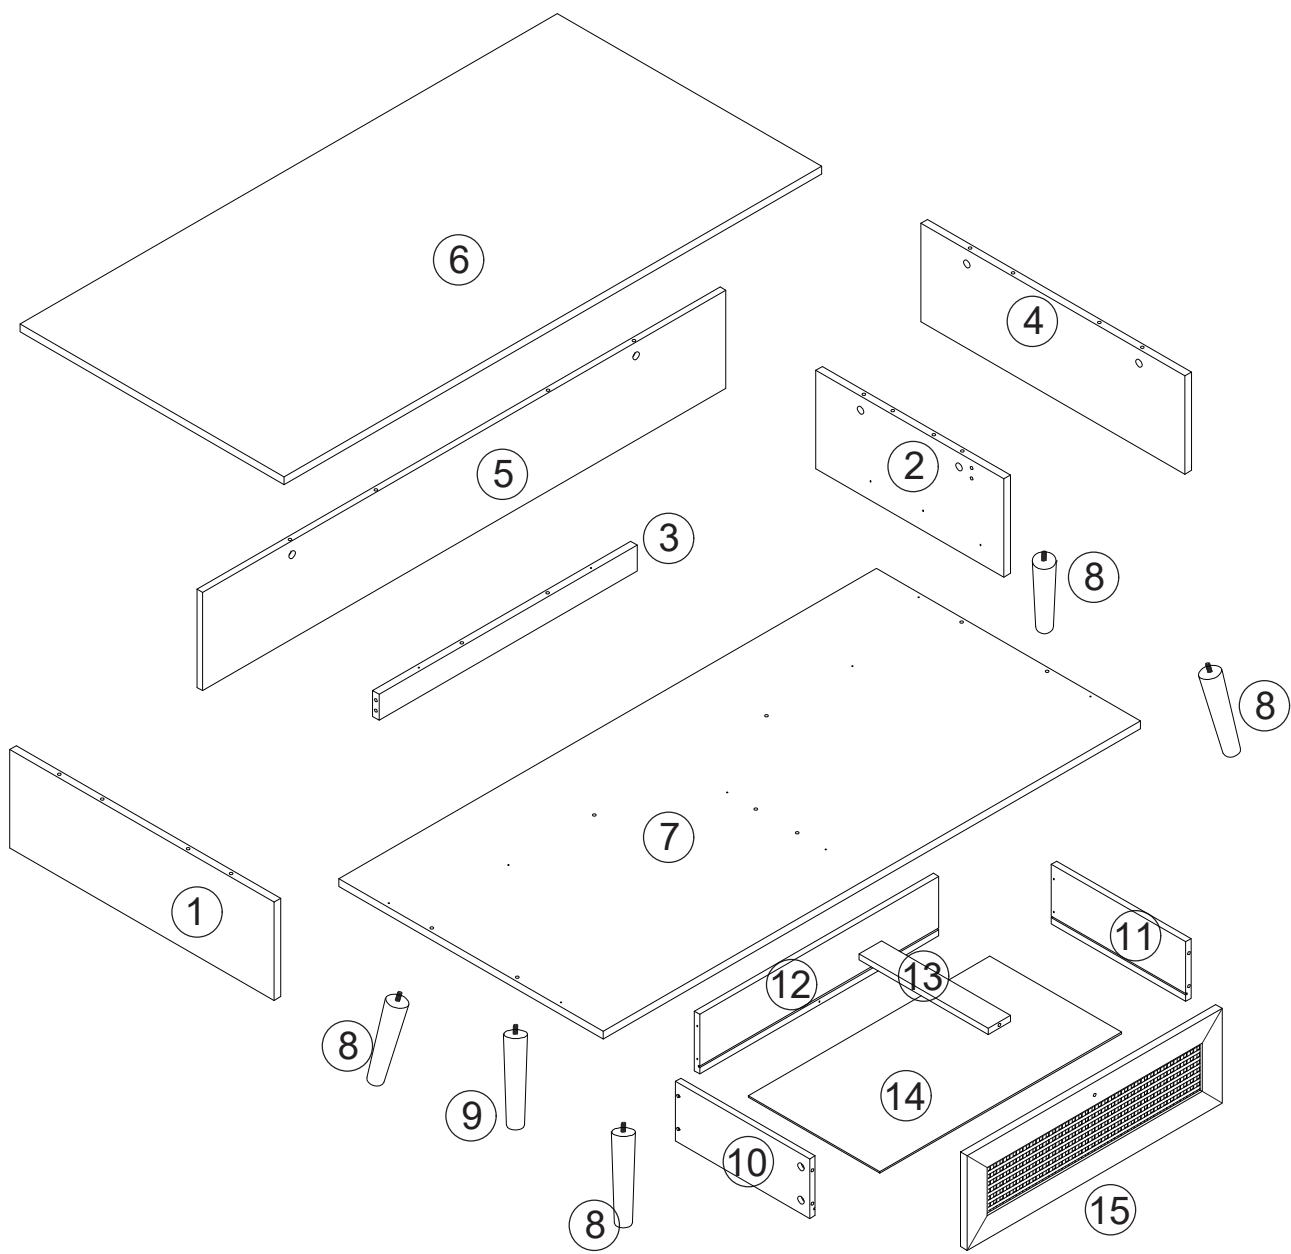


Hardware:

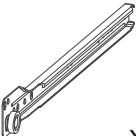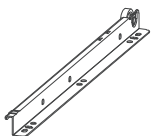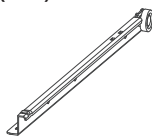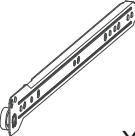A M6*35 mm  x15	B M15*10 mm  x15	C M5.8*30 mm  x20	D M4*35 mm  x10	E M3.5*12 mm  x12
F  x4	G M4*14 mm  x20	H M4*30mm  x5	I  x1	J M4*16mm  x1
K  x4	L  x1	(CL)  x1	(DL)  x1	(DR)  x1
(CR)  x1				




STEP 1

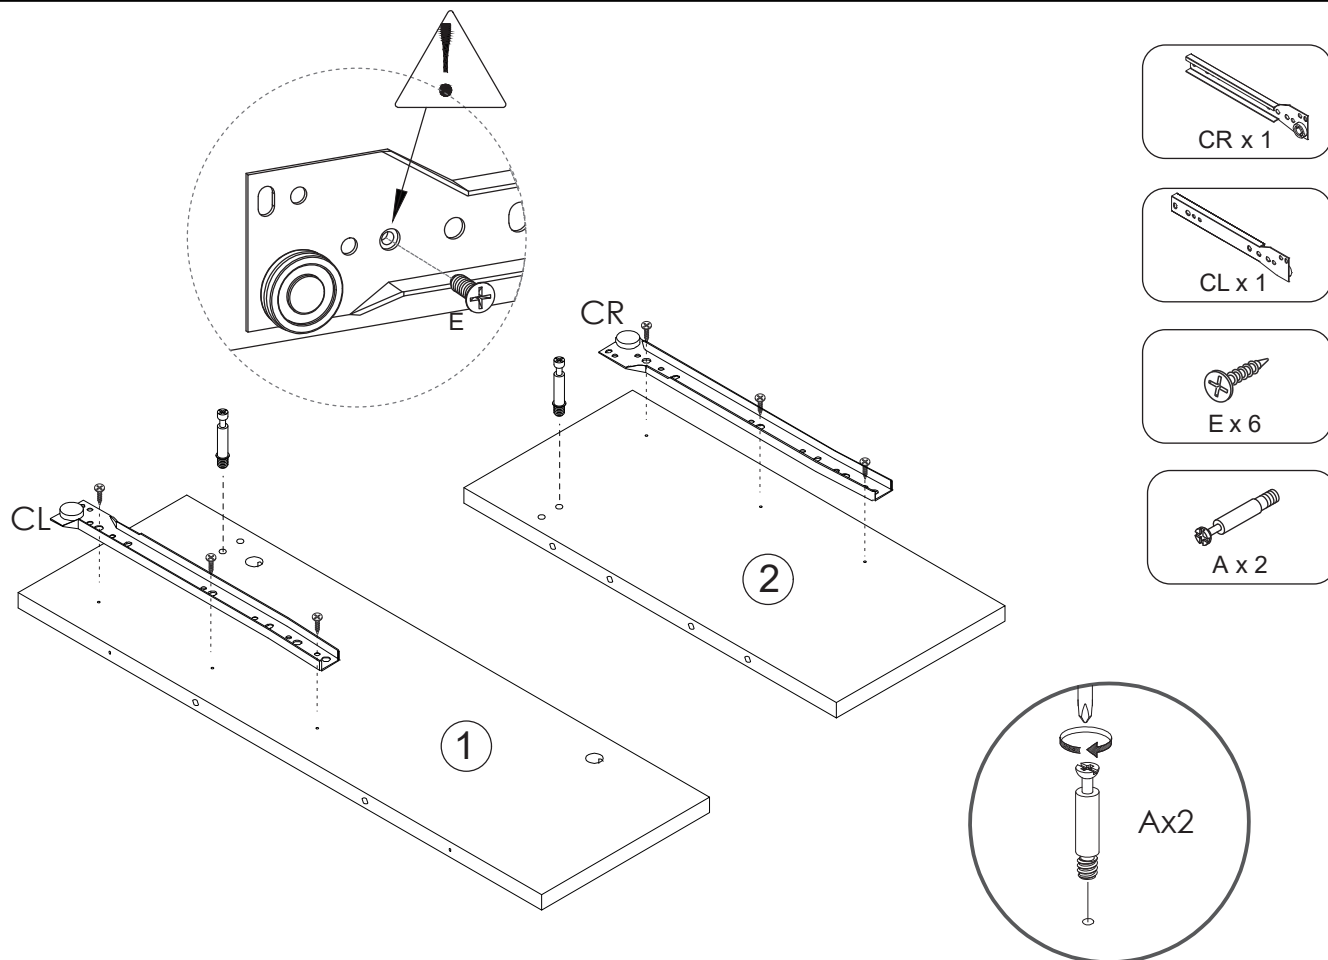






STEP 2

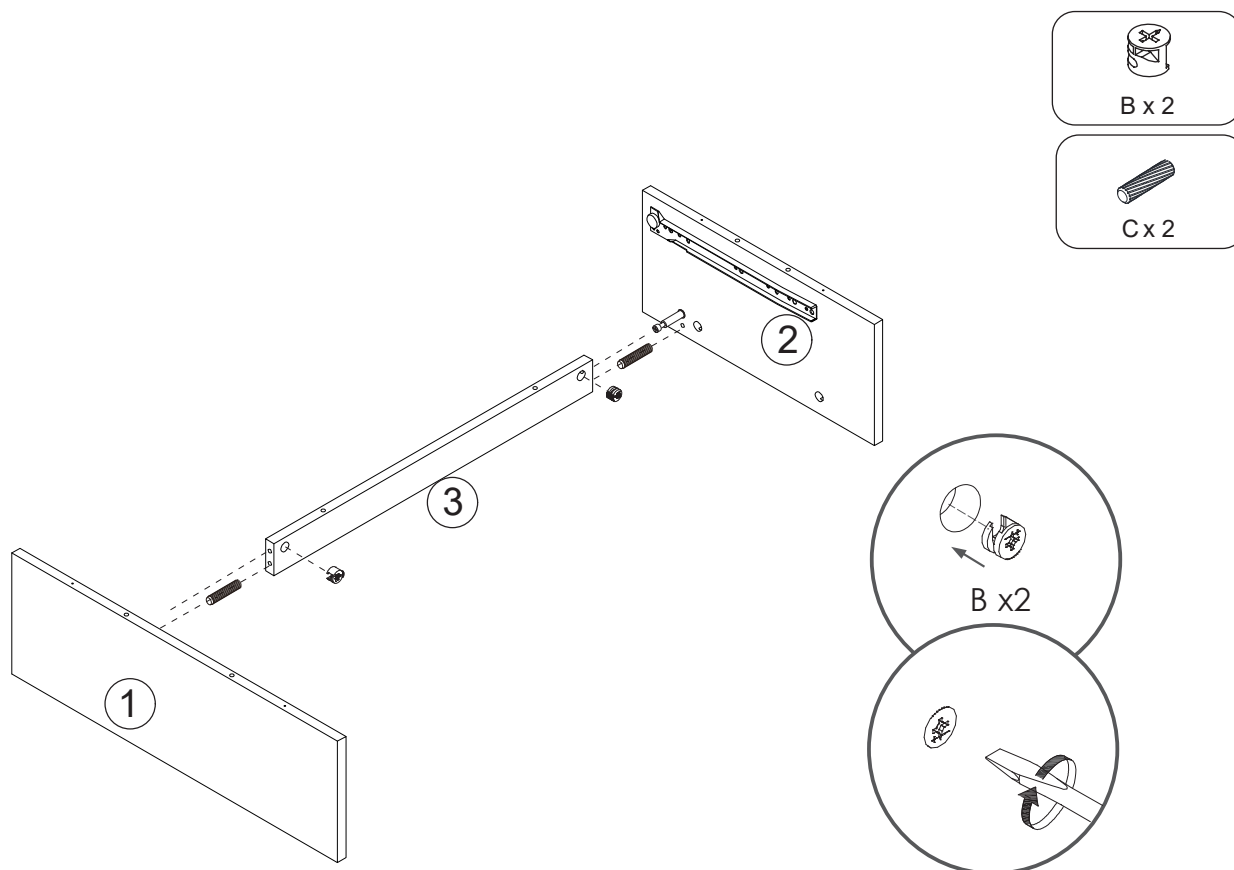







STEP 3

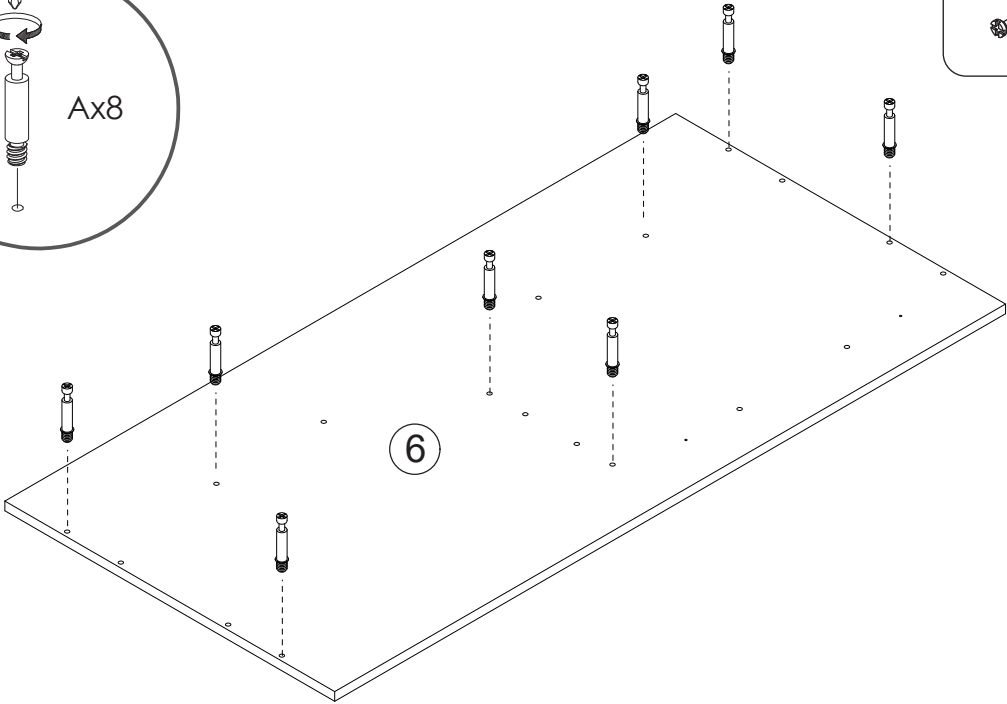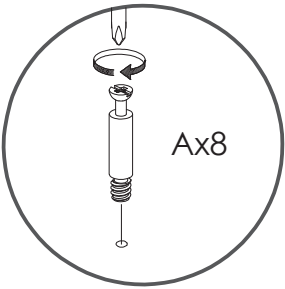







STEP 4

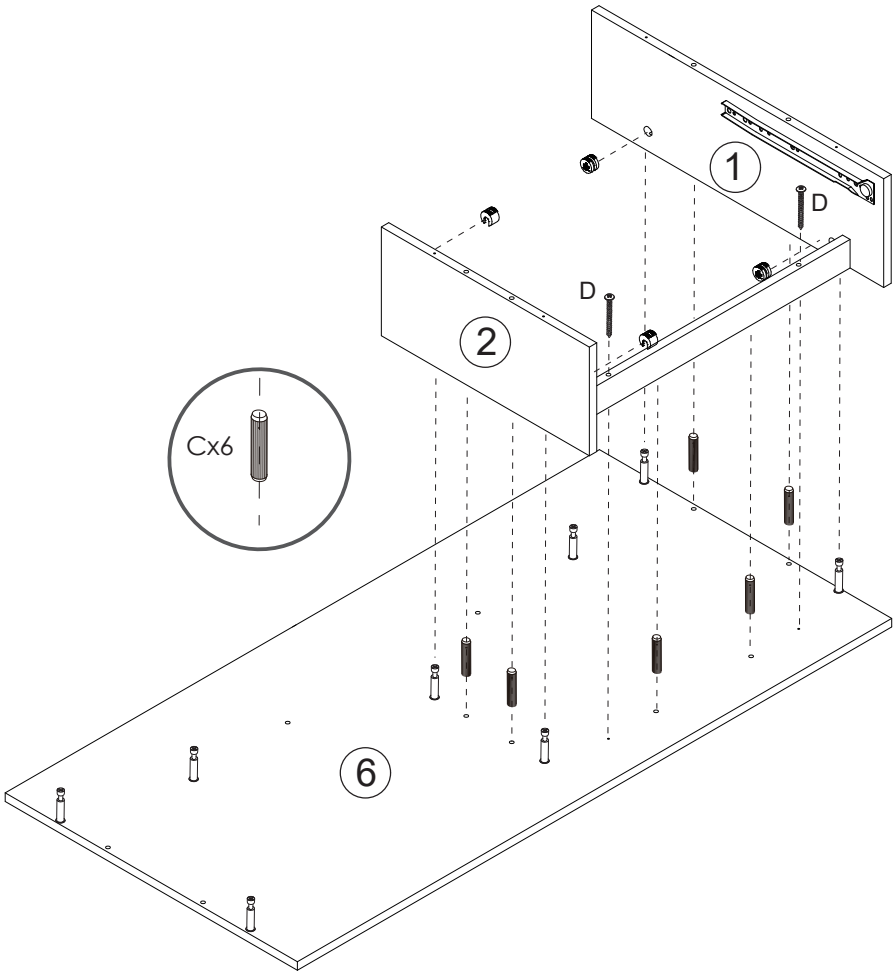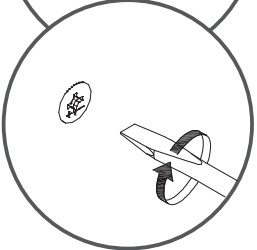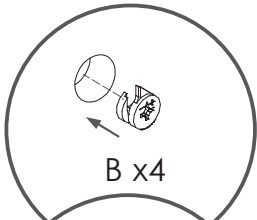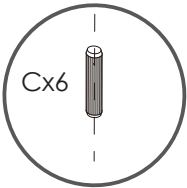


STEP 5

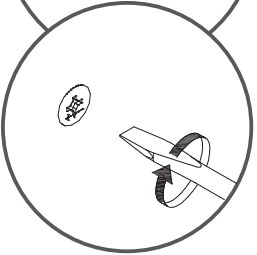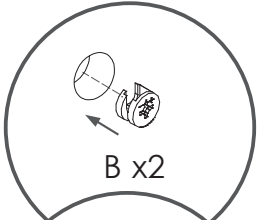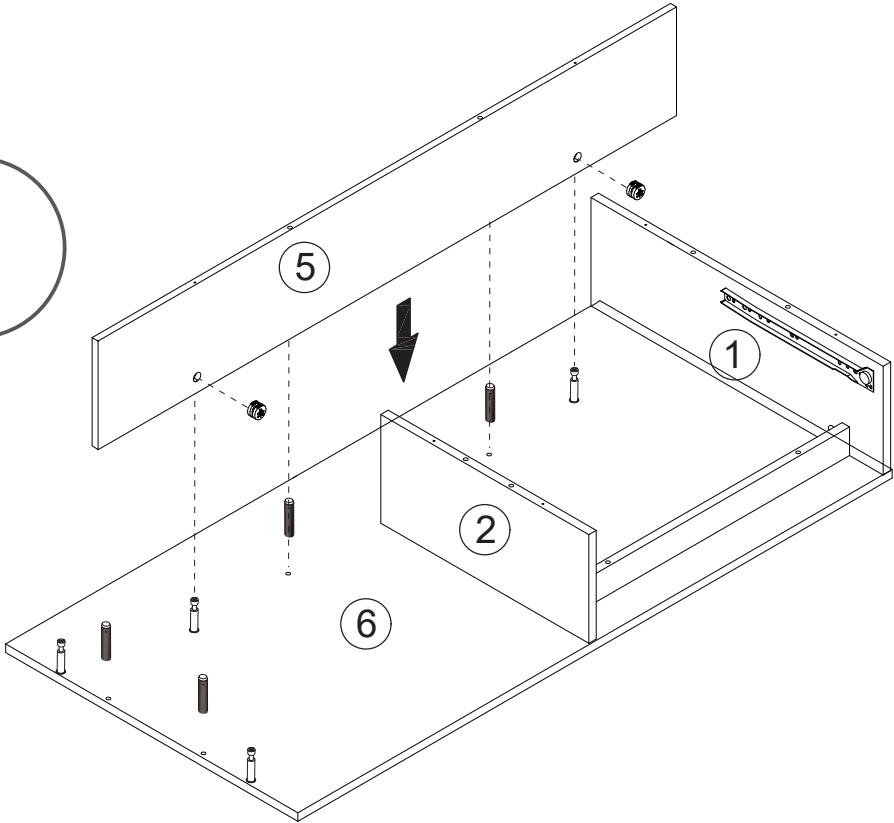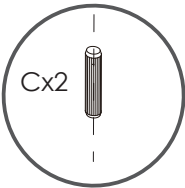


STEP 6

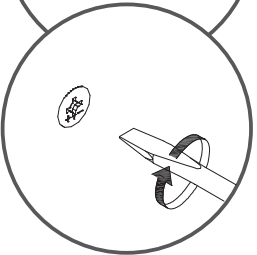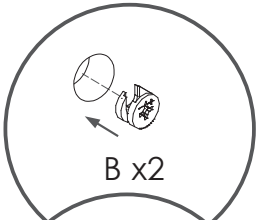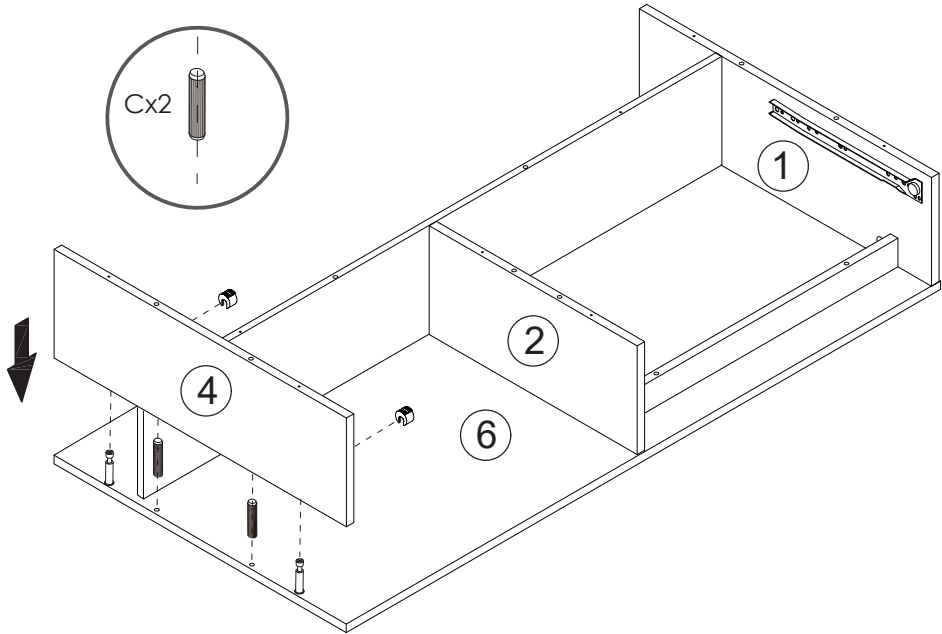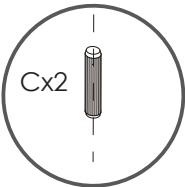



STEP 7

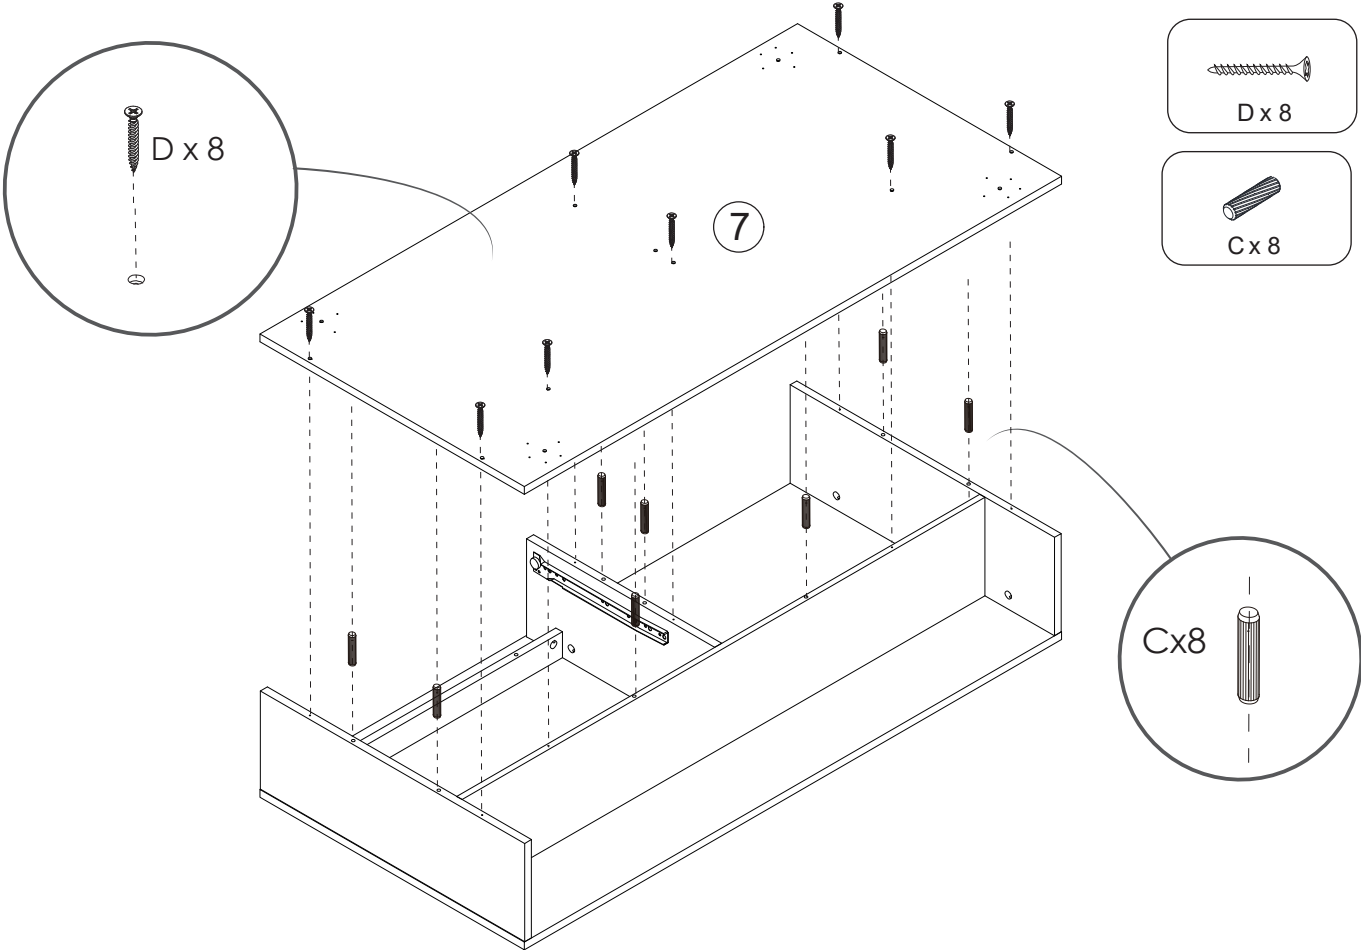


STEP 8

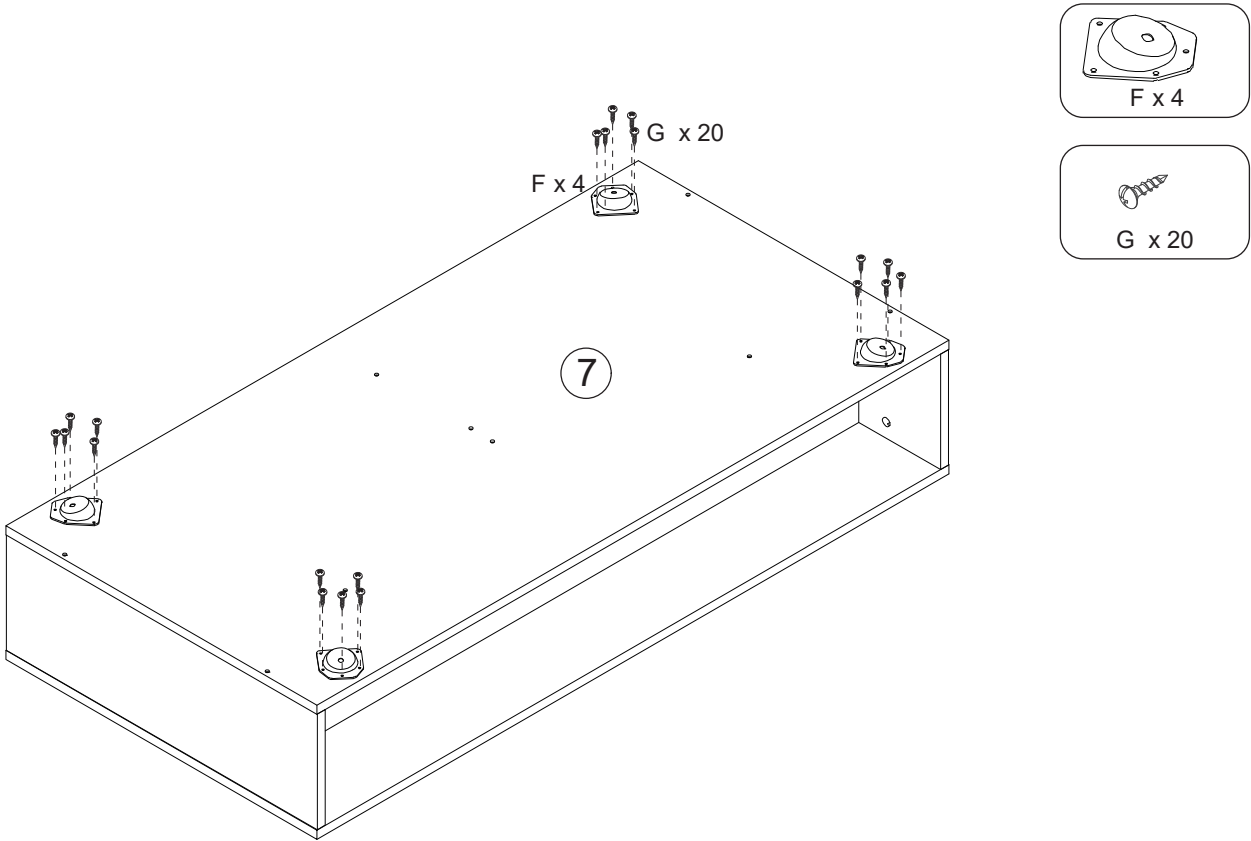


STEP 9

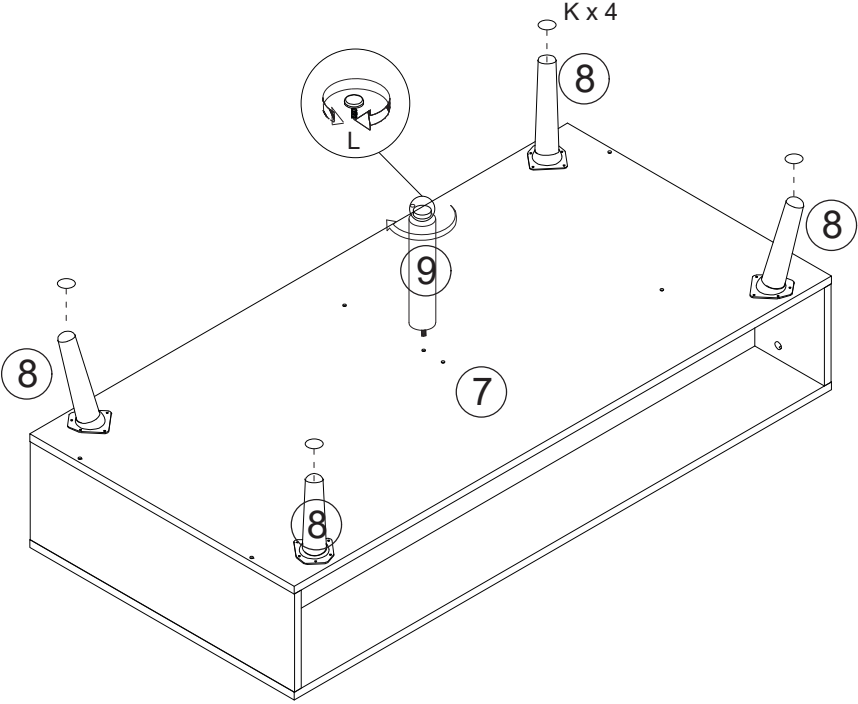

STEP 10

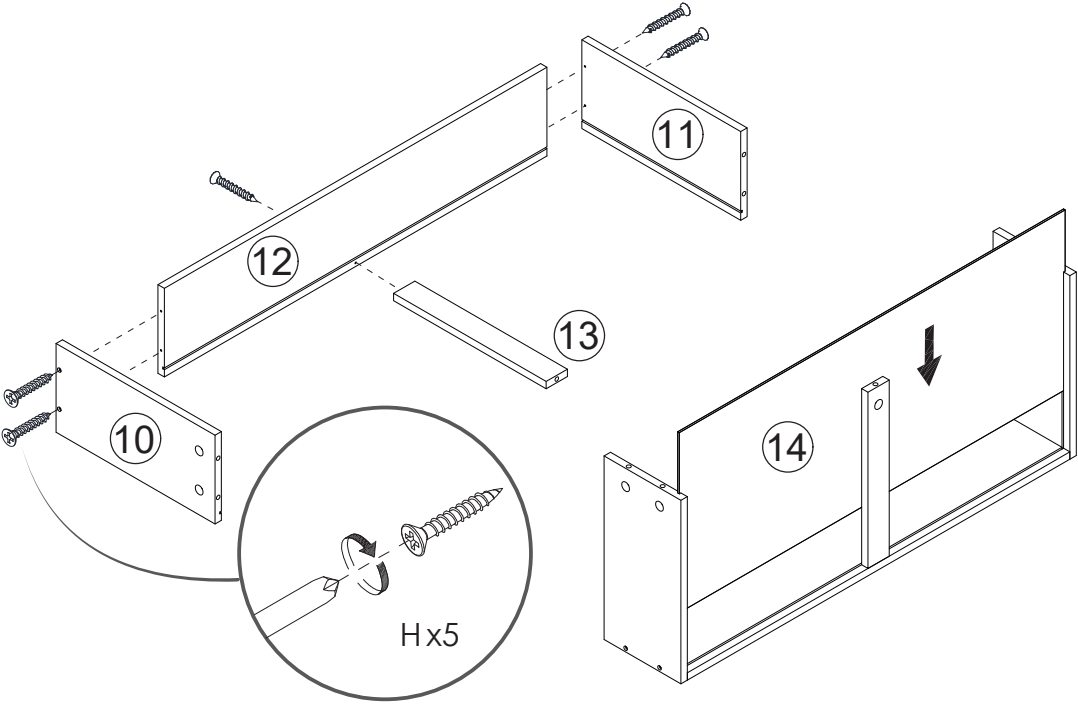

STEP 11

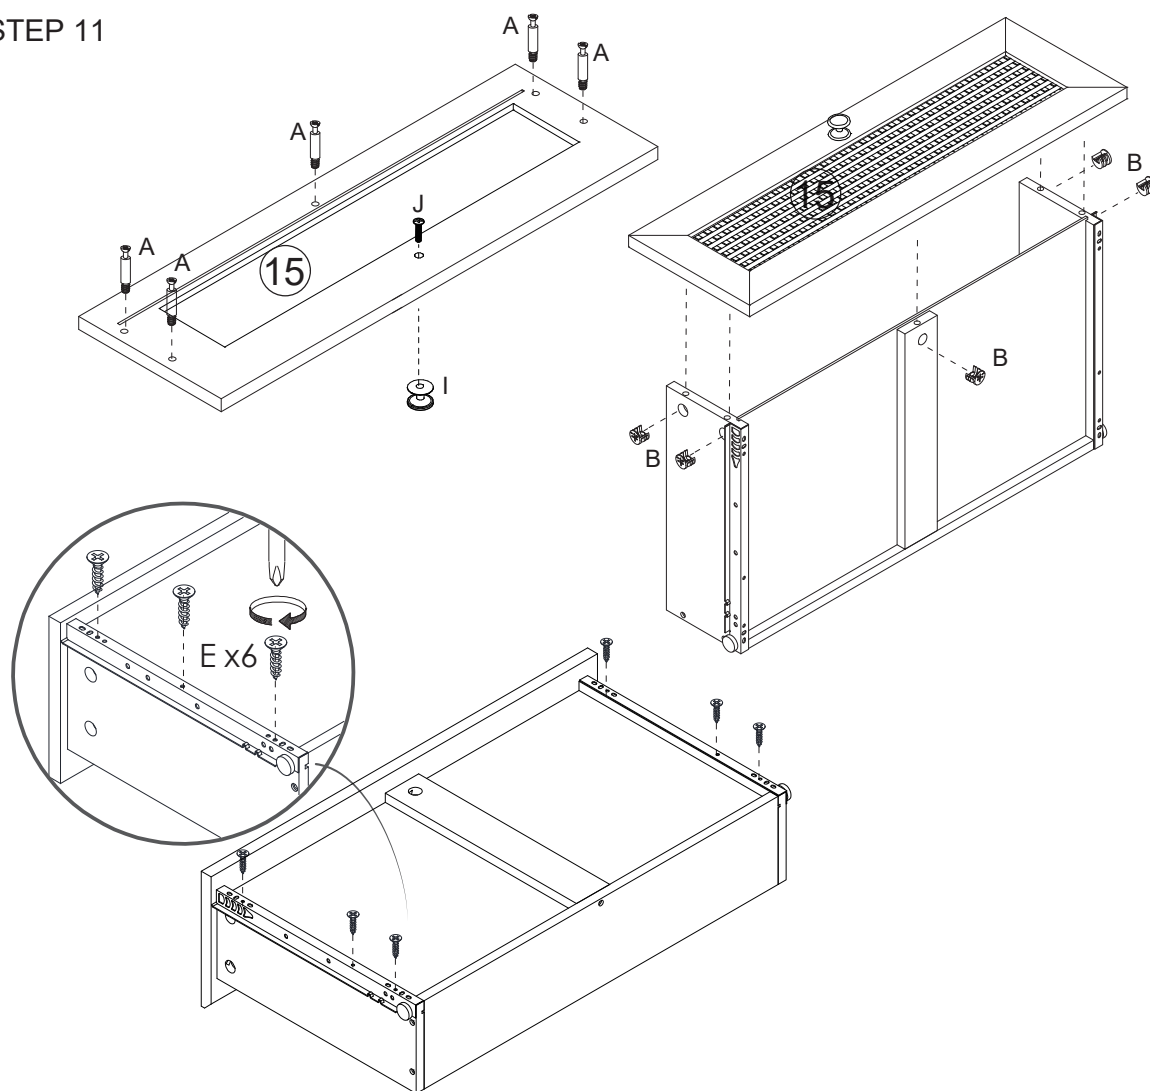

B x 5

A x 5

I x 1

J x 1

E x 6

DL x 1

DR x 1

STEP 12

