



BLŪ
west

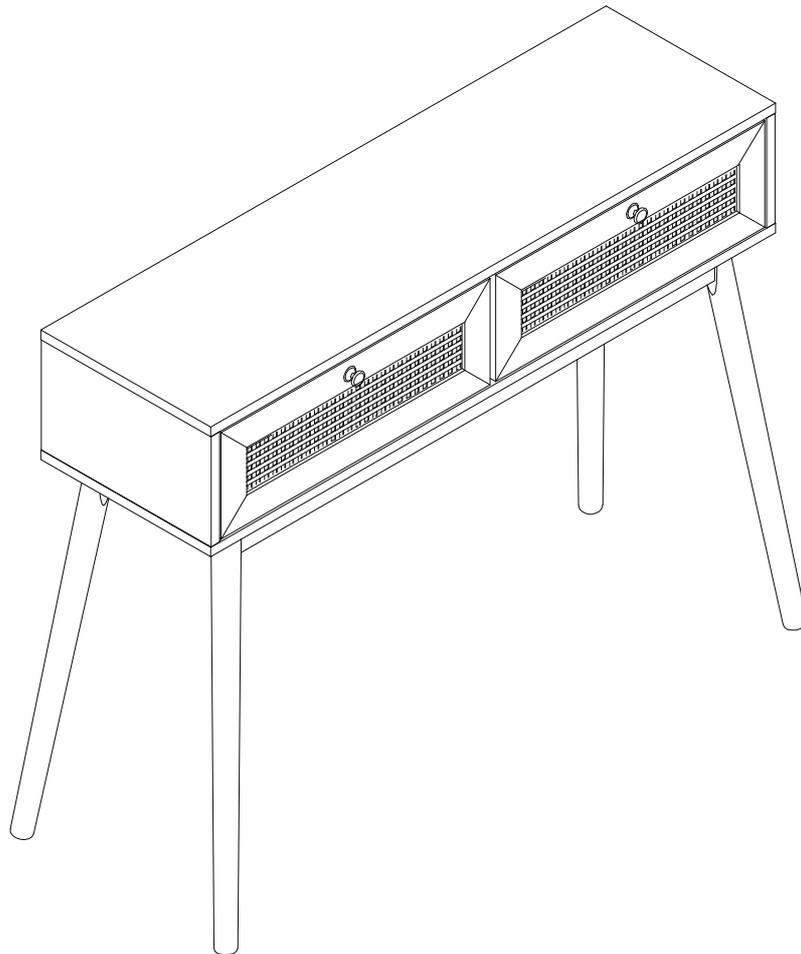






ASSEMBLY INSTRUCTION

81203.Z.02


PARTS LIST

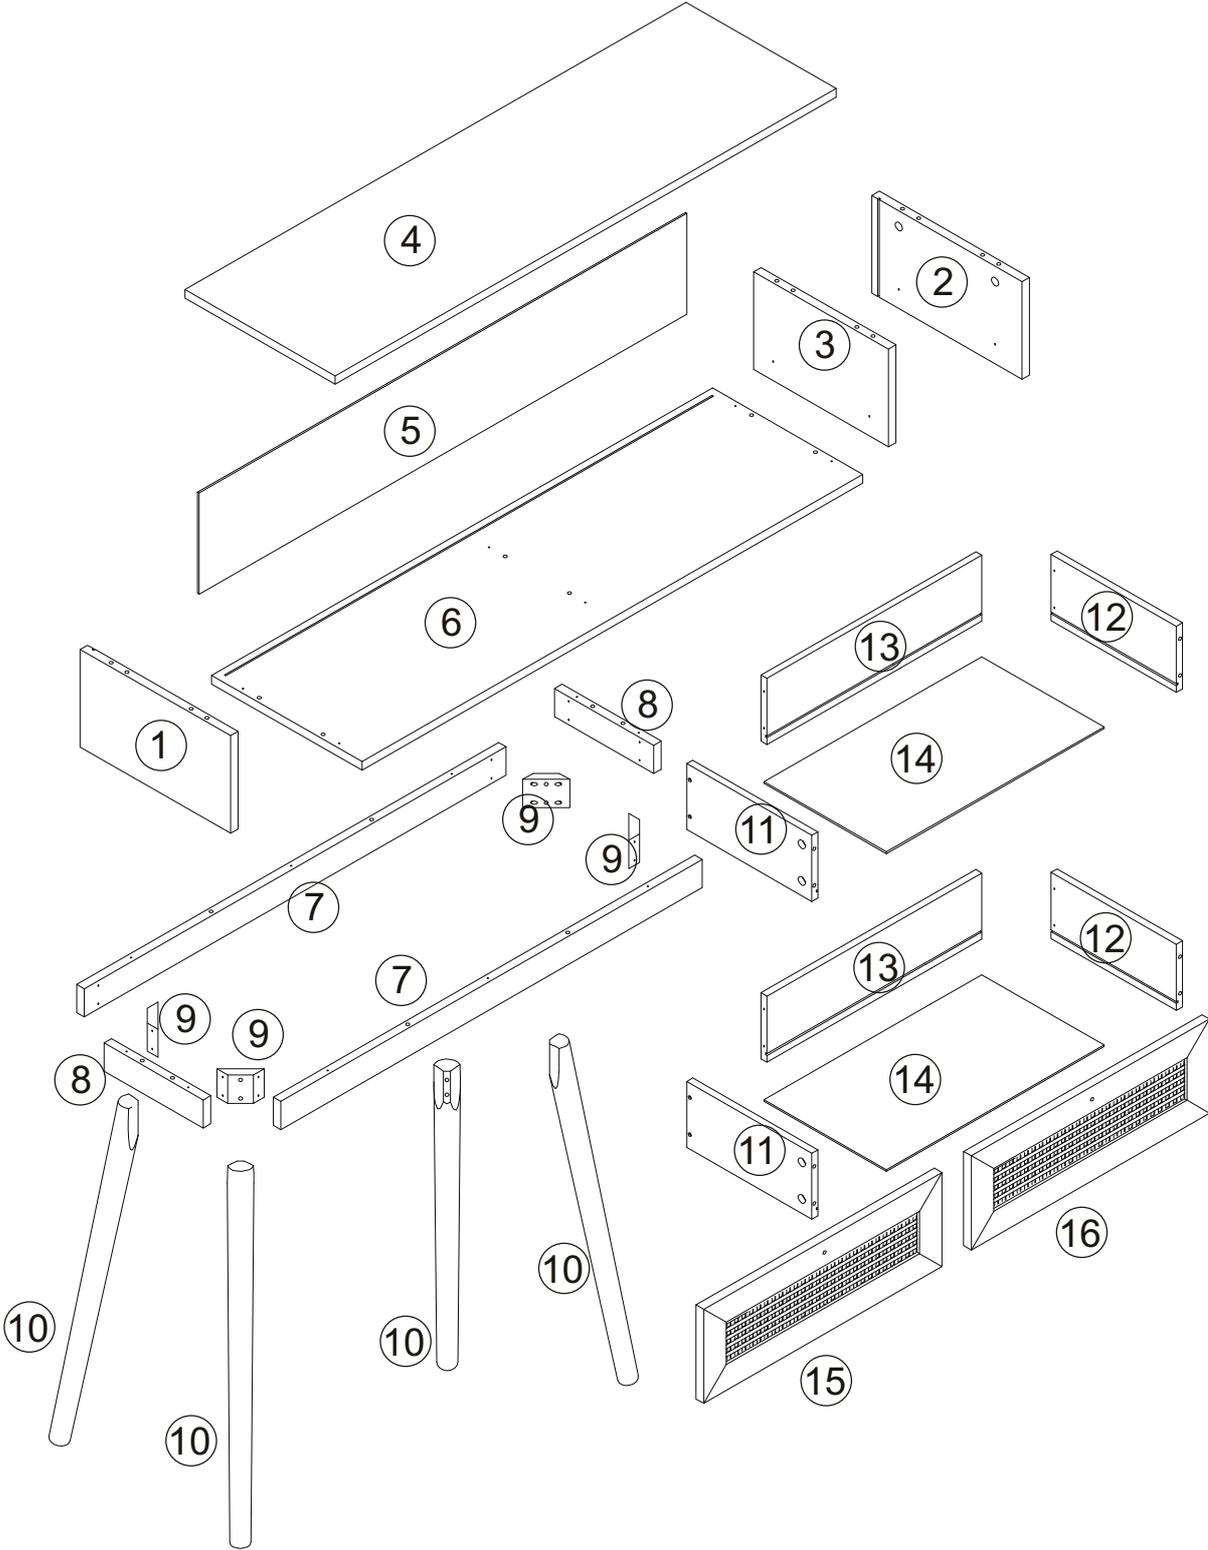


Hardware:

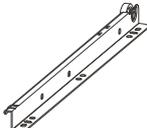A M6*35 mm  x14	B M15*10 mm  x14	C M5.8*30 mm  x20	D M4*35 mm  x8	E M3.5*12 mm  x16
F M4*25 mm  x16	G M4*50 mm  x10	H  x8	I M6*60 mm  x8	J  x1
K  x2	L M4*14 mm  x2	M  x2	N M4*30mm  x8	O  x2
P M4*16mm  x2	Q  x4	(CL)  x2	(DL)  x2	(DR)  x2
(CR)  x2				


STEP 1

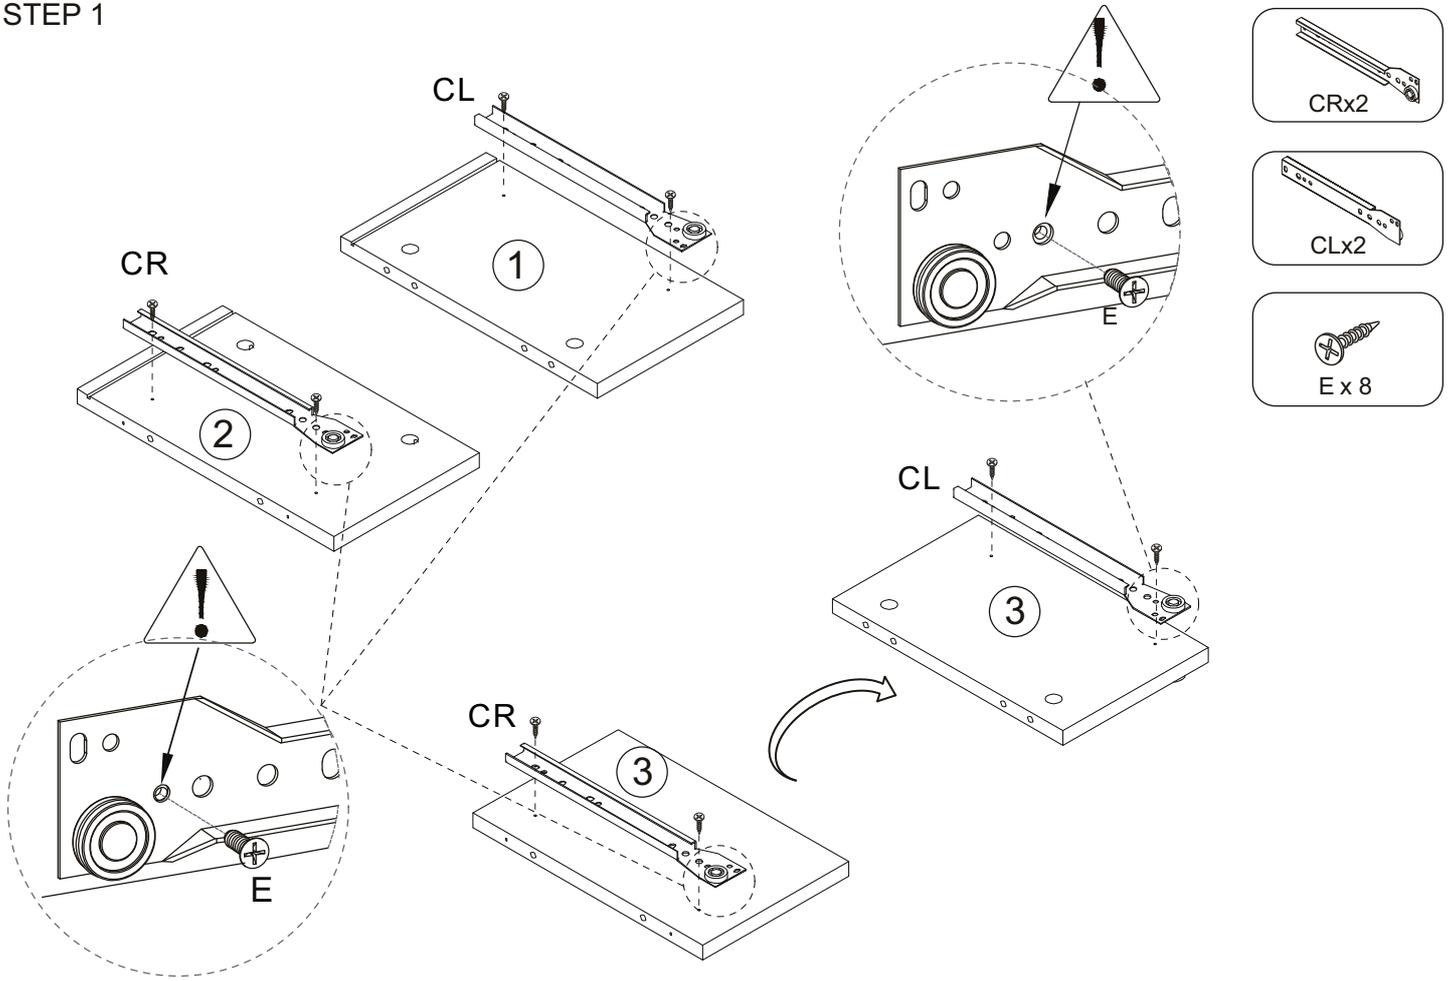


STEP 2

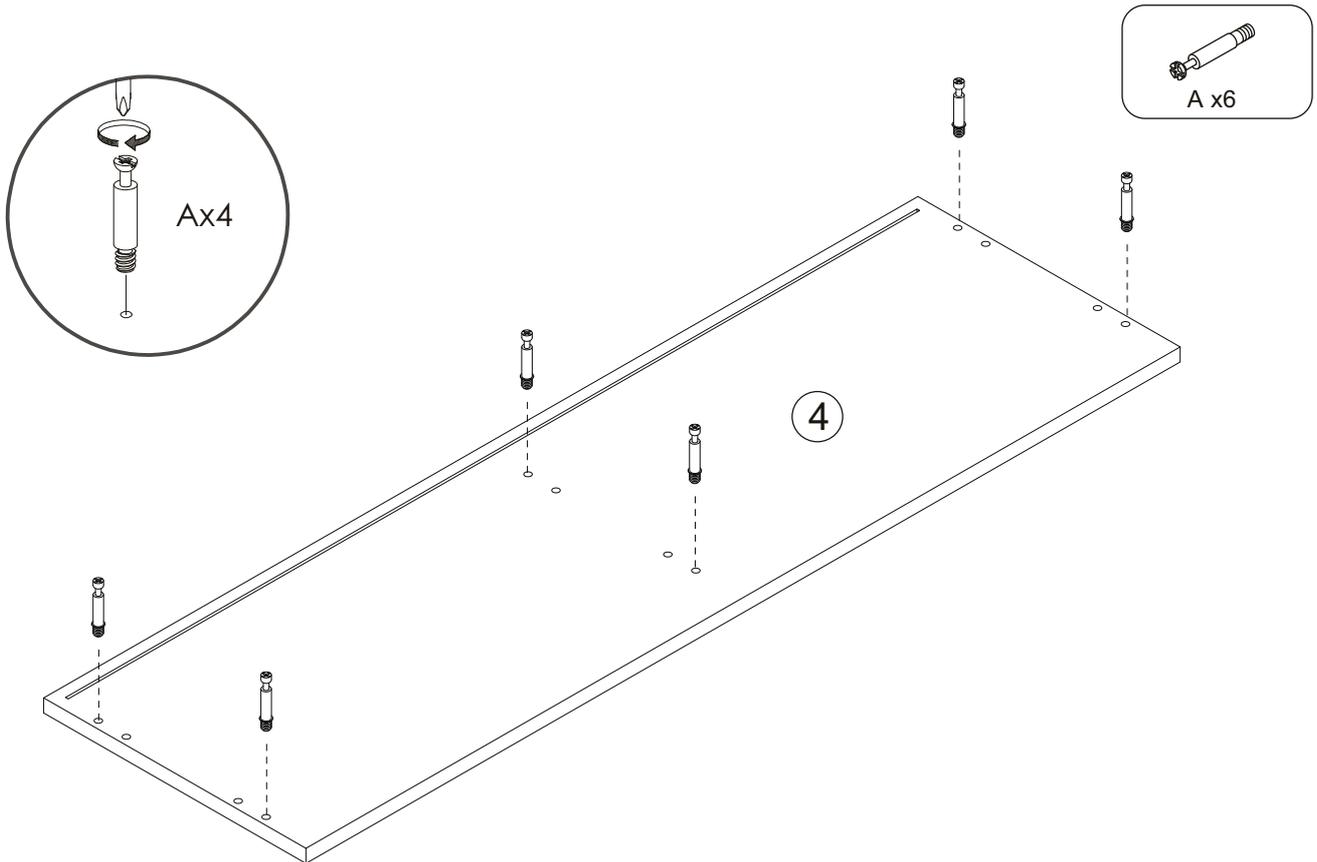




STEP 3

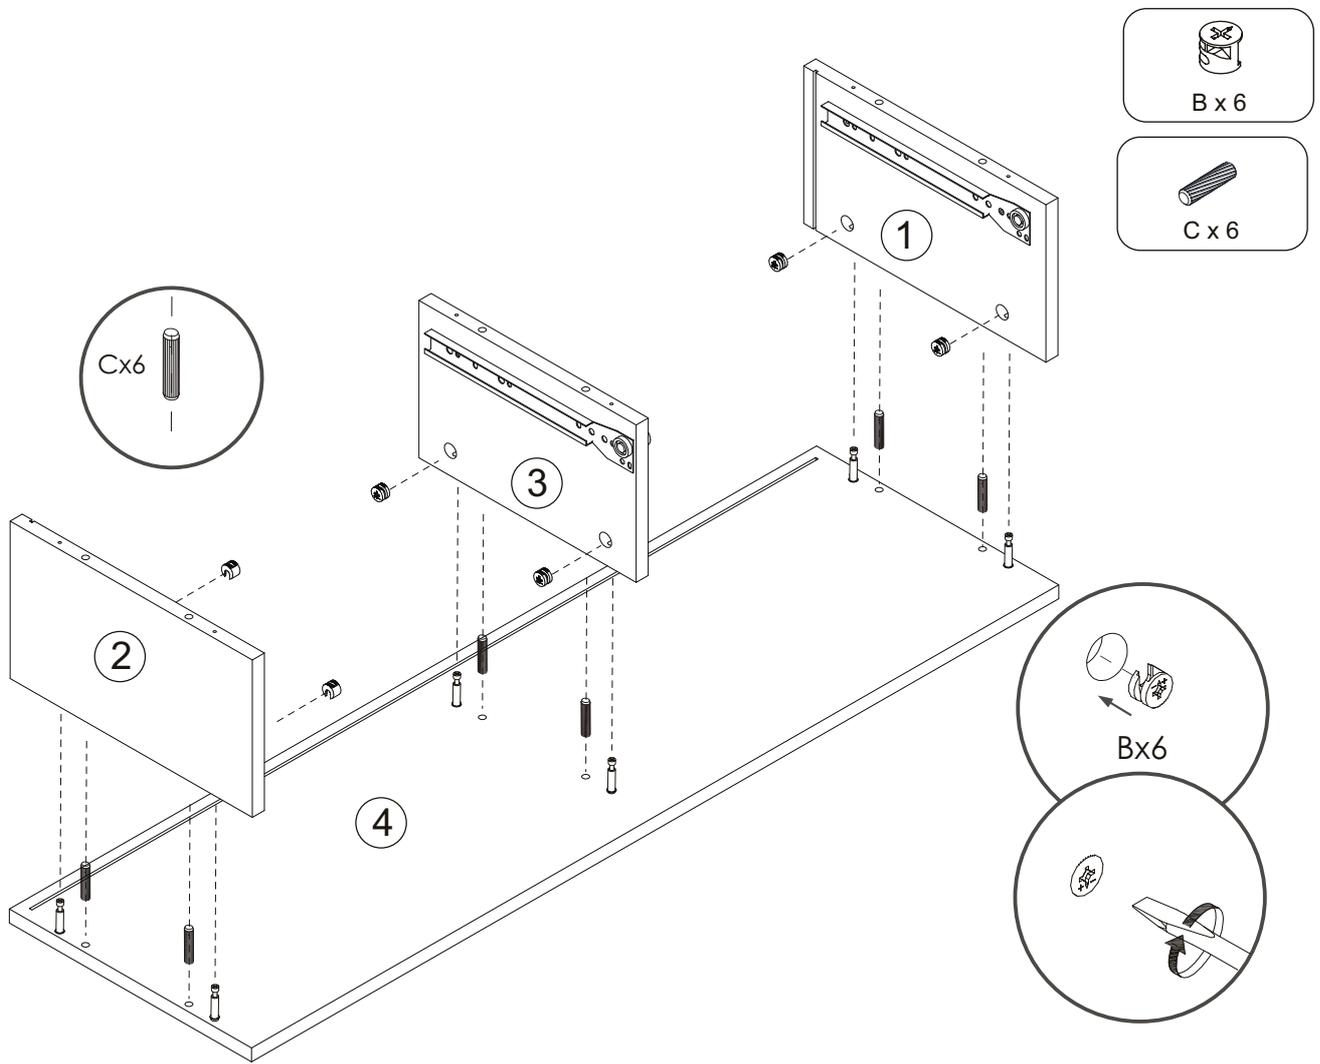



STEP 4

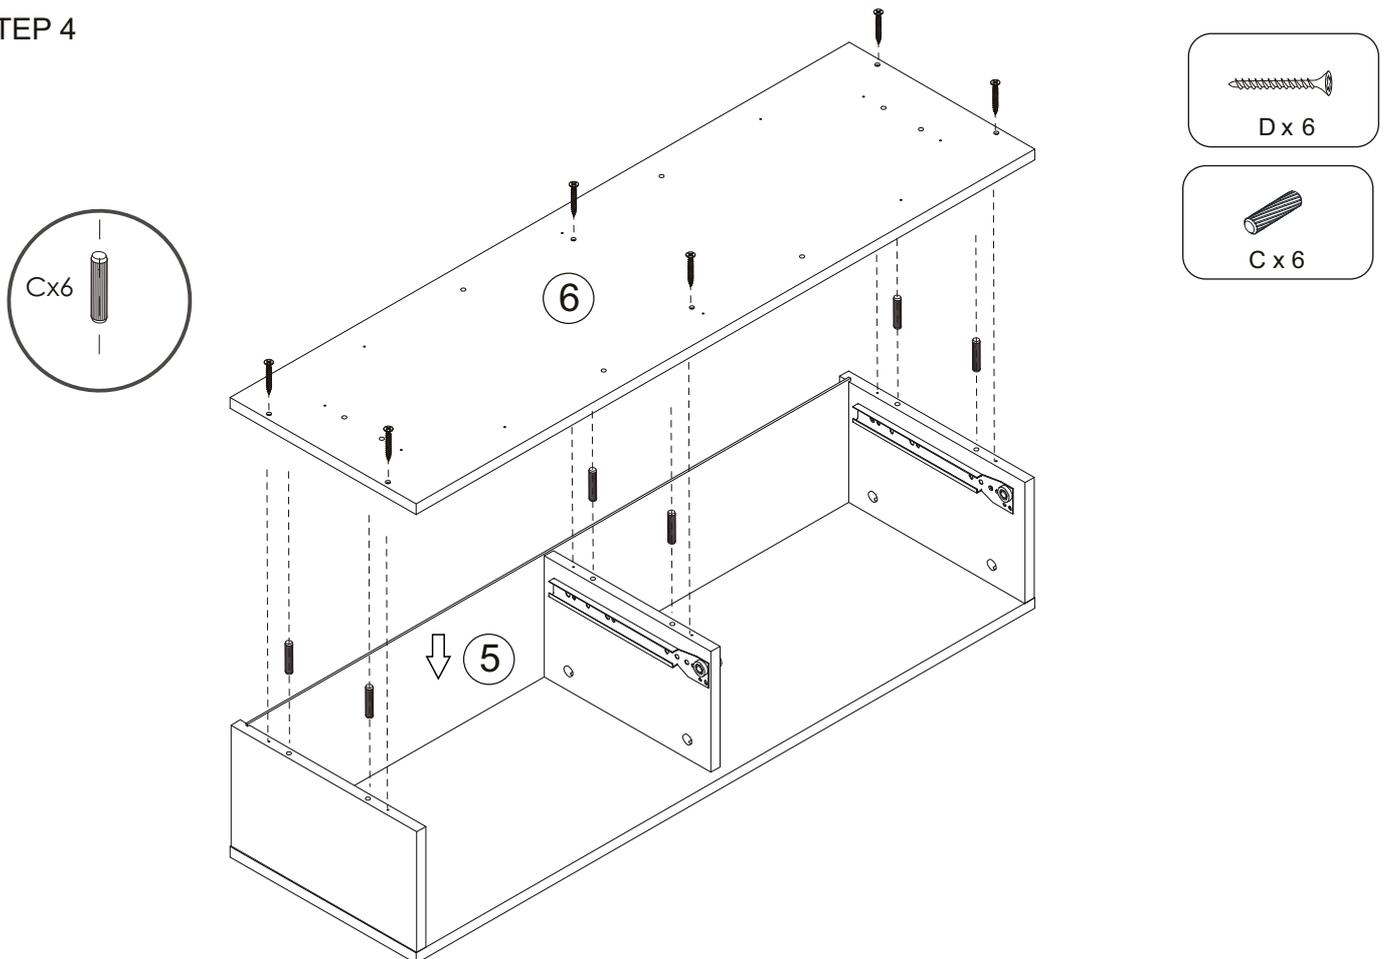


STEP 5

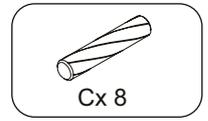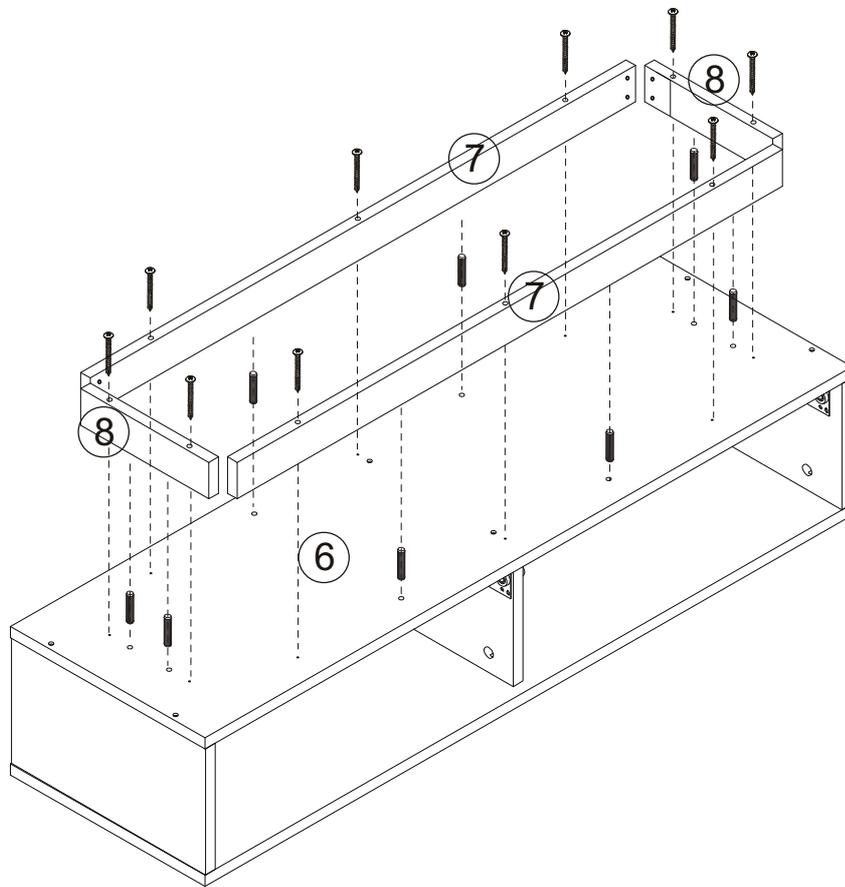

STEP 6



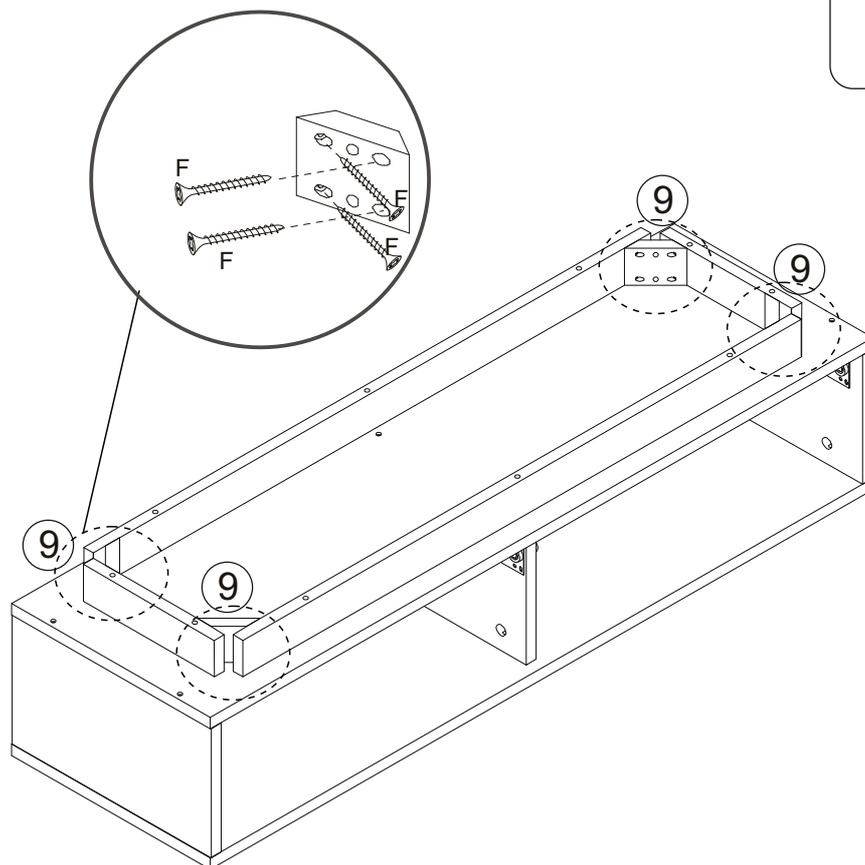


STEP 7

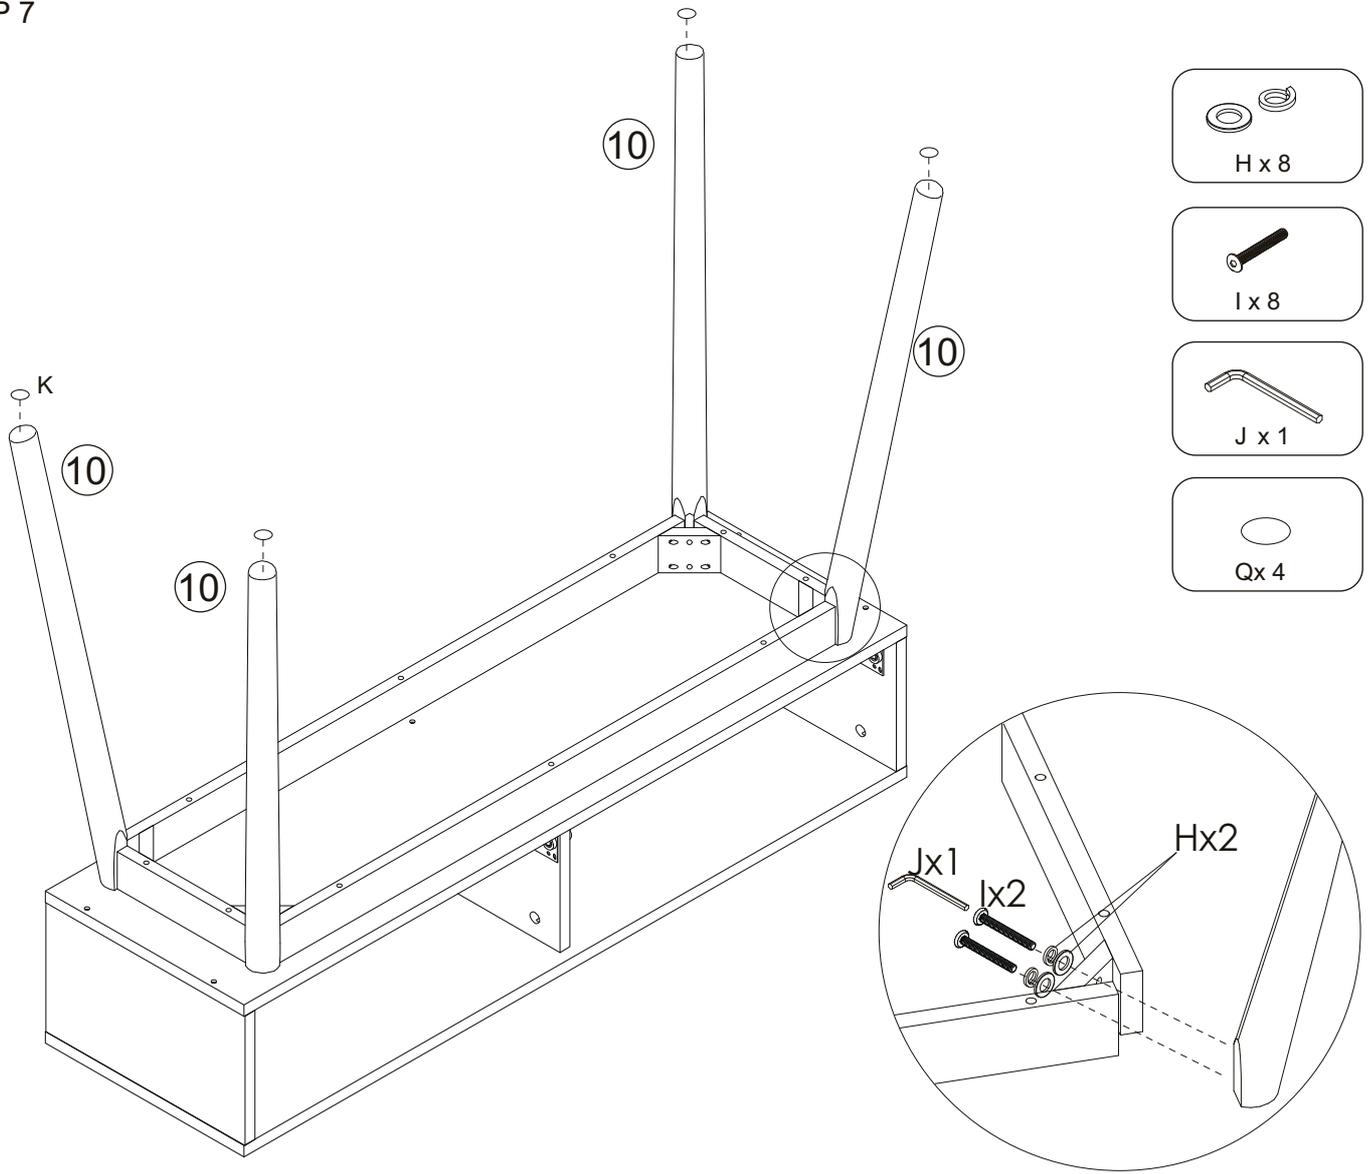


STEP 8


X 2

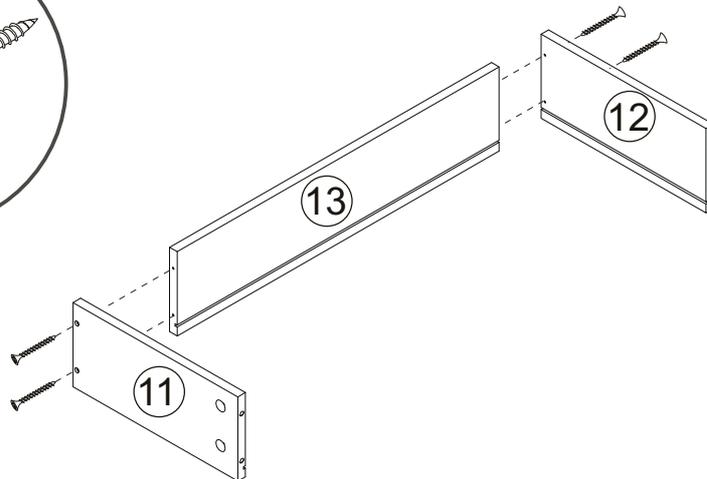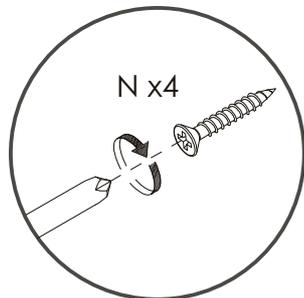







STEP 9

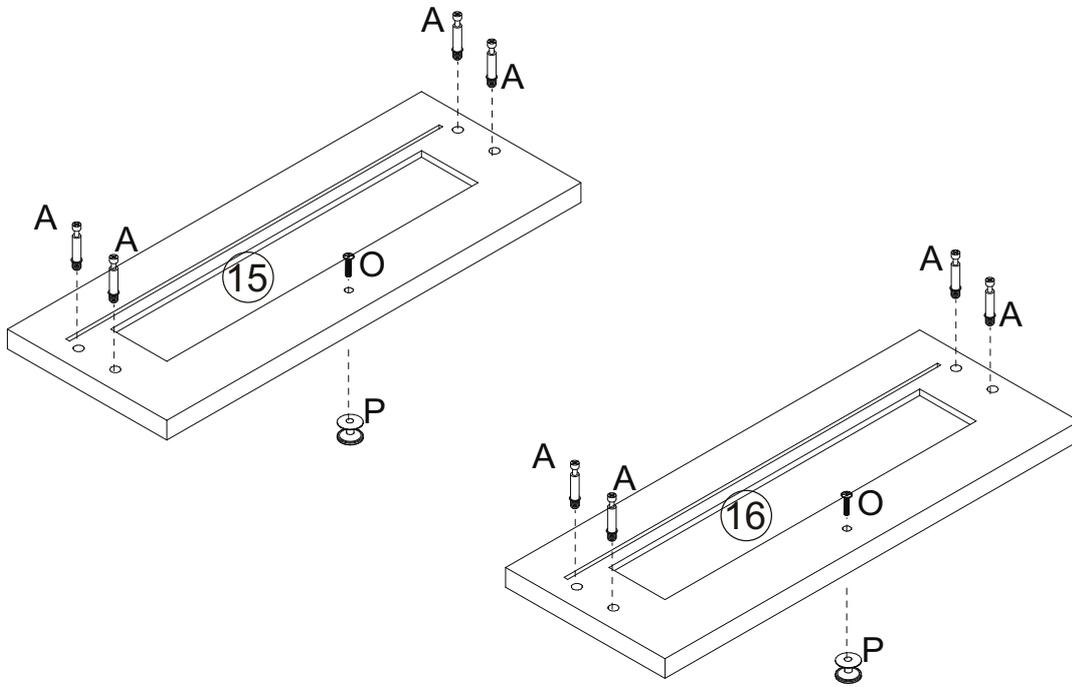





STEP 10

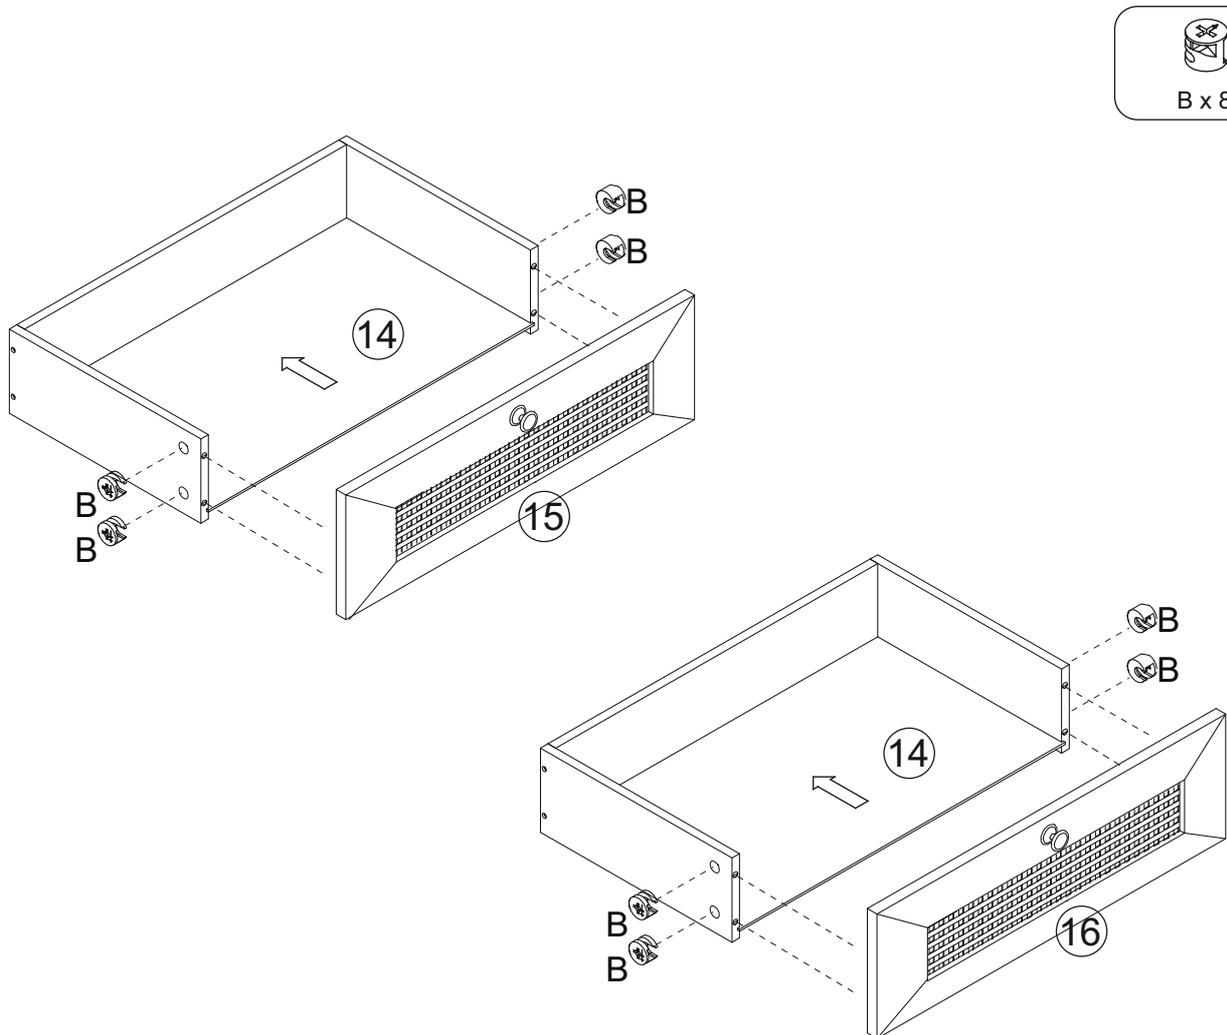


STEP 11

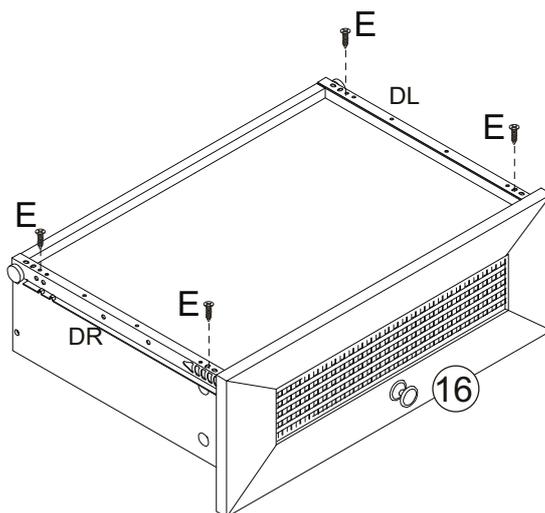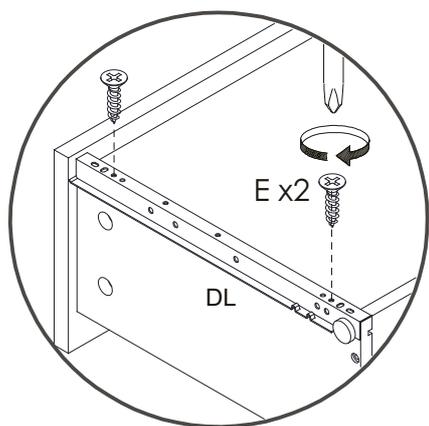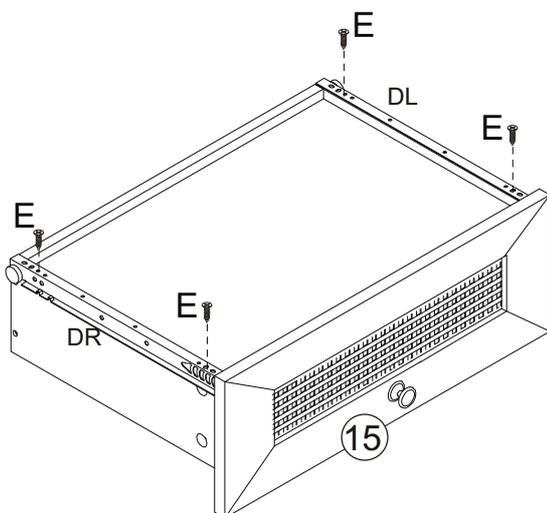

STEP 12

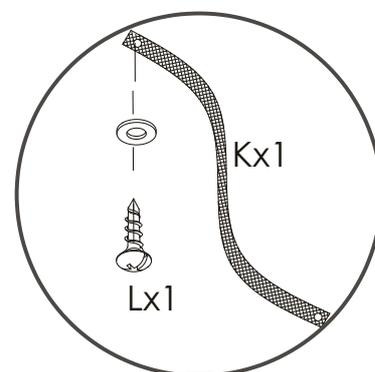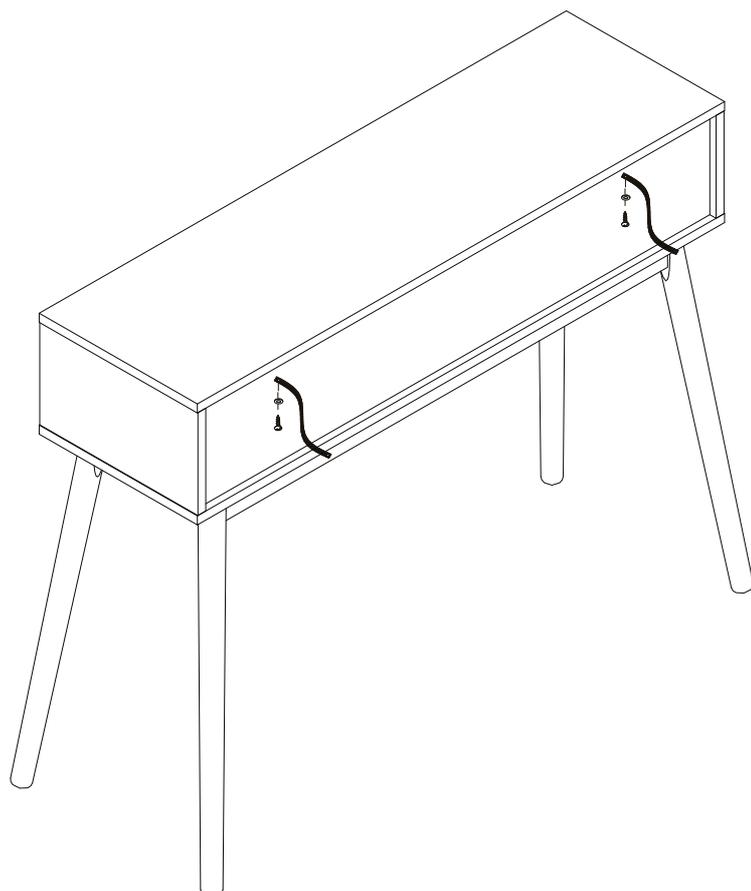

STEP 13

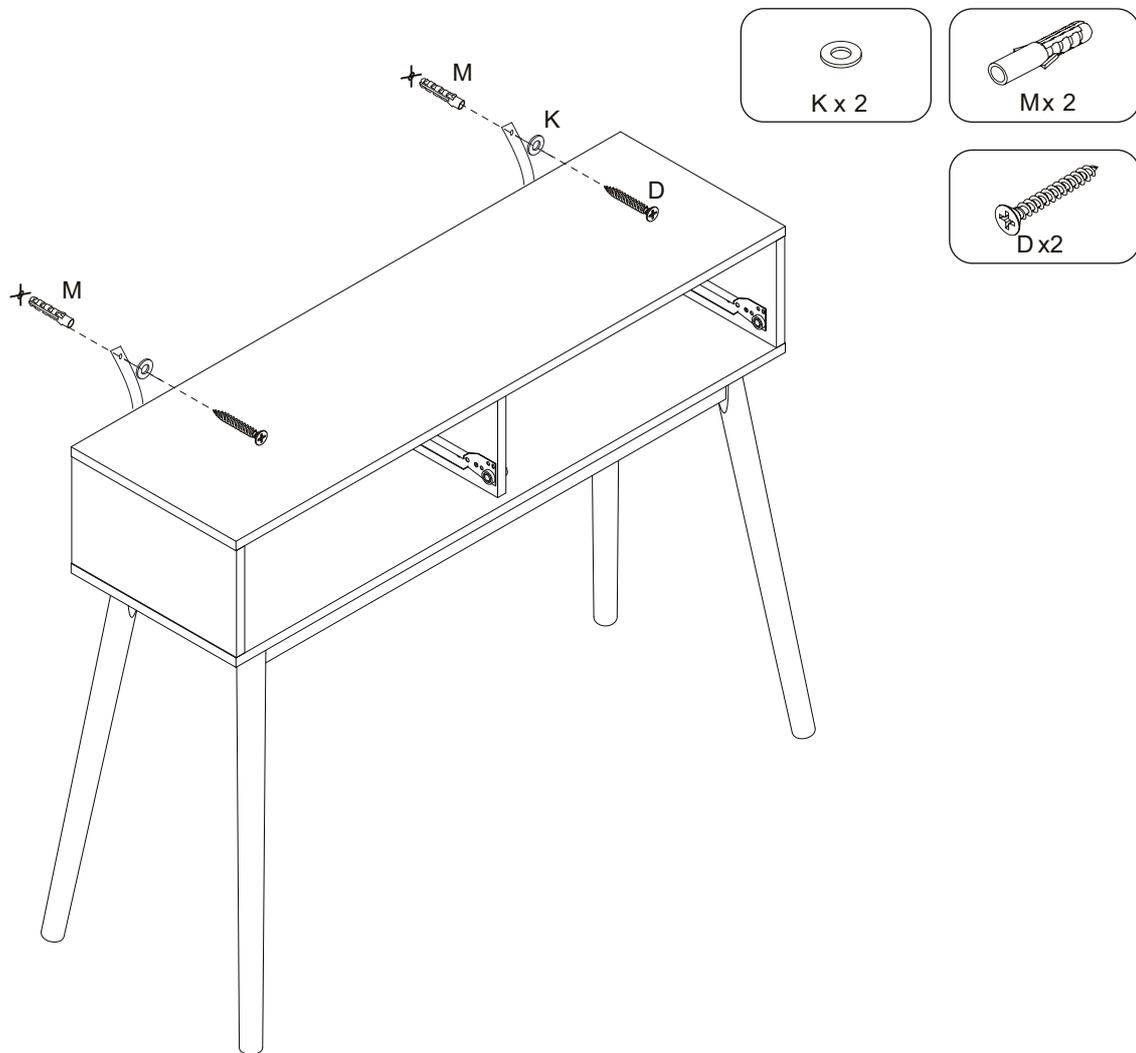

STEP 14

